Mamiya

PARTS CATALOG

M645 1000S

M645

MAMIYA AMERICA CORPORATION
8 Westchester Plaza, Elmsford, NY 10523 • 914-347-3300

3 ROLL FILM HOLDER
7 TECHNICAL BULLETIN

COUNTERMEASURE AGAINST PRESSURE MARK ON FILM

OUR REF. No. 645PRO 92-001

PURPOSE :

1) To protect a film from pressure mark which is impressed by the film wind-up roller (Pressure mark was impressed on Kodak Film Type VPS 220.)
2) To disuse adhesive for improving assembling work efficiency.

MODIFICATION :

1) To change the shape of wind-up roller and pressure plate.
2) To change fixing-up method to inserting from assembling.

RELATED MODELS : RZ67 (6x4.5), RB67 proS SD (6x7, 6x4.5)

IMPROVED PARTS : 1) P/No.5271 4172T2 ⇨ 5271 4172T3 : Film roller
" 41121 ⇨ " 41122 : Pressure plate
5272 41121 ⇨ 5272 41122 : Pressure plate (Type 220)

NOTE : 5271 4172T3 and 5271 41122 (5272 41122) are interchangeable between new and old parts when these parts are exchanged as a set.

2) P/No.5271 4149T2 ⇨ 5271 4149T3 : Roller
" 41731 ⇨ " 41732 : Shaft
" 41681 ⇨ " 41682 : Shaft

NOTE : 5271 4149T3, 5271 41732 and 5271 41682 are interchangeable between new and old parts when these parts are exchanged as a set.

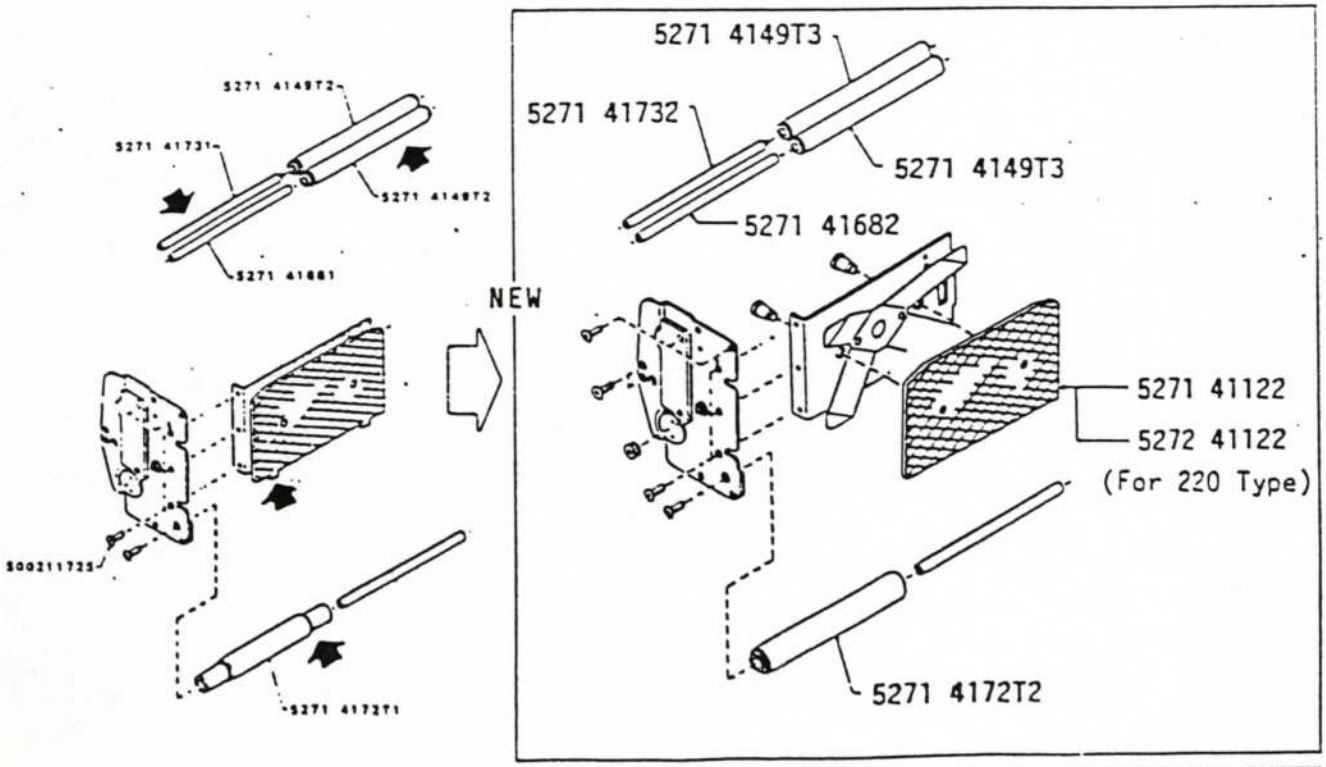

Hamiya HK

Detail "A" Left Panel Ass'y

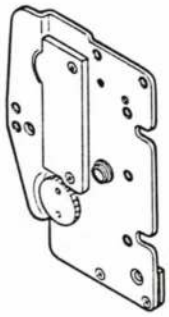

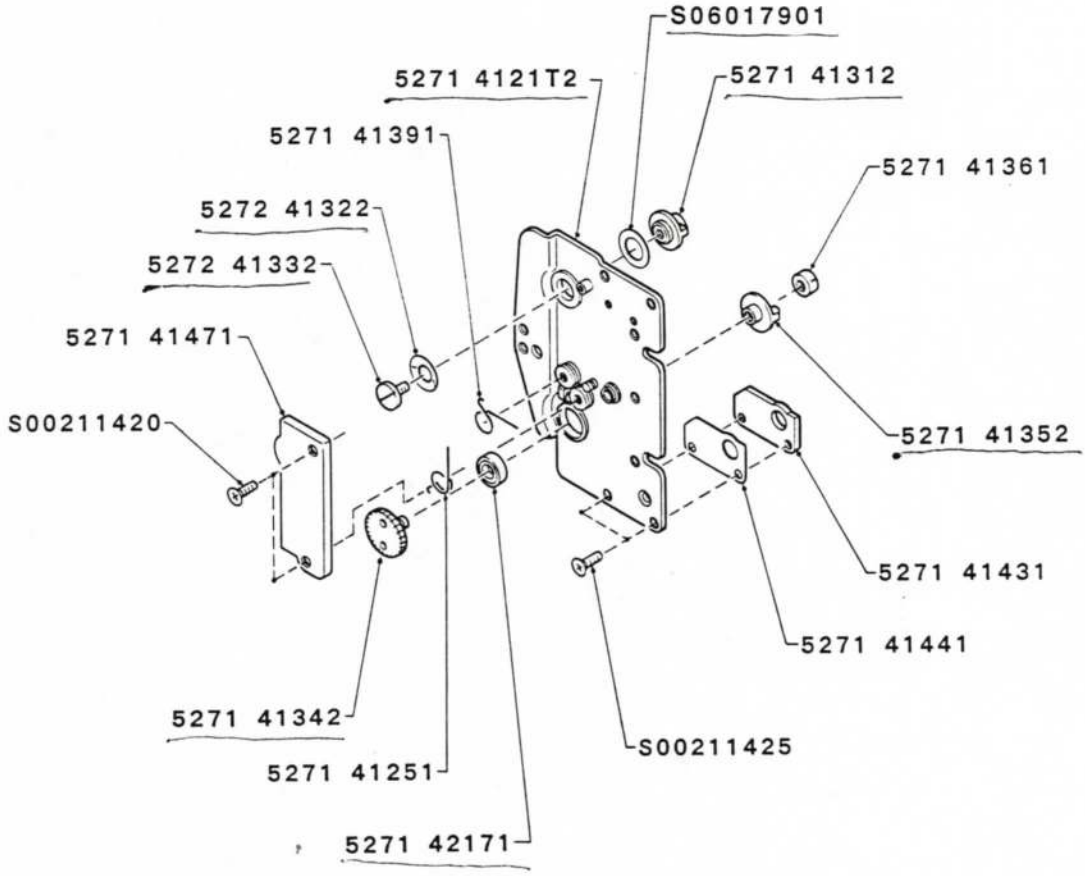

DETAIL A

REVISED MODIFICATION OF ROLL FILM INSERT

1/1 | 6

OUR REF.No SUPER 91-006

Ⓐ: Disengagement prevention of film insert knob

Material and shape of the knob have been changed.

New P/No.5271 41932. 5171 41922. 5171 41972. 5171 41982.

Ⓑ: To realize smooth film advancing, wind up torque is reduced.

P/No.5271 42171 : Bearing for gear shaft is adopted, and other relative parts are also changed.

Ⓐ, Ⓑ and Ⓓ: Interchangeability between new and old parts as independent ones

Not interchangeable.

addition

Ⓒ: To prevent abnormal over exposure, 220 type film is used.

P/No.5272 42161 : Sealing strip is added.

NOTE : Applied only to film insert for 220 type.

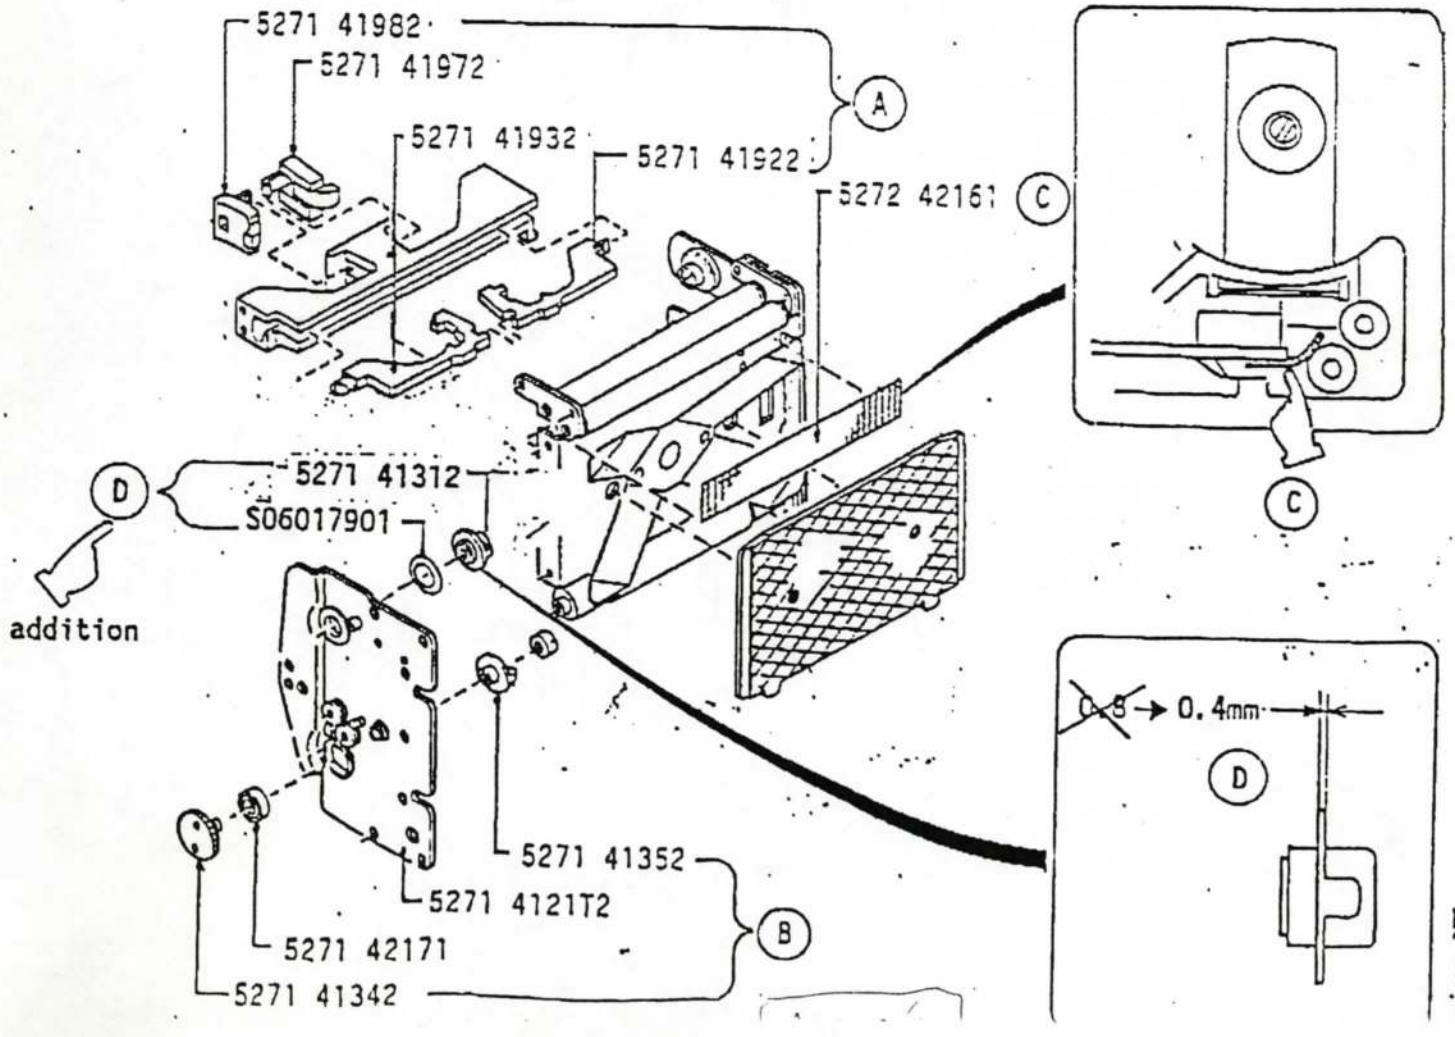

miya HK

7 TECHNICAL BULLETIN

	LIGHT LEAK BY ONE - SIDED FILM ADVANCING	1/1	87	13

OUR REF.NO.SUPER 89-010

When light leak owing to one - sided film advancing happens, replace the spring (B) with Ø 0.35mm spring.

P/NO. 5271 41852 : Spring

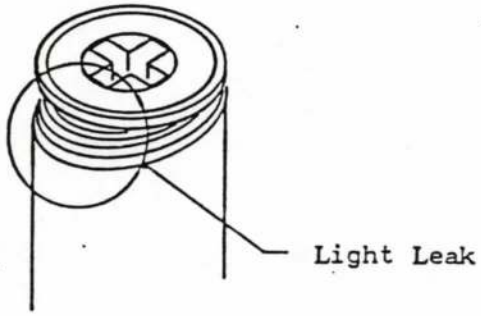

1. Repair step :

   1) Screw (A) is lock-tightened and it is rather hard to remove. So, have the tip of soldering iron (C) touch the friction wheel shaft (D) to heat up and remove the screw (A) .
   Then, take out the spring (B)

   2) After replacement of the spring, be sure to apply lock-tight when tightening the screw (A) .

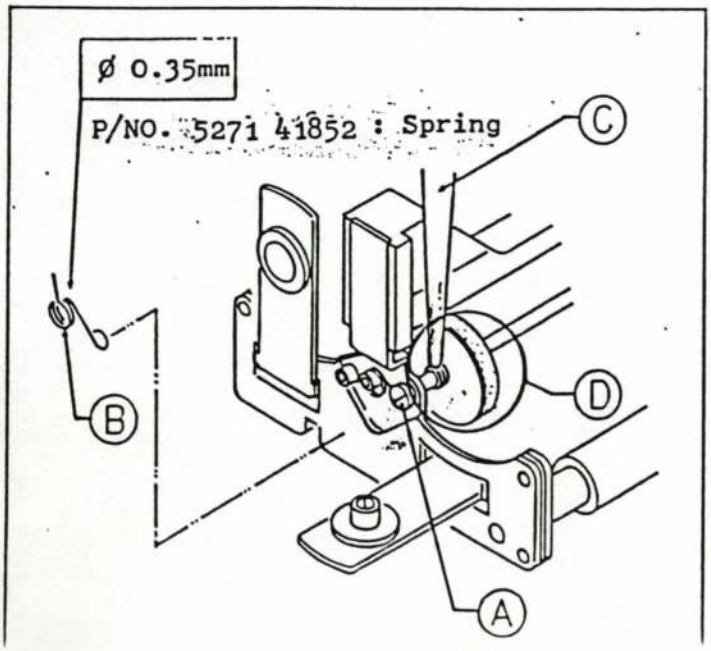

MODIFICATION DATE :
Since 1989 SEP Production.

amiya HK

7 TECHNICAL BULLETIN

	NEW GEAR	1/1	87	12

OUR REF.NO.SUPER 89-009

To secure proper engagement with the body or the holder, the shap of the gear is modified.

MODIFICATION DATE : Since 1989 SEP Production.

INTERCHANGEABILITY OF OLD PART VS.NEW PART (YES) . NO

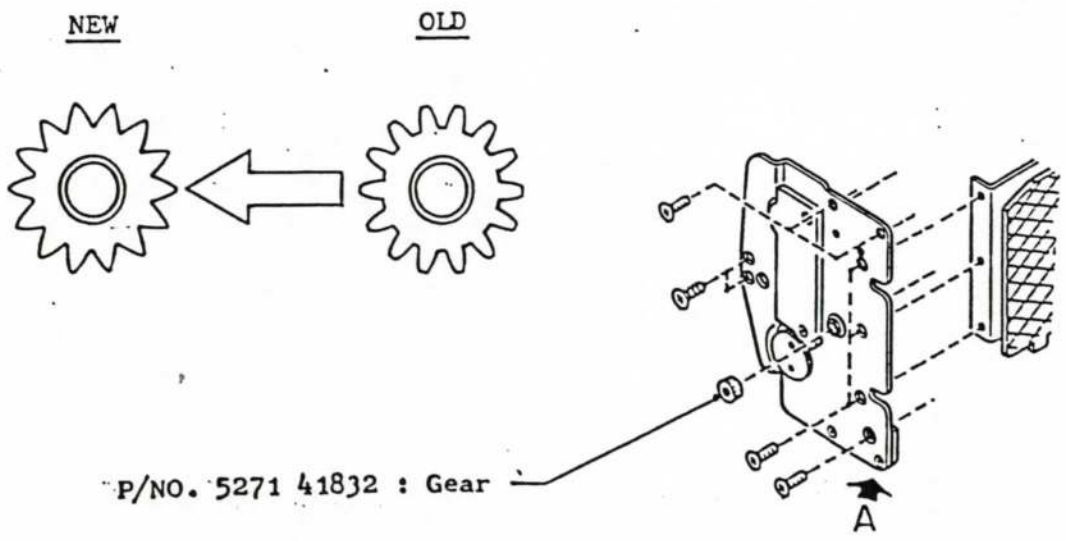

miya HK

USE OF PARTS CHANGE NOTICE (AUTO EXTENSION RING NO.3)

OUR REF.NO. 027

1. Purpose of improvement : Please improve Auto extension ring No.3-S for Auto extension ring No.3 because of shortage of our service stock.

2. Improving procedure : Out of stocks — Common use

SLS 5172S1	----------	SLS 5172S2
SLS 51911	----------	SLS 51912
SLS 5182T1	----------	SLS 5182T2
SLS 51711	----------	SLS 51712
SLS 51771	----------	SLS 51771
	------	SLS 51792
	------	PD1.4x2.5

: Replaceing with all seven parts is recommendable.

Type No.3

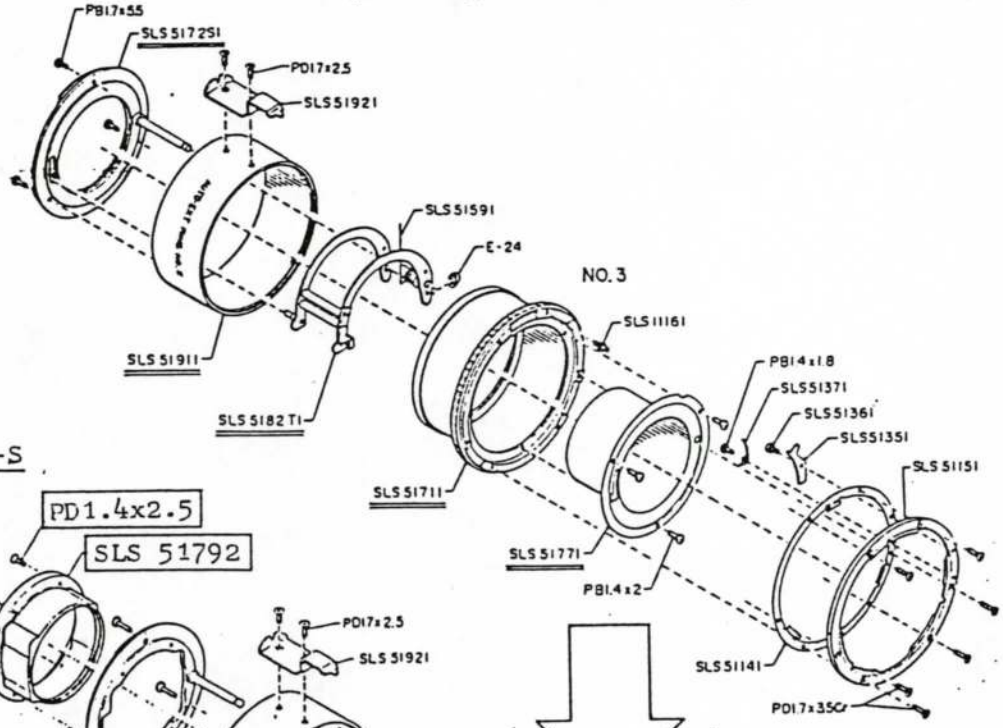

Type No.3-S

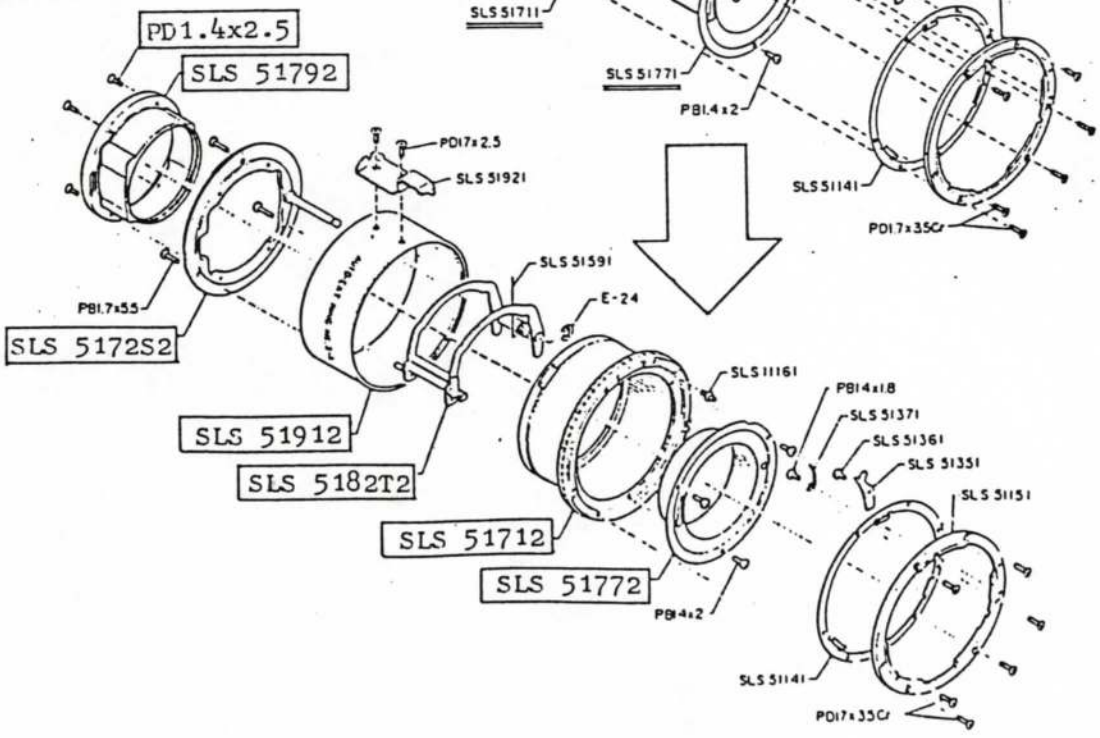

TECHNICAL BULLETIN

Mamiya CAMERA

ITEM: M645 **OUR REF. NO.** 080-M645-8 December 8 1980

New Dividing device

1. New SLS 1541T1 dividing device with two marks on each tooth has been adopted since December 1979.

2. Replacement of old dividing device with new one :

   Possible, but the adjustment is required in referring next page.

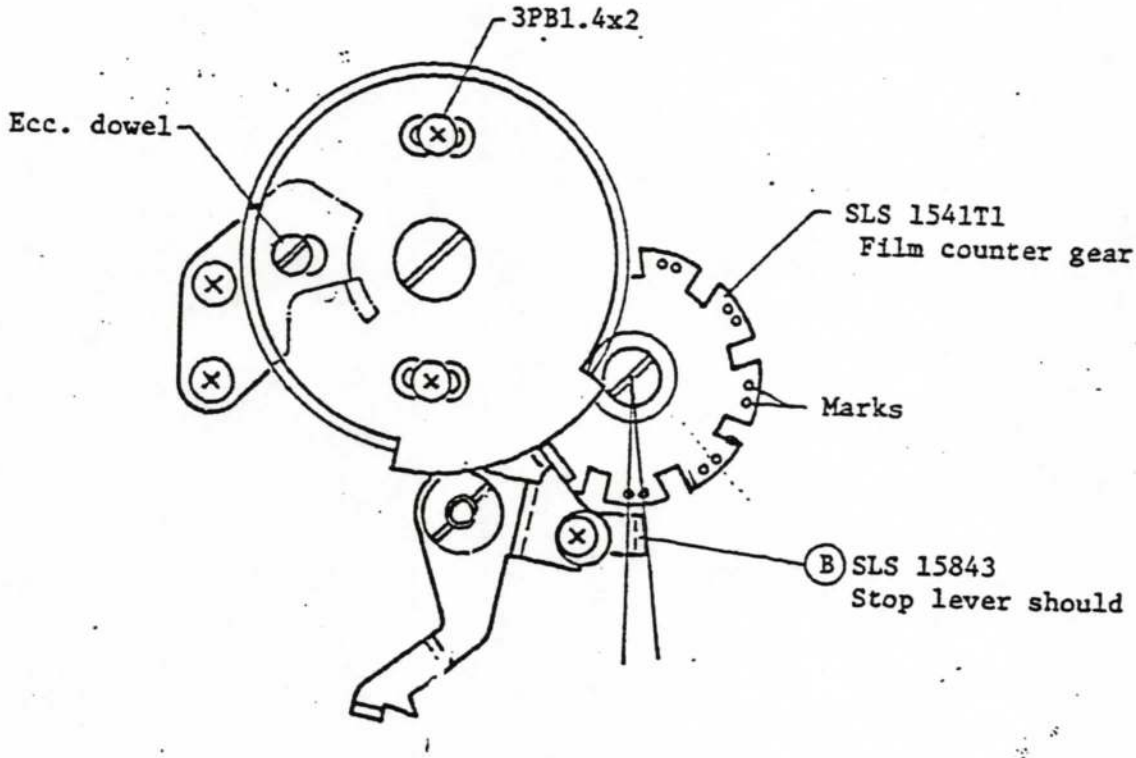

B. On the film surface

1) Set shutter speed dial to Bulb and the multiple exposure lever to the white dot and not with the word " Multi ".

2) Place the roll-film insert with a loaded film in the camera body and close the camera back cover.

3) Wind the film advance knob or crank until it stops.

4) While the mirror raising up by depressing the shutter release button, mark the actual picture frame by a ball-point pen through front of the camera body.

5) Repeat the above step 4 unit fifteen exposures are marked.

Note : You can see the film space problem on surface of the film which you marked on.

3. Check point and adjustment or repair

A. When releasing the shutter, the clearance between the SLS 1584T3 stop lever and the dividing device should be over 0.3mm as shown in Fig. 4.

If not, it will happen in both phenomenons Fig. 1 and Fig. 2.

* Readjust it by turning the SLS 15861 Ecc.collar.

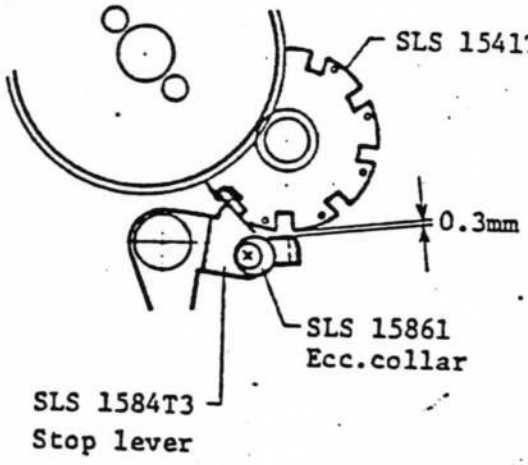

Fig. 4

B. Does the pawl of SLS 1584T3 stop lever get into the dividing device certainly with the film advance crank fully wound ? (Fig. 5 and Fig. 6)

If not, it will happen in the uneven wider space(Fig.1) sometimes ?

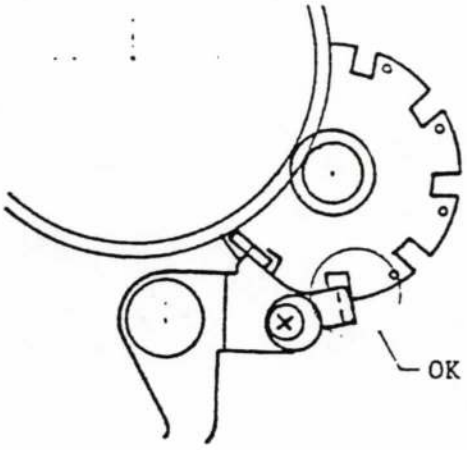

Fig. 5

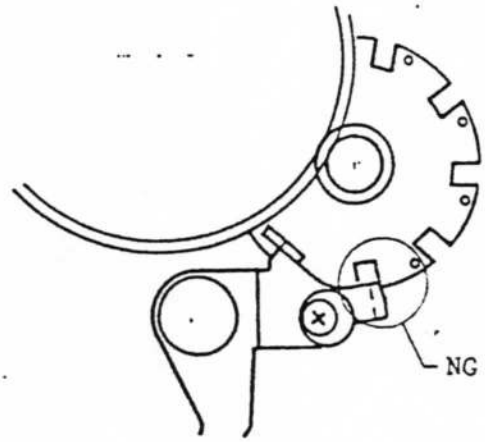

Fig. 6

* Replace the SLS 1584T3 or older one with the latest modified SLS 1584T4 stop lever.

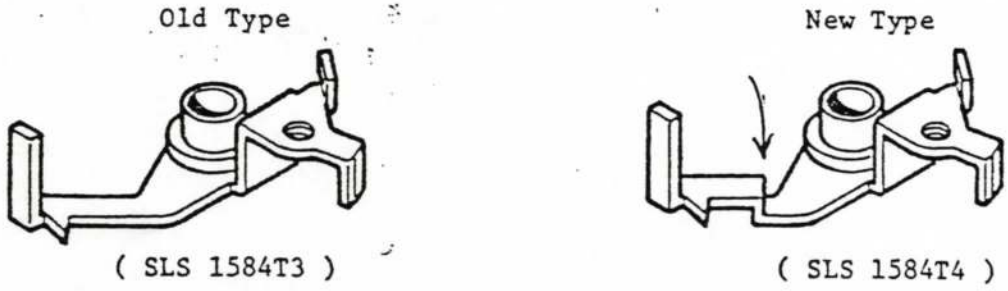

Fig. 7

C. Is the SLS 15811 F.clutch wheel stopped rotating by other end of pawl of the stop lever ? (Fig. 8)

Note : The pawl must be engaged with the SLS 15811 F.clutch wheel on way of film winding.

If the pawl is worn out, it will be able to stop rotation of the F.clutch wheel so that it will happen in uneven wider space

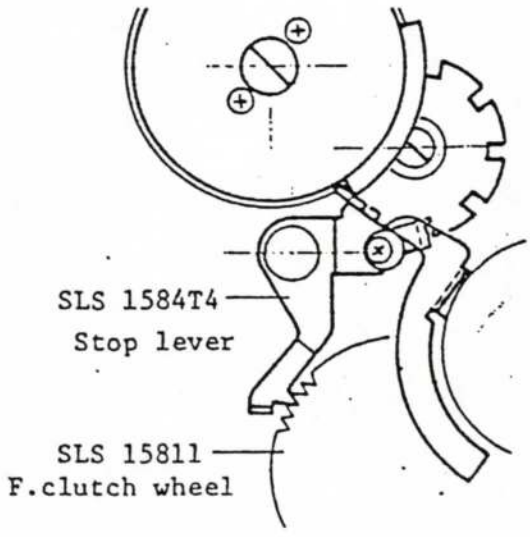

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 1142T2		1	Strap lug R	吊金具(右)
5200 11861	(SLS11861)	1	Catch plate	裏蓋掛板
5200 14711	(SLS14711)	1	F4 Gear	F4歯車
5200 14721	(SLS14721)	1	Shaft	F4歯車軸
5200 14731	(SLS14731)	1	Screw	F4歯車止ネジ
5200 1474T1	(SLS1474T1)	1	Advancing clutch	Fクラッチ板
5200 14811	(SLS14811)	1	F clutch wheel	Fクラッチ爪車
5200 14822	(SLS14822)	1	Spring	Fクラッチレバーバネ
5200 14832	(SLS14832)	1	Spring	Fクラッチ押しバネ
5200 14841	(SLS14841)	1	Gear	Fクラッチ送り歯車
5200 14851	(SLS14851)	1	F3 Gear	F3歯車
5200 14871	(SLS14871)	1	Spring washer	F3歯車摩擦バネ
5200 14881	(SLS14881)	1	Screw	F3歯車摩擦バネ止
5200 15442	(SLS15442)	1	Anchor	バネ掛
5200 2071T1	(SLS2071T1)	1	Synchro contact	X接片台
5200 20811	(SLS20811)	1	Insulation plate	上部絶縁板
5200 2082T1	(SLS2082T1)	2	Contact	上部電極
5200 20831	(SLS20831)	1	Contact base plate	上部電極台
5200 20841	(SLS20841)	1	Contact cover	上部電極カバー
5200 20851	(SLS20851)	4	Screw (PD1.7×2.5)	上部電極カバー止ネジ
5200 2086T1	(SLS2086T1)	1	Earth plate	上部電極アース片
5200 2087T1	(SLS2087T1)	1	Contact	EXT電極
5200 20921	(SLS20921)	4	Collar	上部接点ブッシュ
S00012050	(PB2×5)	4	Screw	吊金具止ネジ
S00111730	(3PB1.7×3)	2	Screw	DX基板止ネジ
S00211435	(PD1.4×3.5)	2	Screw	F3歯車止ネジ
00211718	(PD1.7×1.8)	3	Screw	裏蓋掛板止ネジ
S00211745	(PD1.7×4.5)	2	Screw	X接片台止ネジ

※ DETAIL F Winding Base Gear Ass'y.....Page 18 Common use M645 1000S

Remarks

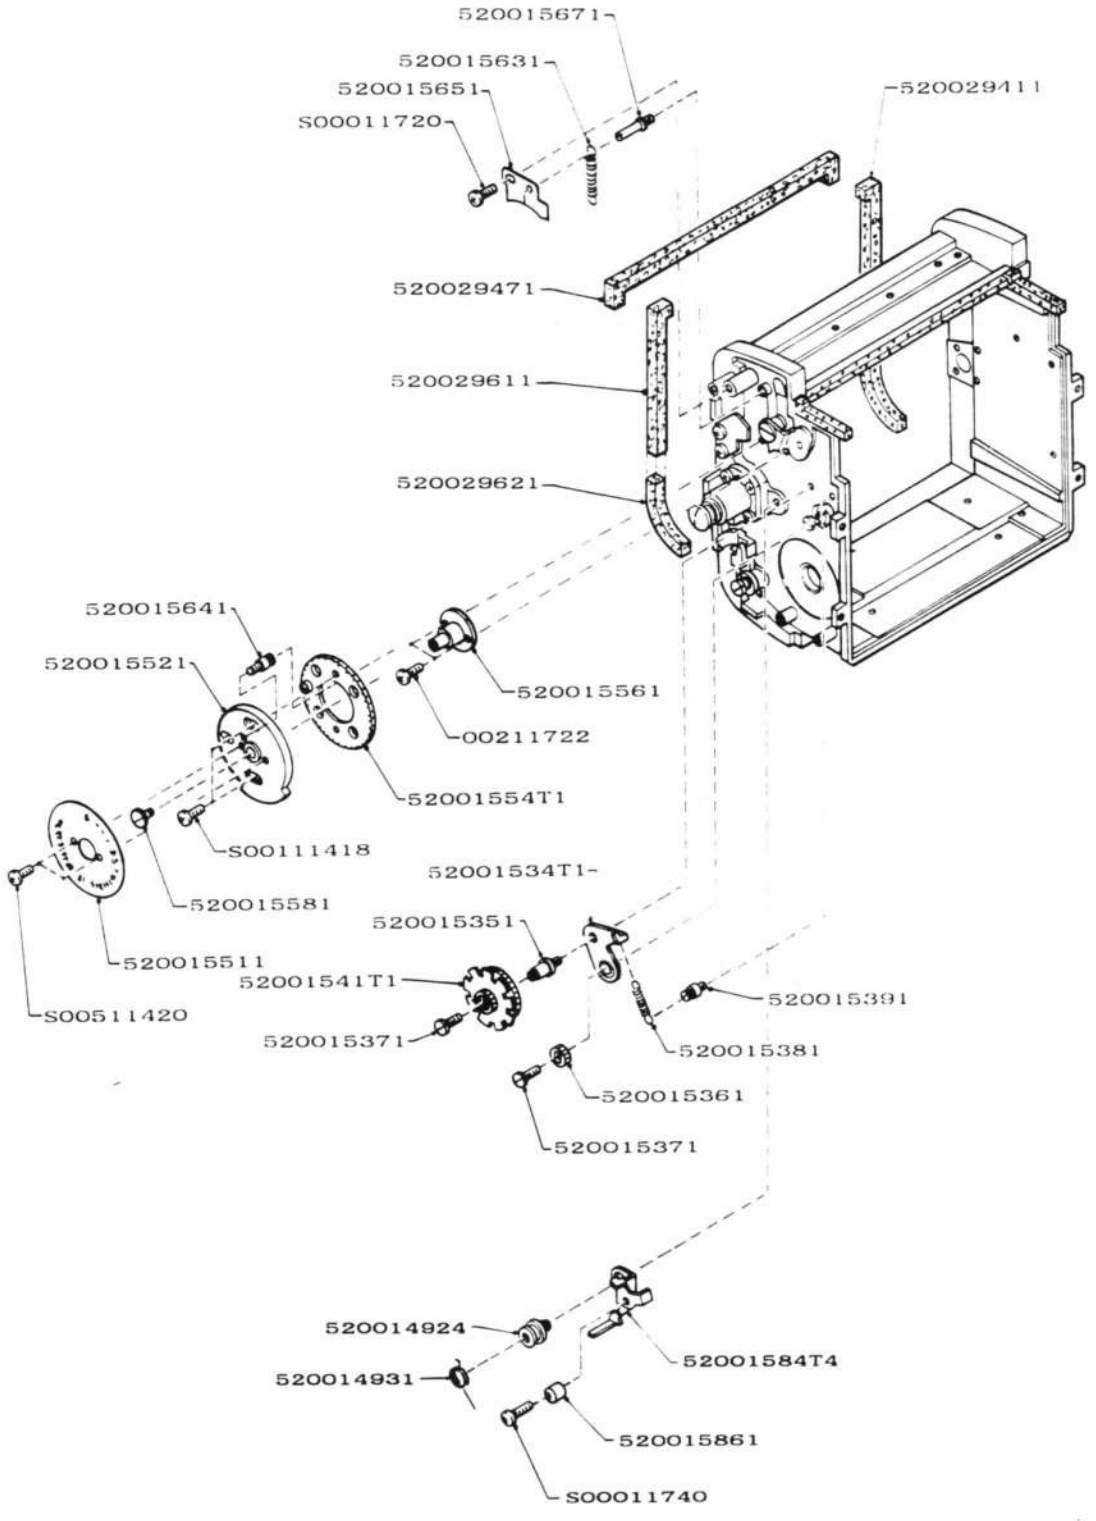
520015671
520015631
520015651
S00011720
520029411
520029471
520029611
520029621
520015641
520015521
520015561
00211722
520015541T1
S00111418
52001534T1
520015581
520015511
520015351
52001541T1
520015391
S00511420
520015371
520015381
520015361
520015371
520014924
52001584T4
520014931
520015861
S00011740

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 14924	(SLS14924)	1	Shaft	F止爪車
5200 14931	(SLS14931)	1	Spring	F止爪車バネ
5200 1534T1	(SLS1534T1)	1	Lever	C1歯車基板
5200 15351	(SLS15351)	1	Shaft	C1歯車基板軸
5200 15361	(SLS15361)	1	C2 Gear	C2歯車
5200 15371	(SLS15371)	2	Screw	止ネジ
5200 15381	(SLS15381)	1	Spring	C2歯車バネ
5200 15391	(SLS15391)	1	Anchor	C2歯車バネ掛
5200 1541T1	(SLS1541T1)	1	Counter dividing device	割出板
5200 15511	(SLS15511)	1	Counter	カウンター板
5200 15521	(SLS15521)	1	Counter base	カウンター台
5200 1554T1	(SLS1554T1)	1	Counter gear	カウンター歯車
5200 15561	(SLS15561)	1	Hub	カウンター軸
5200 15581	(SLS15581)	1	Screw	カウンター板止ネジ
5200 15631	(SLS15631)	1	Spring	カウンターバネ
5200 15641	(SLS15641)	1	Anchor	カウンターバネ掛
5200 15651	(SLS15651)	1	Indicator	指標
5200 15671	(SLS15671)	1	Guide screw	指標ガイド
5200 1584T4	(SLS1584T4)	1	Stop lever	割出爪
5200 15861	(SLS15861)	1	Collar	割出爪鉄
5200 29411	(SLS29411)	2	Sealing strip	Fボディ溝モルト
5200 29471	(SLS29471)	1	Sealing strip	Fボディモルト
5200 29611	(SLS29611)	1	Sealing strip	Fボディ溝モルト
5200 29621	(SLS29621)	1	Sealing strip	Fボディ溝モルト
S00011720	(PB1.7×2)	1	Screw	指標止ネジ
S00011740	(PB1.7×4)	1	Screw	割出爪止ネジ
S00111418	(3PB1.4×1.8)	2	Screw	C歯車止ネジ
00211722	(PD1.7×2.2)	2	Screw	カウンター軸止ネジ
S00511420	(3TB1.4×2)	2	Screw	カウンター板止ネジ

Remarks

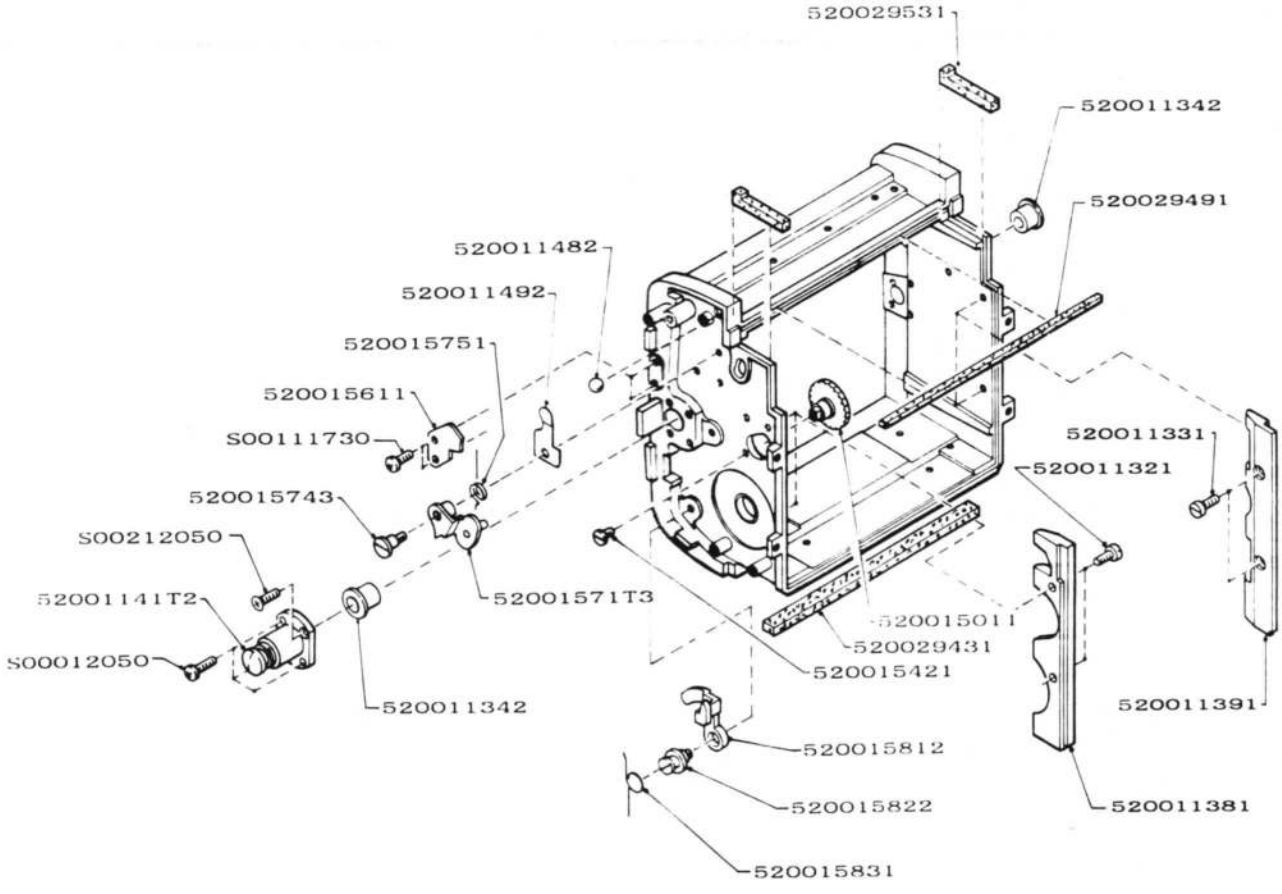
520029531
520011342
520029491
520011482
520011492
520015751
520015611
S00111730
520015743
S00212050
52001141T2
S00012050
520011342
52001571T3
520011331
520011321
520015011
520029431
520015421
520011391
520015812
520015822
520011381
520015831

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 11321	(SLS11321)	2	Guide screw L	Fホルダーガイド
5200 11331	(SLS11331)	2	Guide screw R	Fホルダーガイド
5200 11342	(SLS11342)	2	Lock guide	中枠ロックガイド
5200 11381	(SLS11381)	1	Guide plate L	F遮光枠(左)
5200 11391	(SLS11391)	1	Guide plate R	F遮光枠(右)
5200 1141T2		1	Strap lug L	吊金具(左)
5200 11482	(SLS11482)	1	Ball	F固定ボール
5200 11492	(SLS11492)	1	Leaf spring	F固定ボールバネ
5200 15011	(SLS15011)	1	C1 Gear	C1歯車
5200 15421	(SLS15421)	1	Screw	ストッパー
5200 15611	(SLS15611)	1	Stopper	カウンター戻し止
5200 1571T3	(SLS1571T3)	1	Change-over lever	カウンター切換板
5200 15743	(SLS15743)	1	Shoulder screw	カウンター切換板軸
5200 15751	(SLS15751)	1	Spring	カウンター切換板バネ
5200 15812	(SLS15812)	1	C release lever	カウンター解除レバー
5200 15822	(SLS15822)	1	Shoulder screw	解除レバー軸
5200 15831	(SLS15831)	1	Spring	解除レバーバネ
5200 29431	(SLS29431)	1	Sealing strip	Fボディ蝶番モルト
5200 29491	(SLS29491)	1	Sealing strip	Fボディ正面溝モルト
5200 29531	(SLS29531)	2	Sealing strip	ボディモルト(小)
S00012050	(PB2×5)	3	Screw	吊金具止ネジ
S00111730	(3PB1.7×3)	2	Screw	止ネジ
S00212050	(PD2×5)	1	Screw	吊金具止ネジ

Remarks

5200 16201 Side Panel R Ass'y

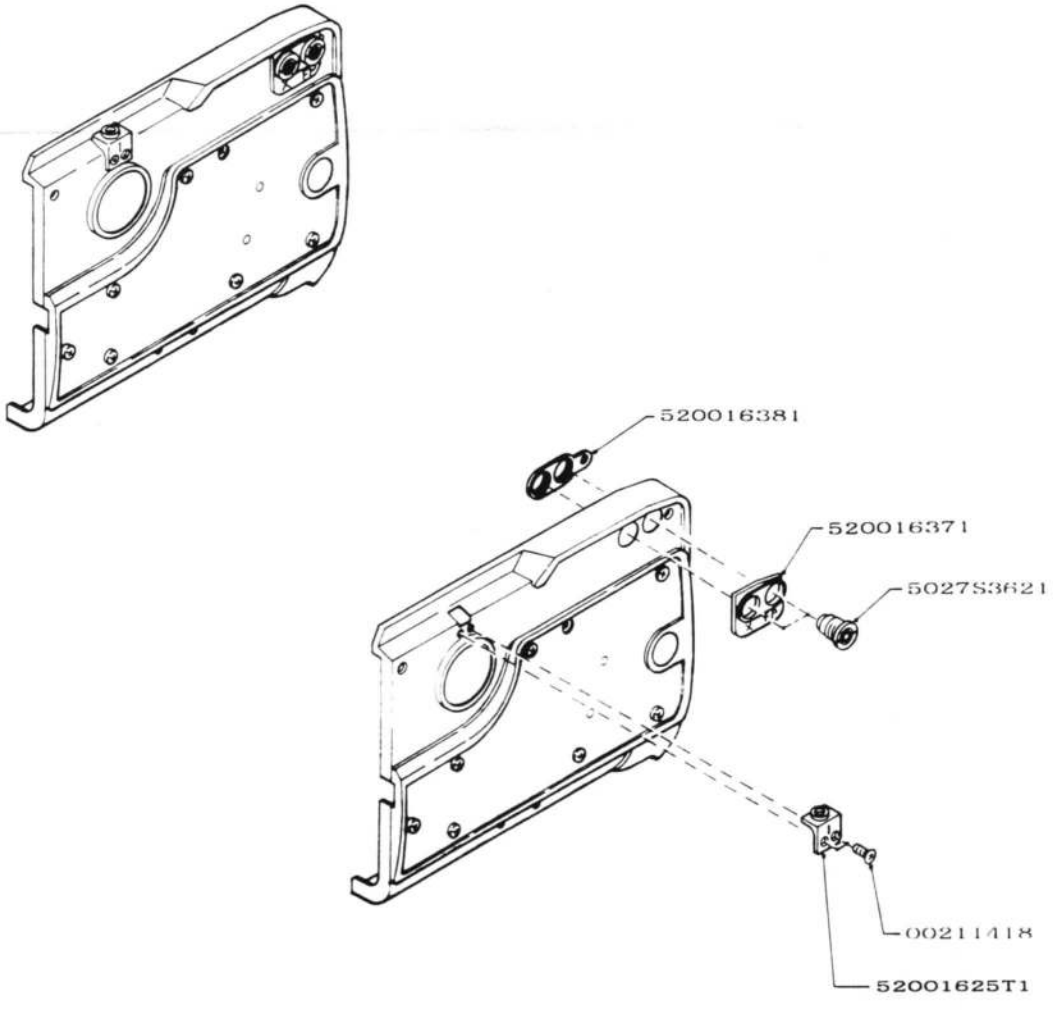

5200 16201

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 1625T1	(SLS1625T1)	1	Shutter speed indicator	スピード指標
5200 16371	(SLS16371)	1	Terminal base	シンクロ座
5200 16381	(SLS16381)	1	Terminal nut	シンクロ止ナット
5027 S3621	(LE103-362K2)	2	Flash terminal	シンクロAss'y
00211418	(PD1.4×1.8)	2	Screw	スピード指標止ネジ

Remarks

M645

Film Advance Knob

Film Advance Knob Ass'y.....40

M645

Film Advance Knob Ass'y

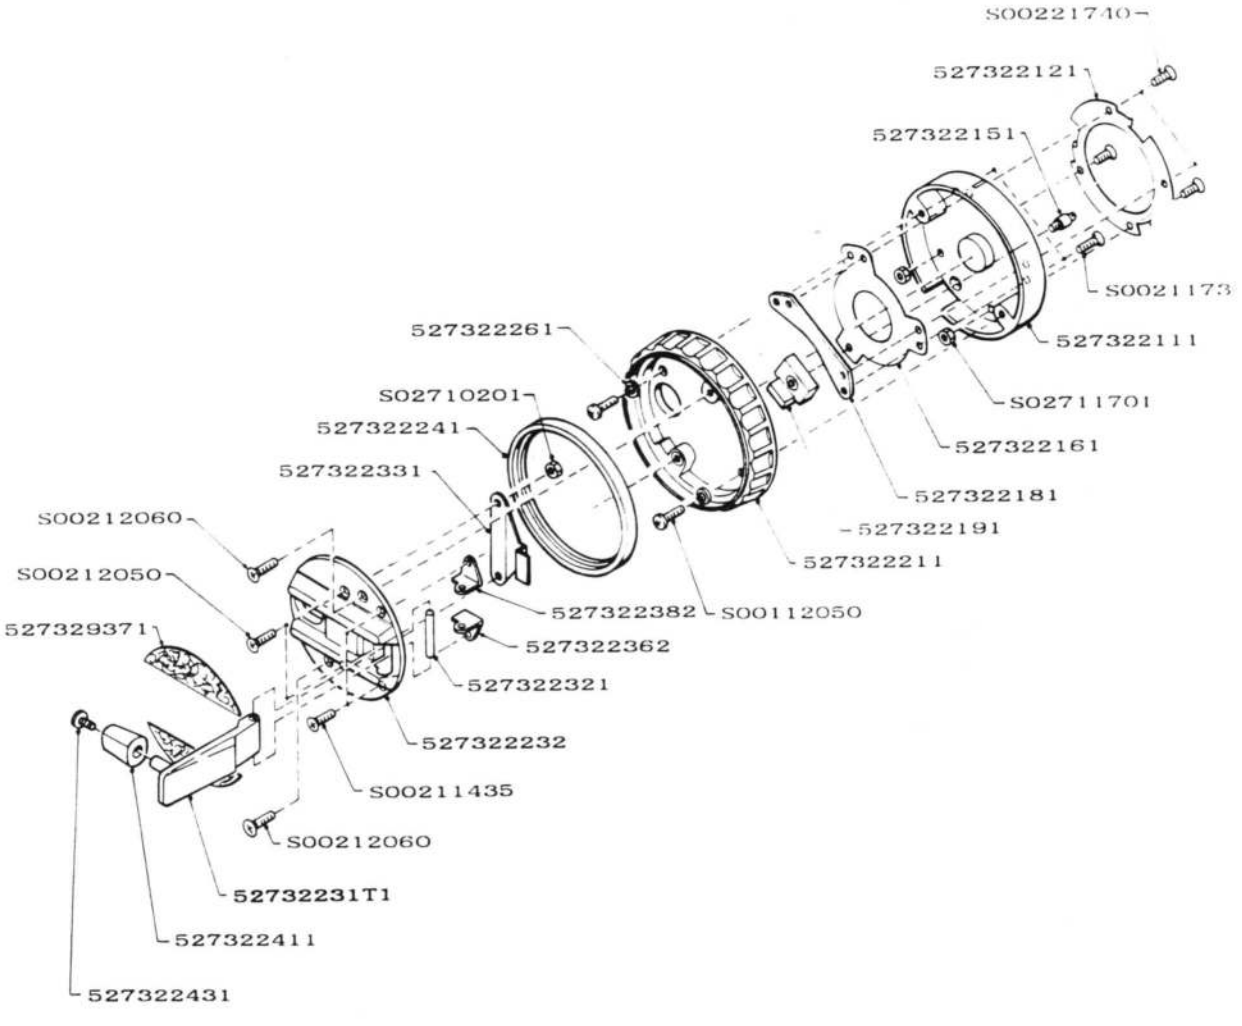

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5273 22111	(SLS22111)	1	Knob base ring	ノブ台
5273 22121	(SLS22121)	1	Bayonet disk	ノブバヨネ
5273 22151	(SLS22151)	1	Pin	ノブバヨネピン
5273 22161	(SLS22161)	1	Leaf spring	ノブバヨネピンバネ
5273 22181	(SLS22181)	1	Plate	ピンバネ止め板
5273 22191	(SLS22191)	1	Knob	つまみ
5273 22211	(SLS22211)	1	Film advance knob	巻上ノブ
5273 22232	(SLS22232)	1	Winding knob lid	巻上レバー台
5273 22241	(SLS22241)	1	Ring	巻上レバー台モール
5273 22261	(SLS22261)	2	Spring washer	バネ座金
5273 2231T1	(SLS2231S1)	1	Advance crank	巻上レバー
5273 22321	(SLS22321)	1	Shaft	巻上レバー軸
5273 22331	(SLS22331)	1	Leaf spring	巻上レバーバネ
5273 22362	(SLS22362)	1	Angle plate	巻上レバー軸押え
5273 22382	(SLS22382)	1	Angle plate	巻上レバー軸押え
5273 22411	(SLS22411)	1	Knob	巻上つまみ
5273 22431	(SLS22431)	1	Screw	巻上つまみ止ネジ
5273 29371	(SLS29371)	2	Leatherette	巻上ノブ革
S00211435	(PD1.4×3.5)	2	Screw	止ネジ
S00211730	(PD1.7×3)	2	Screw	止ネジ
S00221740	(PD1.7×4Cr)	4	Screw	ノブバヨネ止ネジ
S00212050	(PD2×5)	2	Screw	止ネジ
S00212060	(PD2×6)	2	Screw	巻上レバー台止ネジ
S00112050	(3PB2×5)	2	Screw	巻上ノブ止ネジ
S02711701	(N1.7)	2	Nut	ノブバヨネ止ナット
S02710201	(N2)	2	Nut	止ナット

Remarks

TECHNICAL BULLETIN

Mamiya CAMERA

ITEM: M645 **OUR REF. NO.** 080-M645-6 8 September 1980

* Replace the SLS 1584T3 or older one with the SLS 1584T4 new stop lever.

D. Is the pawl got in under the F. clutch wheel without engaging with the F.clutch wheel ? (Fig. 9)

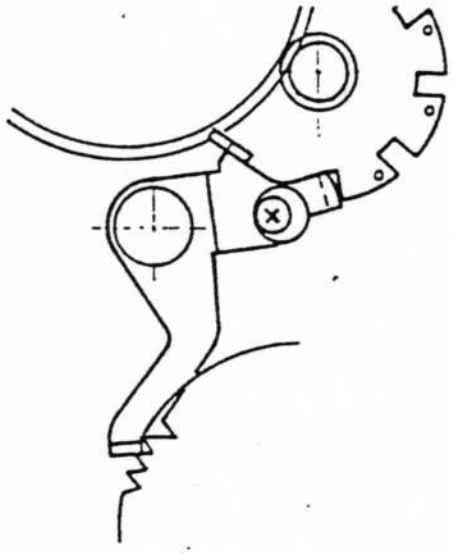

Fig. 9

It will happen in uneven wider space.

* Replace the SLS 1584T3 or older one with the SLS 1584T4 new stop lever.

E. Does not the stop lever get into the same dent of the SLS 1541T1 dividing device twice ?

1) F.clutch in the F.clutch wheel is smeared with some grease or oil ? (Fig.10)

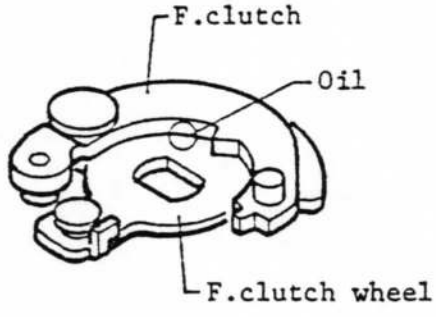

Fig.10

If so, the film will be not advanced properly because of dull function of the F.clutch, therefore the overlapped exposure frame will happen.

* Clean up the F.clutch and its room.

2) The film spool gear engages with the F.gear No.4 without being pushed aside or slipping ? (Fig.11)

If not, the overlapped exposure frame will happen because of worn-out bearing of the film spool gear shaft.

Novenber-1986

Mamiya CAMERA CO.,LTD.

Shin Meikei Bldg., 3-1, Otsuka 3-Chome, Bunkyo-ku, Tokyo 112, Japan.
Telex call No. 02923110 MAMIYA J
東　京：東京都文京区大塚3-3-1 新茗渓ビル ☎ 03-947-1111(〒112)
大　阪：大阪市西区南堀江1-10-11 西谷ビル ☎ 06-541-5631(〒550)
名古屋：名古屋市中区栄5-26-39 タカシマ名古屋ビル ☎ 052-263-0383(〒460)
福　岡：福岡市博多区博多駅前4-20-23 セントラルビル ☎ 092-451-1735(〒812)
仙　台：仙台市大町1-1-6 青葉ビル ☎0222-23-0114(〒980)
札　幌：札幌市北区北17条西4丁目 マミヤカメラビル ☎ 011-746-9201(〒001)
広　島：広島市中区大手町5-17-1 モリヤビル ☎ 082-249-6177(〒730)

d. Fix the new SP gear-shaft bearing on the plate by means of the SLS-54 calking tools. (Fig.12)

e. Apply a fine grease into the SP gear-shaft bearing.

f. Apply screw-lock tight slightly to threads of the take-up SP stud and SP gear nut and then tighten them.

B. Replacement of SLS 13332 winding stop interlocking-lever axis.

a. Drill to the SLS 13332 axis from its bottom face with 2.8φmm drill and pull out it carefully without bending or damaging the winding stop interlock lever. (Fig.11)

b. Fix the new axis on the winding base plate with the SLS-54 calking tools.

Note : Operation of the winding stop interlock lever must be smooth.

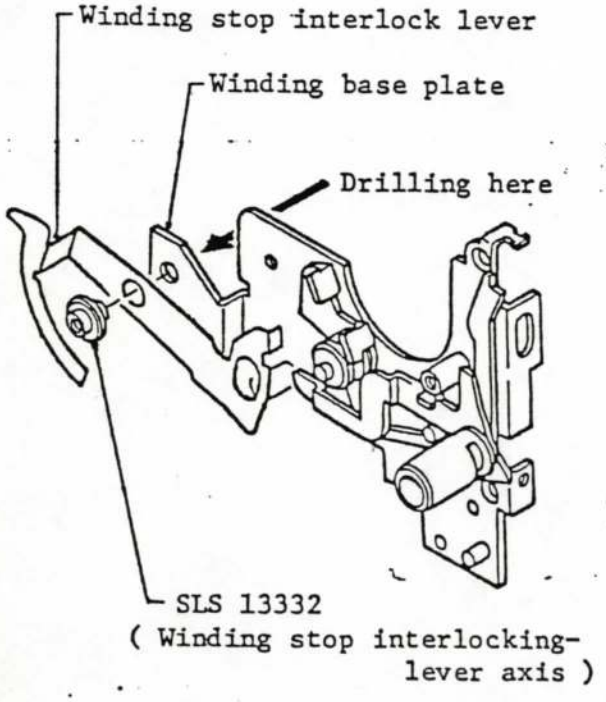

Fig.11

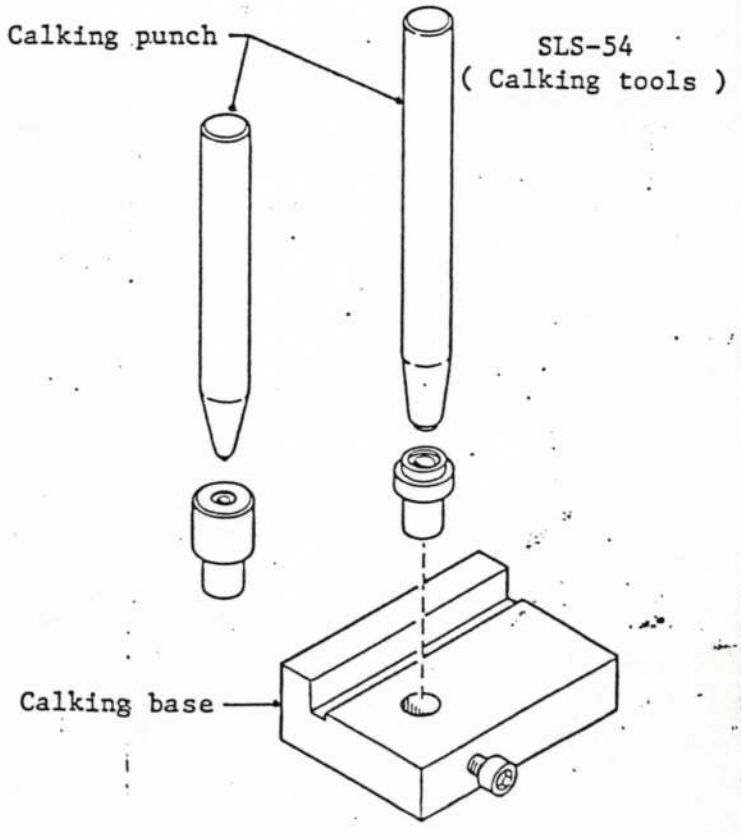

Fig.12

New SLS 15651 Indicator

1. Purpose of modification : For making easier work when assembling.

2. Date of modification : Oct. 1976

3. Replacement of the new part :

   New SLS 15651 into old body ..... Possible

   *Note : Part Number of the new part is still remain same as the old one.

Old Type

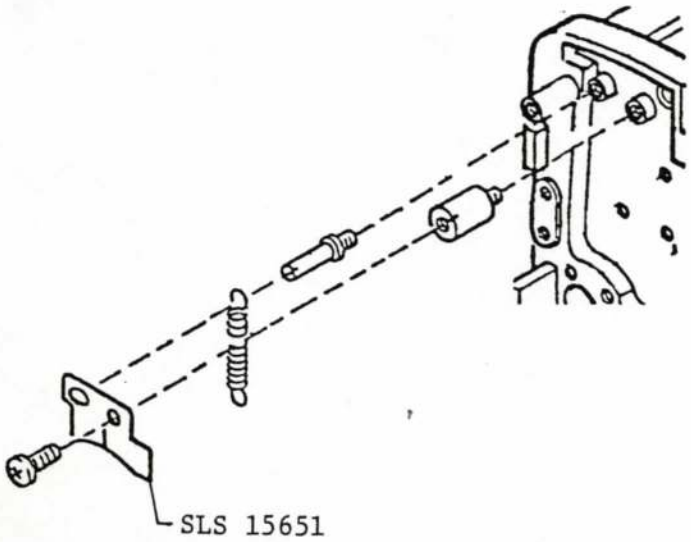

New Type

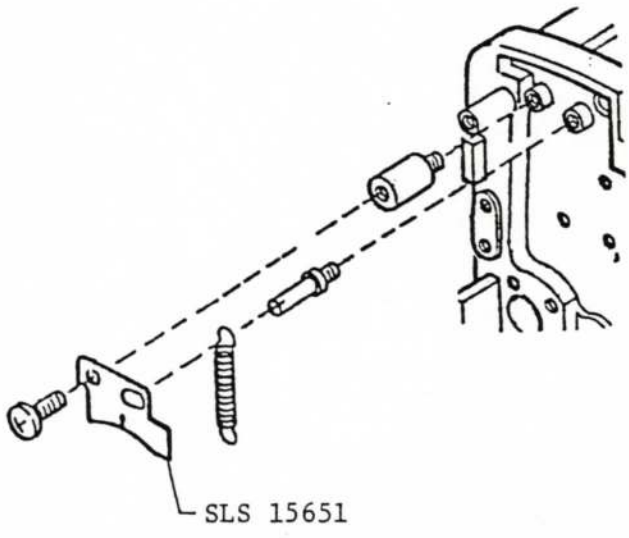

New SLS 1721T2 MS gear No.2

1. Purpose of modification : For preventing the play of both gears SLS 1721T1 MS gear No.2 and SLS 17131 M gear No.1, calking mode had been adopted for joining them.

2. Date of modification : March 1977

3. Replacement of new part :

New SLS 1721T2 MS gear No.2 into old body ..... Possible

Old Type

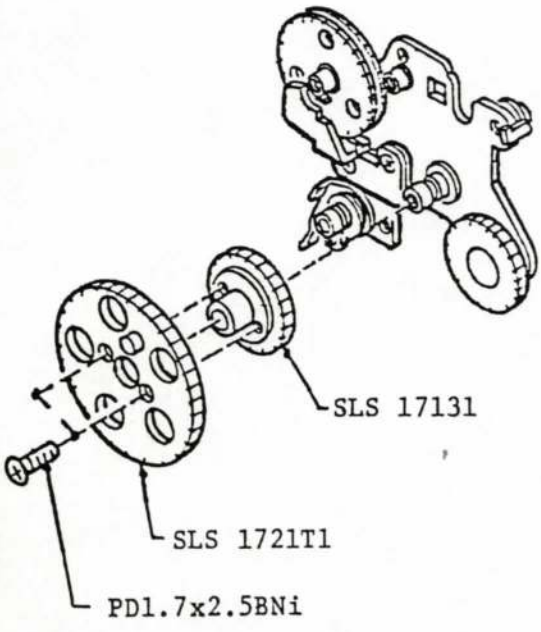

New Type

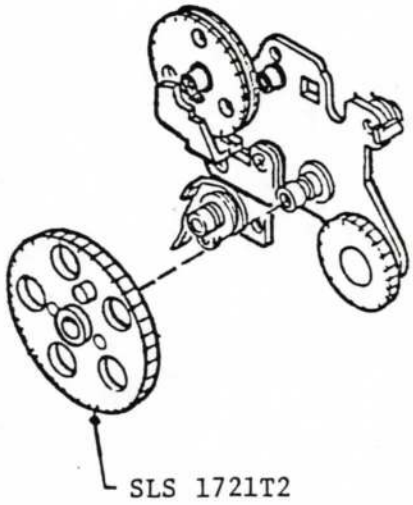

New shape refl. abs. leatherette (SLS 29152)

1. Purpose of modification ; To be liable to turn up the corners of the leatherette, changed its material and shape.

2. Date of modification : Dec. 1977

3. Replacement of new part :

1). New SLS 29152 refl. abs. leatherette into the old body....

.....Possible

Old Type

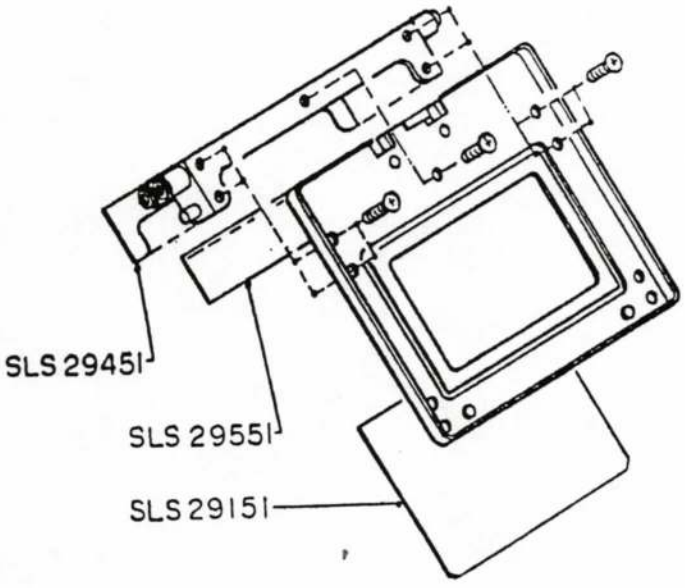

New Type

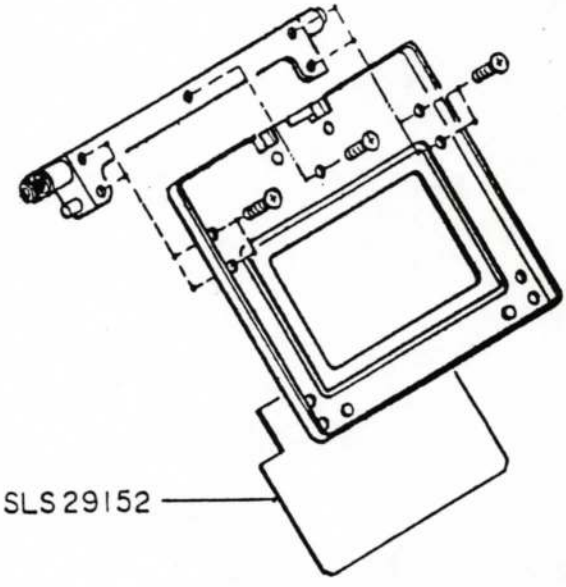

New SLS 15103 change-over lever with the modified shaft

1. Purpose of modification : For common use with the M645 J.

2. Date of modification : Feb. 1979

3. Replacement of new part :

New SLS 15103 change-over lever into old body..... Possible

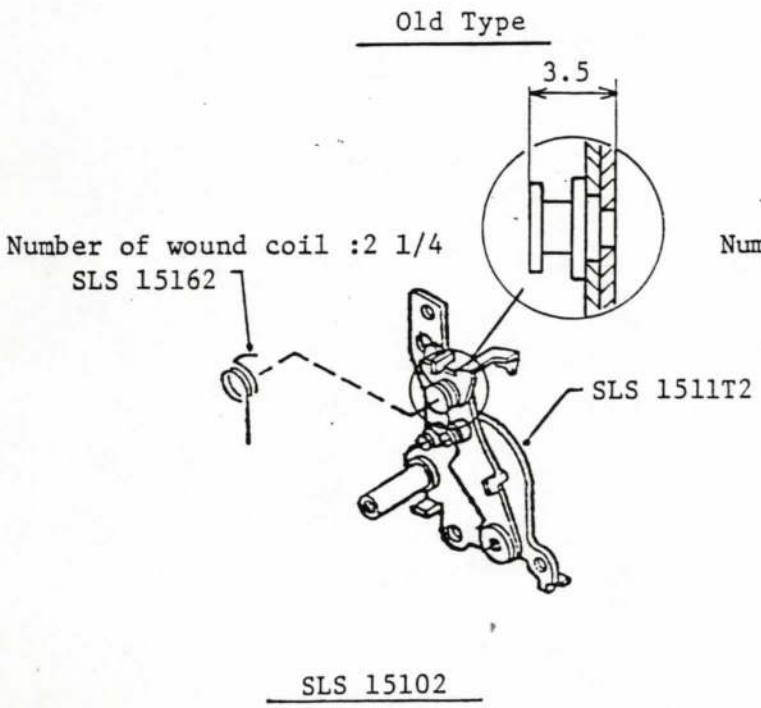

SLS 15102

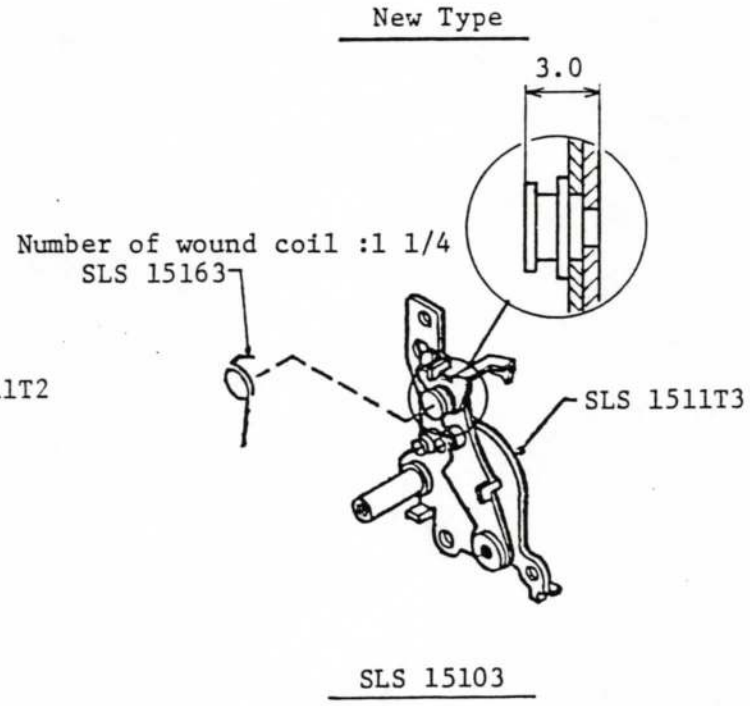

SLS 15103

New 1st curtain start latch

1. Purpose of modification : As the SLS 1741T2 1st curtain start latch is liable to run on the stopper of the SLS 1731T1 gear after long time use, the 1st curtain start latch was modified and consequently its relative parts were also modified as shoun in drawing below.

2. Date of modification : Feb. 1979

3. Replace the old and new parts :

Replace the old parts with the new parts in set..... Possible.

Old Type

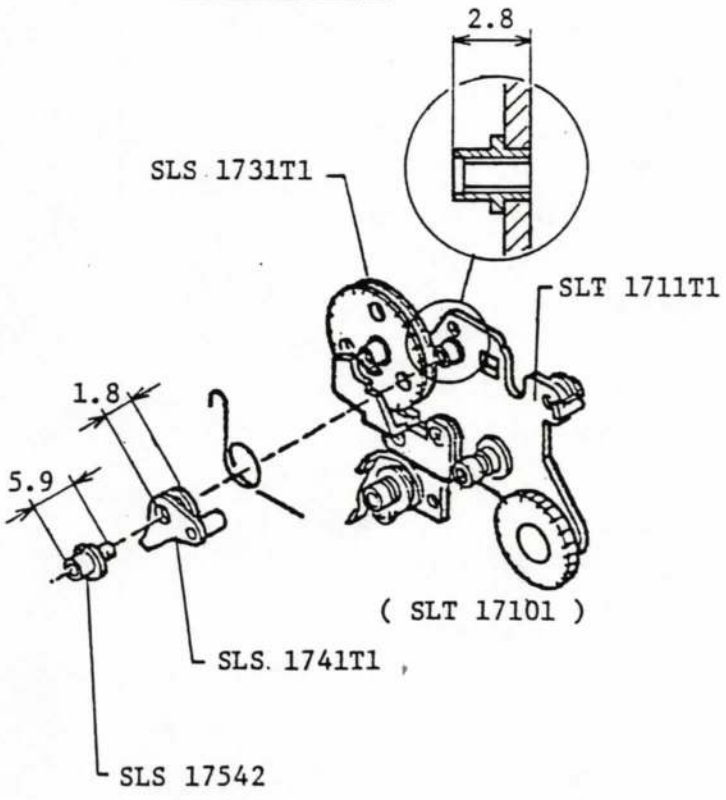

New Type

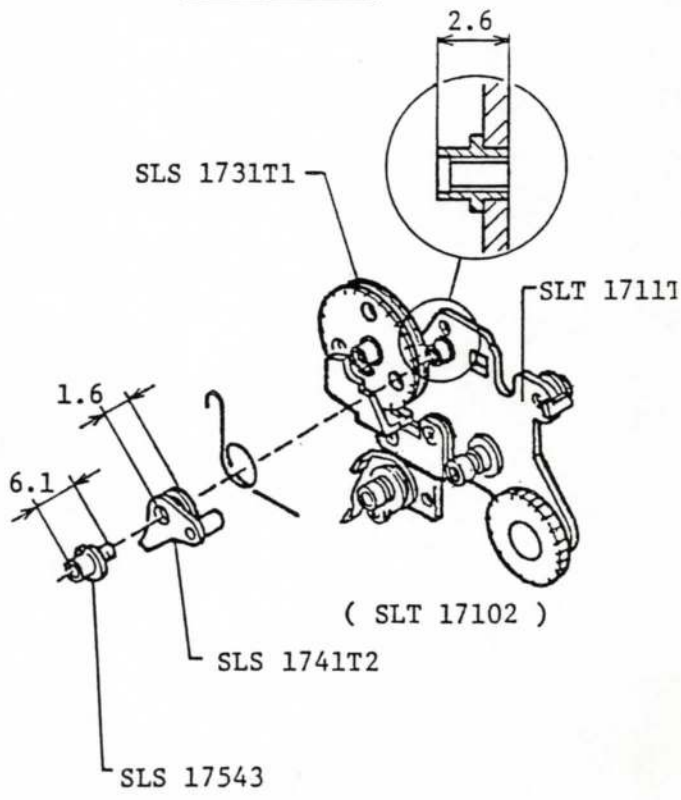

New SLS 1391S2 clutch stopper

1. Purpose of modification : For common use with the M645J.

2. Date of modification : Feb. 1979

3. Replacement of new part :

   1) New SLS 1391S2 clutch stopper into the old SLS 13102 winding base..... Impossible

Old Type

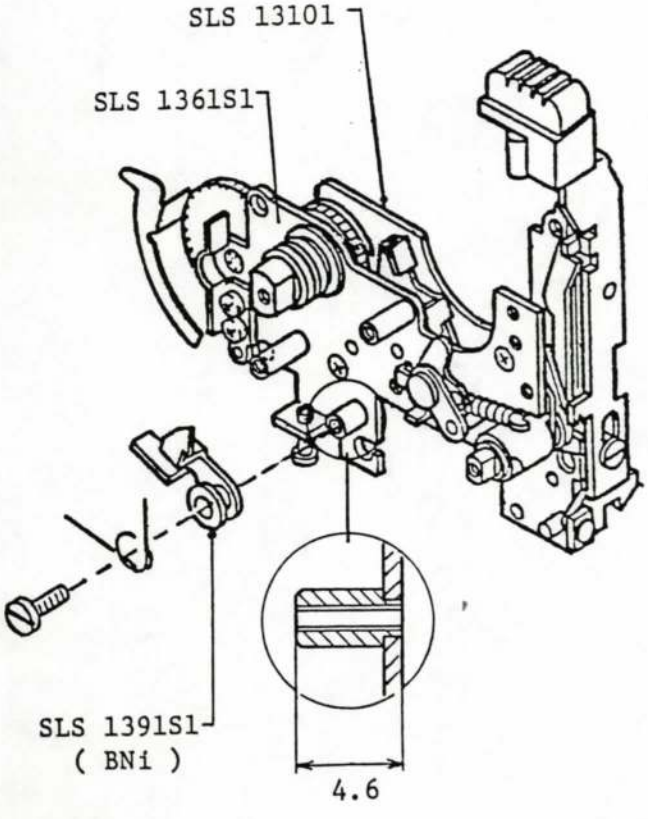

New Type

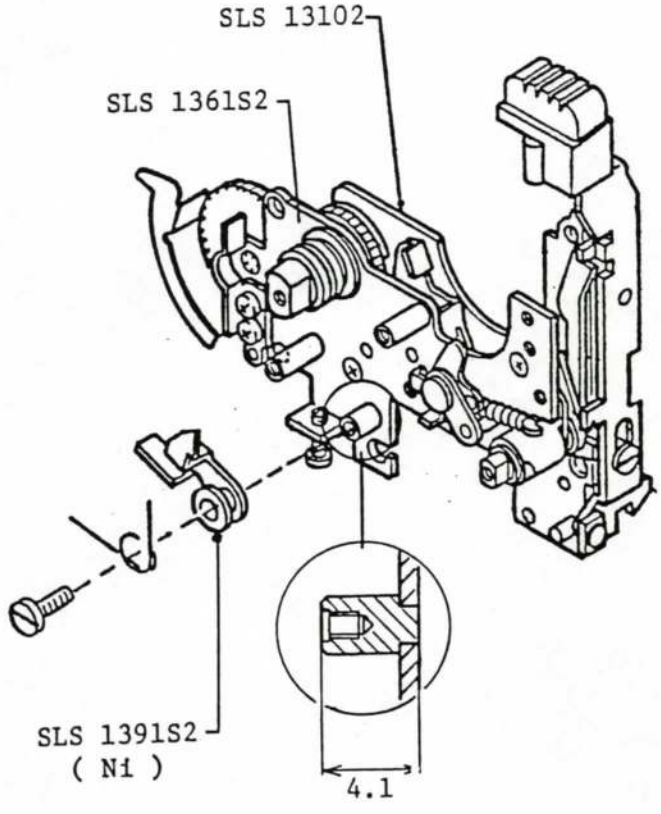

Changing the sealing strip from SLS 29511 to the SLS 29491

1. Purpose of modification : For operator convenience at assembly line.

2. Date of modification : May 1979

Old Type

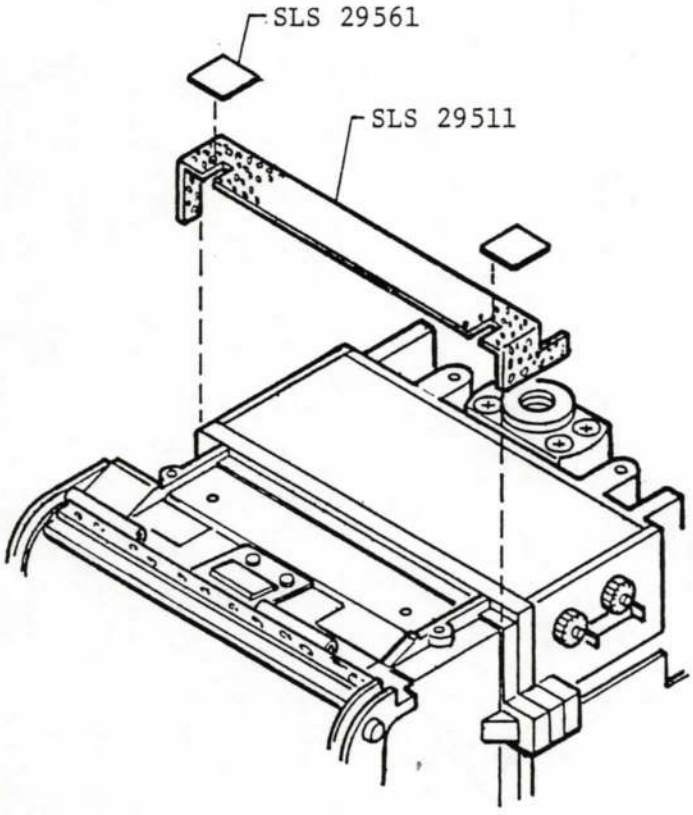

New Type

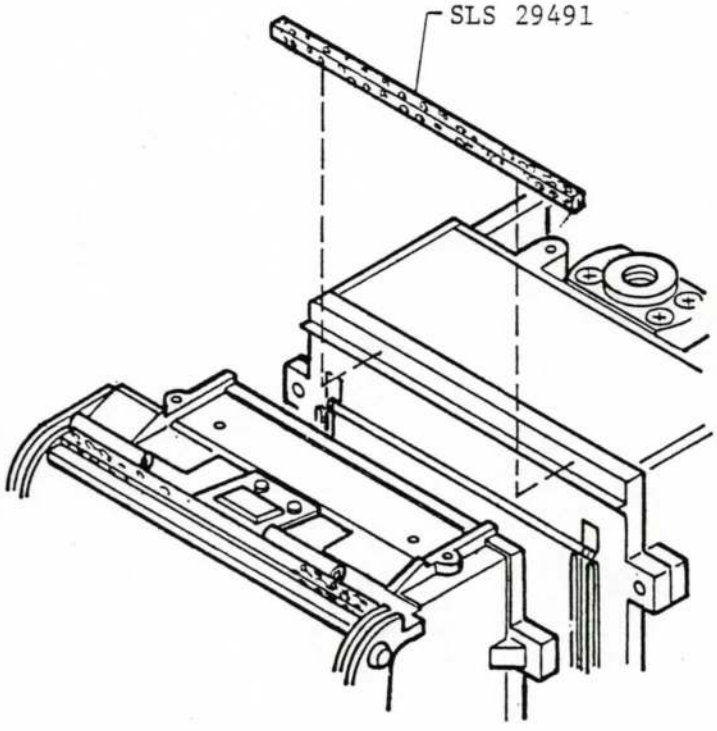

Change of fixing screw for SLS 11621 and SLS 11631 latch

1. Purpose of modification : As the hole of the SLS 11621 and SLS 11631 latch has been changed from countersink to straight, its fixing screw has been also changed to the PB1.7x4Cr screw.

2. Date of modification : Aug. 1979

3. Replacement of old and new parts : Possible

Old Type

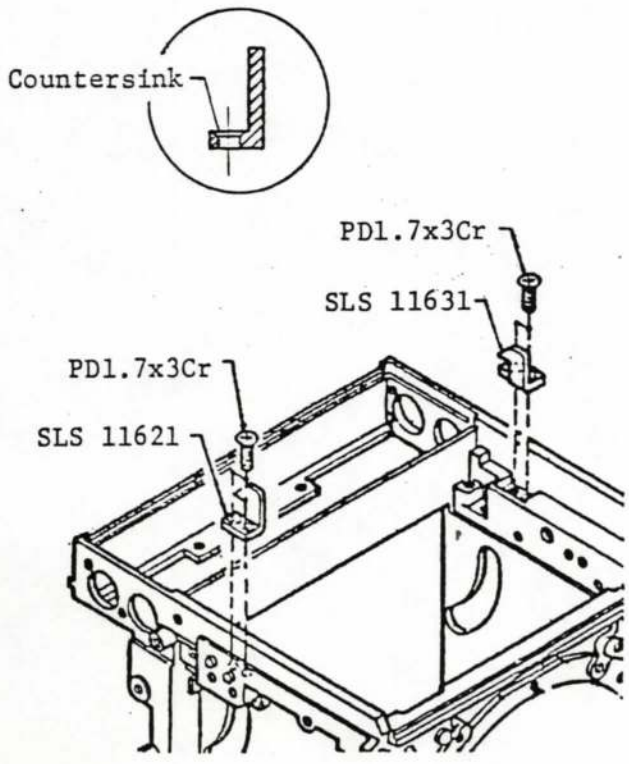

New Type

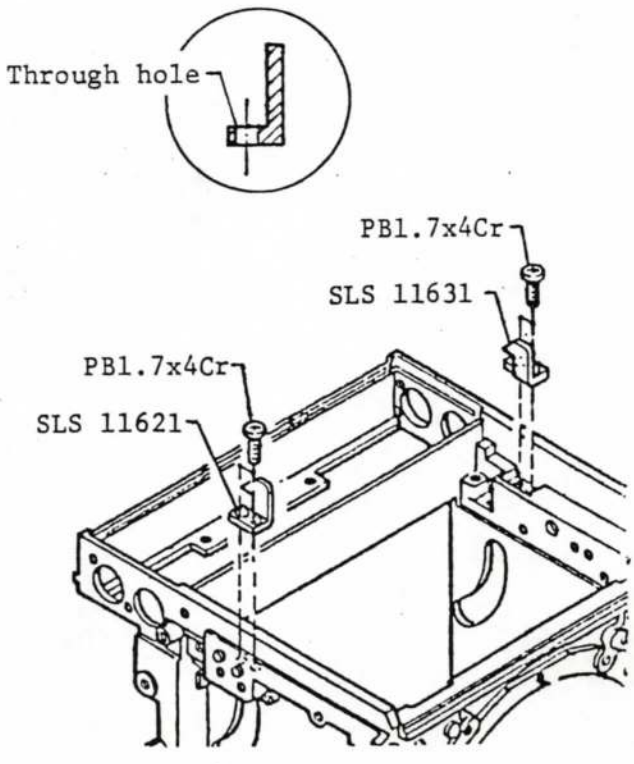

Correction of the wrong parts number

Please correct four parts numbers of the Roll-Film Insert in the M645, M645J and M645 1000S parts catalog as shown drawing below.

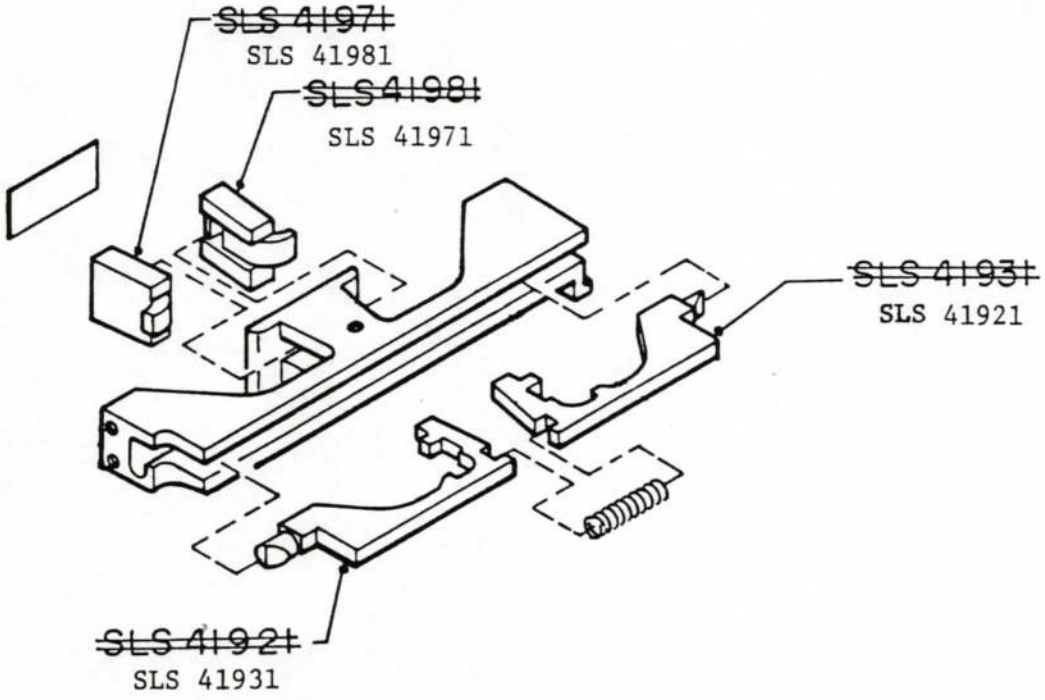

Removal of the SLS 21261 pole

1. Purpose of modification : The SLS 21261 Pole was removed as the die-casting protrusion is suitable for installing the spring instead of the pole.

2. Date of modification : Sept. 1979

3. Replacement of old and new part :

   The SLS 21252 new spring into old body ..... Possible

   *Note : After removing the pole, install the new spring.

Old Type

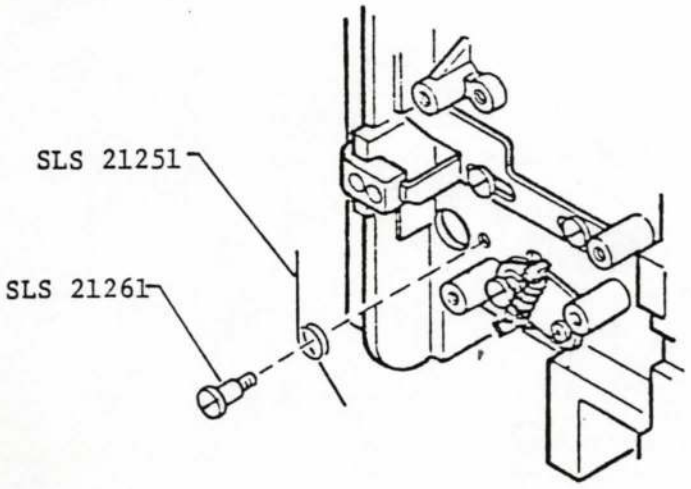

New Type

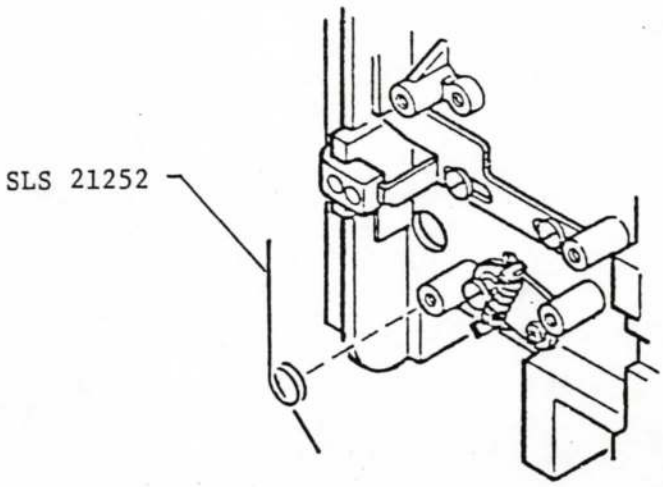

Two new strong F. clutch spring

1. Purpose of modification : For getting regular film space.

2. Date of modification : Sept. 1979

3. Replacement of old and new parts :

The two new springs in pair into the old body..... Possible

Old Type

SLS 14831
Diameter of
the coil wire : ϕ0.15

Length : 9 mm

SLS 14821
Diameter of
the coil wire : ϕ0.2

New Type

SLS 14832
Diameter of
the coil wire : ϕ0.2

Length : 8 mm

SLS 14822
Diameter of
the coil wire : ϕ0.25

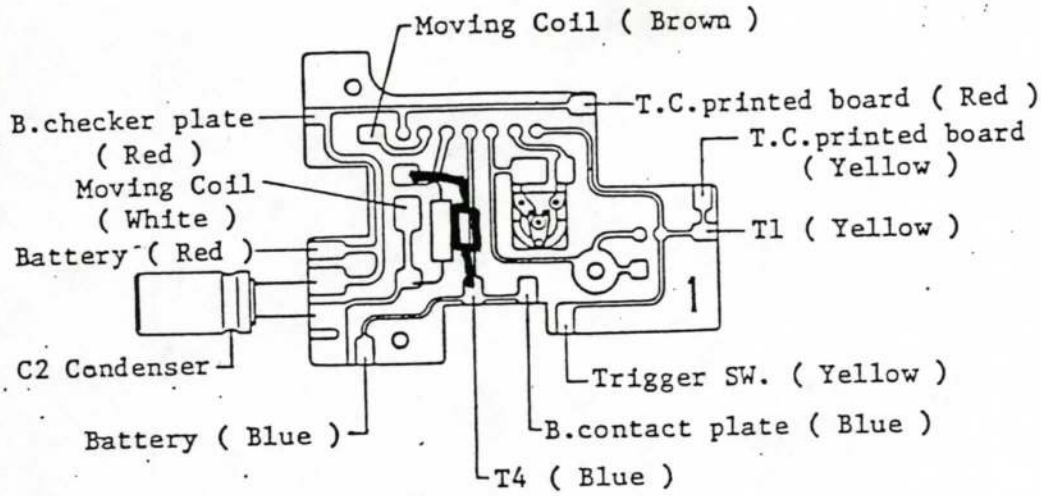
Moving Coil (Brown)
B.checker plate (Red)
Moving Coil (White)
Battery (Red)
C2 Condenser
Battery (Blue)
T4 (Blue)
B.contact plate (Blue)
Trigger SW. (Yellow)
T1 (Yellow)
T.C.printed board (Yellow)
T.C.printed board (Red)
1

(SLS 2064S1)

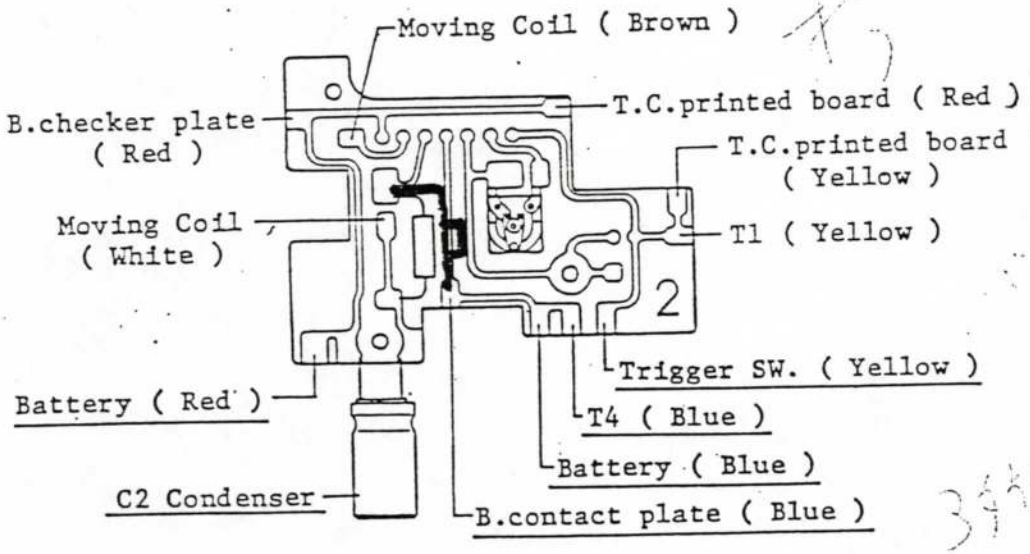
Moving Coil (Brown)
B.checker plate (Red)
Moving Coil (White)
Battery (Red)
C2 Condenser
B.contact plate (Blue)
Battery (Blue)
T4 (Blue)
Trigger SW. (Yellow)
T1 (Yellow)
T.C.printed board (Yellow)
T.C.printed board (Red)
2

(SLT 2064S1)

Mamiya Camera CO.,Ltd. Service Department

シャッター早切りでミラーUP

するでコの抵抗をつける

M645 1000S

Camera Body

Body Ass'y 1..... 1
Body Ass'y 2..... 2
Body Ass'y 3..... 3
Body Ass'y 4..... 4
Body Ass'y 5..... 5
Body Ass'y 6..... 6
Body Ass'y 7..... 7
Body Ass'y 8..... 8
Body Ass'y 9..... 9
Body Ass'y 10.....10
Body Ass'y 11.....11
Body Ass'y 12.....12
Body Ass'y 13.....13
DETAIL "A" Back Cover Ass'y.....14
DETAIL "B" Bottom Cover Ass'y.....15
DETAIL "C" Winding Base Plate Ass'y..16
DETAIL "E" Charging Base Ass'y.....17
DETAIL "D" & "F" MS Clutch Disk Ass'y Winding Base Gear Ass'y...18
5201 16201 Side Panel R Ass'y.....19
5201 18001 Shutter Curtain Ass'y.....20

Catalog No. 1004100008

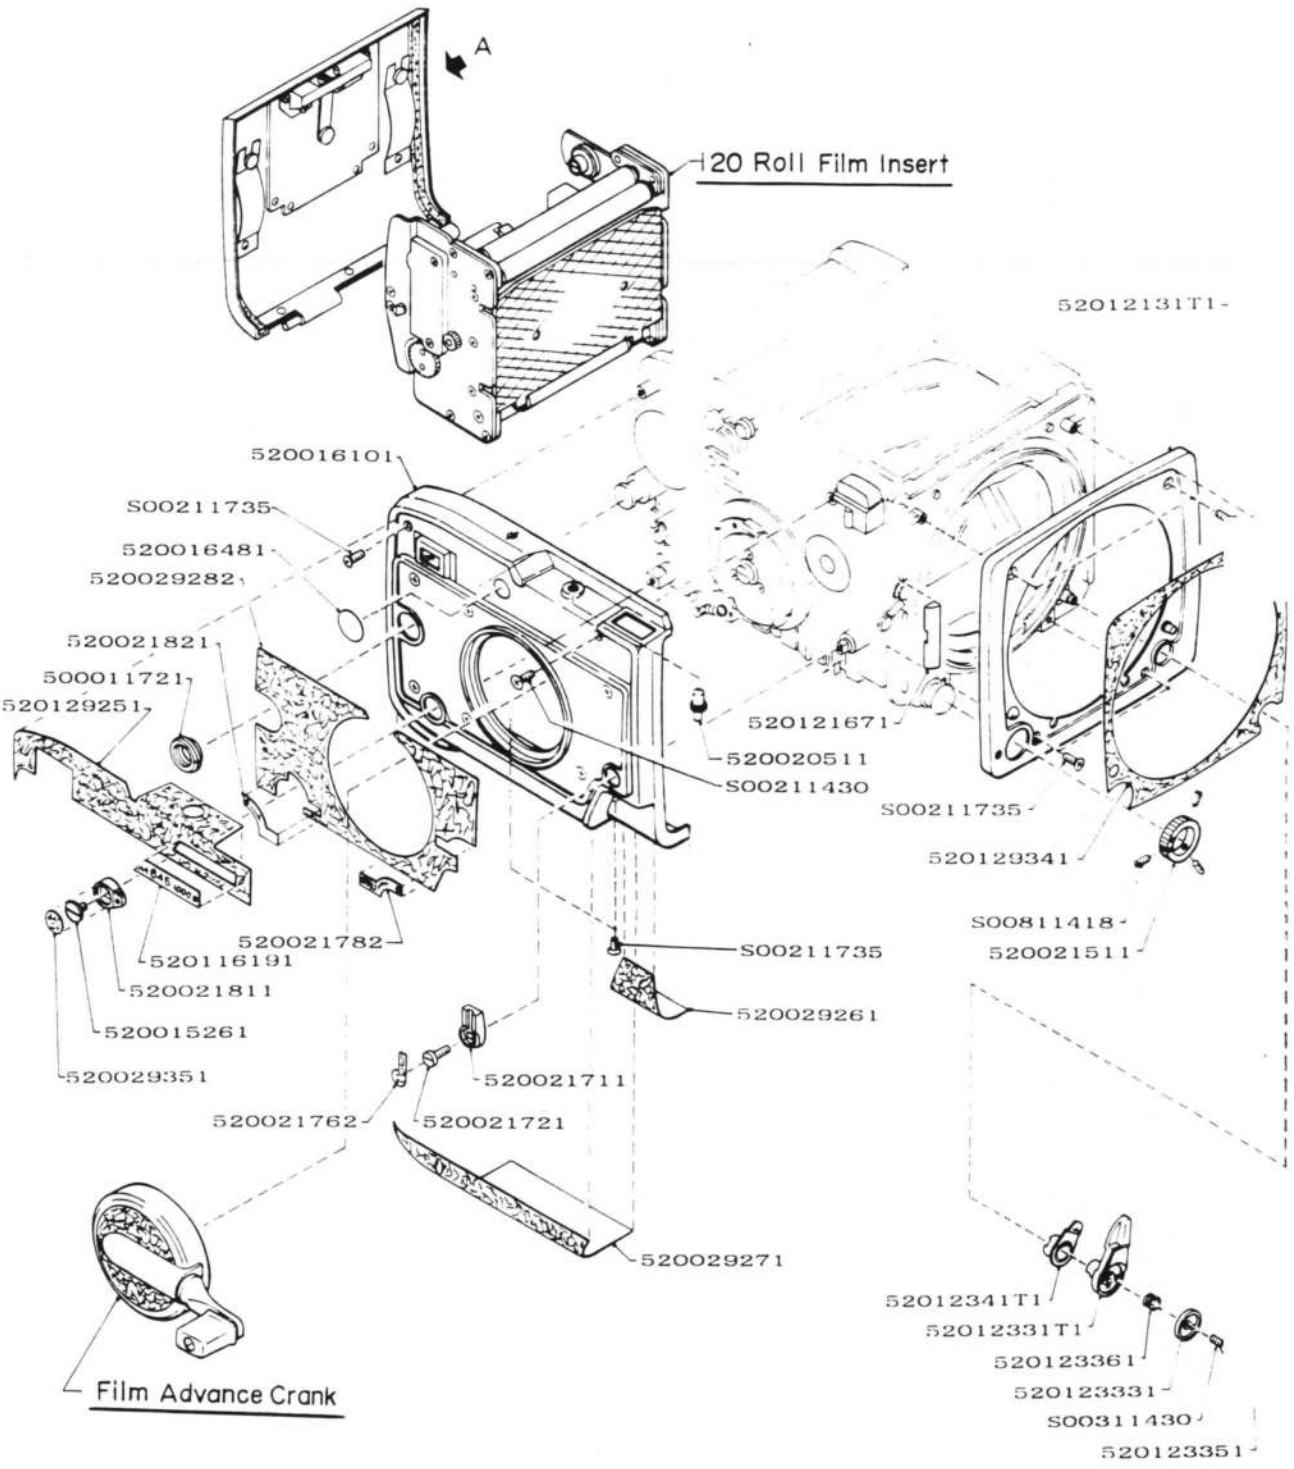
A
120 Roll Film Insert
52012131T1
520016101
S00211735
520016481
520029282
520021821
500011721
520129251
520121671
520020511
S00211430
S00211735
520129341
S00811418
520021511
520021782
520116191
520021811
520015261
520029351
S00211735
520029261
520021711
520021762
520021721
520029271
52012341T1
52012331T1
520123361
520123331
S00311430
520123351
Film Advance Crank

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 16191	(SLT16191)	1	Name plate	１０００Ｓマーク
5201 2131T1	(SLT2131T1)	1	Front panel	前カバー
5201 21671	(SLT21671)	1	Cover	絞り操作板カバー
5201 2331T1	(SLT2331T1)	1	Self-timer lever	セルフつまみ
5201 23331	(SLT23331)	1	Decoration Disk	セルフ軸飾り
5201 23351	(SLT23351)	1	Leatherette	セルフつまみ革
5201 23361	(SLT23361)	1	Spring	つまみ戻しバネ
5201 2341T1	(SLT2341T1)	1	Lever	起動レバー
5201 29251	(SLT29251)	1	Leatherette A	左側板革(上)
5201 29341	(SLT29341)	1	Leatherette B	前カバー革
5200 15261	(SLS15261)	1	Screw	ＤＸカム止ネジ
5200 16101	(SLS16101)	1	Side panel L	左側板
5200 16481	(SLS16481)	1	Disk	左側板盲板
5200 20511	(SLS20511)	1	BC Button	ＢＣボタン
5200 21511	(SLS21511)	1	S Lock ring	Ｓロックつまみ
5200 21711	(SLS21711)	1	Mirror-up lever	ＭＵつまみ
5200 21721	(SLS21721)	1	Screw	ＭＵつまみ止ネジ
5200 21762	(SLS21762)	1	Leatherette C	ＭＵつまみ革
5200 21782	(SLS21782)	1	Indicator plate	ＭＵ表示板
5200 21811	(SLS21811)	1	M exposure lever	ＤＸつまみ
5200 21821	(SLS21821)	1	Indicator plate	ＤＸ表示板
5200 29261	(SLS29261)	1	Leatherette D	左側板革(下前)
5200 29271	(SLS29271)	1	Leatherette E	左側板革(下後)
5200 29282	(SLS29282)	1	Leatherette F	左側板飾革
5200 29351	(SLS29351)	1	Leatherette G	ＤＸつまみ革
5000 11721	(RS1172)	1	Nut	吊金具止ネジ
S00211430	(PD1.4×3)	1	Screw	左側板止ネジ
S00211735	(PD1.7×3.5)	7	Screw	止ネジ
S00311430	(3PD1.4×3)	1	Screw	セルフ軸飾り止ネジ
S00811418	(A1.4×1.8)	3	Screw	つまみ止ネジ

※ DETAIL A Back Cover Ass'y.....Page 14
※ Film Advance Crank.....Page 21
※ 120 Roll Film Insert.....Page 22

Remarks

M645 1000S

Body Ass'y 2

1	2	

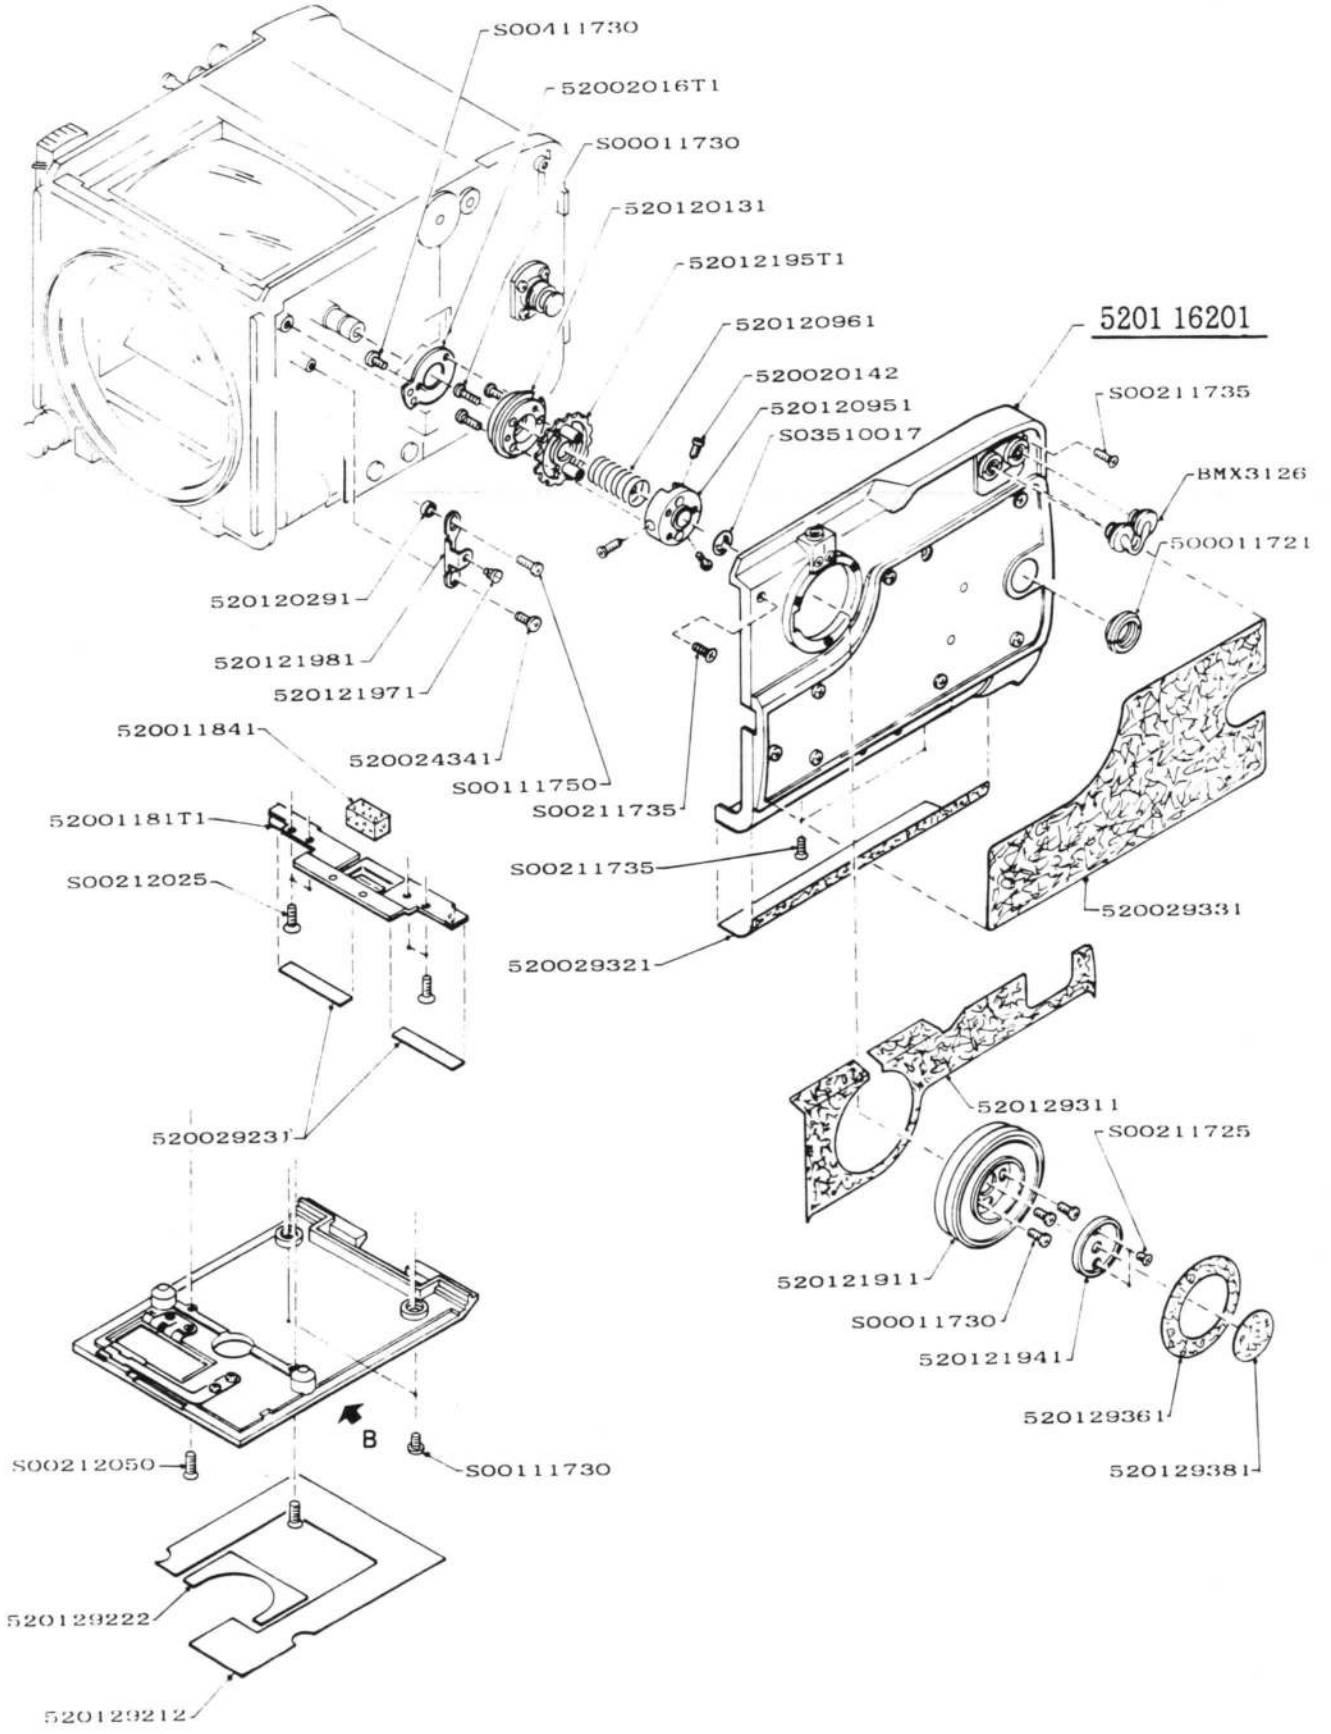

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 16201	(SLT16201)	1	Side panel R	右側板Ass'y
5201 20131	(SLT20131)	1	Shutter dial hub	Tダイヤルハブ
5201 20291	(SLT20291)	1	Collar	ピン台カラー
5201 20951	(SLT20951)	1	Holder	Tダイヤル台
5201 20961	(SLT20961)	1	Spring	Tロックバネ
5201 21911	(SLT21911)	1	Shutter speed dial	Tダイヤル
5201 21941	(SLT21941)	1	Disk	Tダイヤルプレート
5201 2195T1	(SLT2195T1)	1	Click disk	Tロック板
5201 21971	(SLT21971)	1	Shoulder screw	Tロックピン
5201 21981	(SLT21981)	1	Stopper plate	Tロックピン台
5201 29212	(SLT29212)	1	Leatherette L	下部カバー革(大)
5201 29222	(SLT29222)	1	Leatherette S	下部カバー革(小)
5201 29311	(SLT29311)	1	Leatherette U	右側板革(上)
5201 29361	(SLT29361)	1	Leatherette	Tダイヤル革
5201 29381	(SLT29381)	1	Leatherette	Tダイヤルボタン革
5200 1181T1	(SLS1181T1)	1	Hinge plate	蝶番
5200 11841	(SLS11841)	1	Cushion	蝶番止金クッション
5200 20142	(SLS20142)	3	Screw	TDハブ止ネジ
5200 2016T1	(SLS2016T1)	1	Brush disk	Tブラシ台板
5200 24341	(SLS24341)	1	Screw	TDプレート止ネジ
5200 29231	(SLS29231)	2	Leatherette	ボディ蝶番革
5200 29321	(SLS29321)	1	Leatherette	右側板革(下)
5200 29331	(SLS29331)	1	Leatherette	右側板飾り革
5000 11721	(RS1172)	1	Nut	吊金具ナット
BMX3126		1	Cover	シンクロプラグカバー
S00011730	(PB1.7×3)	6	Screw	止ネジ
S00211725	(PD1.7×2.5)	2	Screw	TDプレート止ネジ
S00211735	(PD1.7×3.5)	4	Screw	右側板止ネジ
S00212025	(PD2×2.5)	4	Screw	蝶番止ネジ
S00212050	(PD2×5)	2	Screw	下部カバー止ネジ
S00111730	(3PB1.7×3)	2	Screw	下部カバー止ネジ
S00111750	(3PB1.7×5)	1	Screw	ロックピン台止ネジ
S00411730	(TB1.7×3)	1	Screw	Tブラシ台止ネジ
S03510017	(E-17)	1	E-ring	Tダイヤル止リング

※ 5201 16201 Side Panel R Ass'y.....Page 19
※ DETAIL B Bottom Cover Ass'y.....Page 15

Remarks

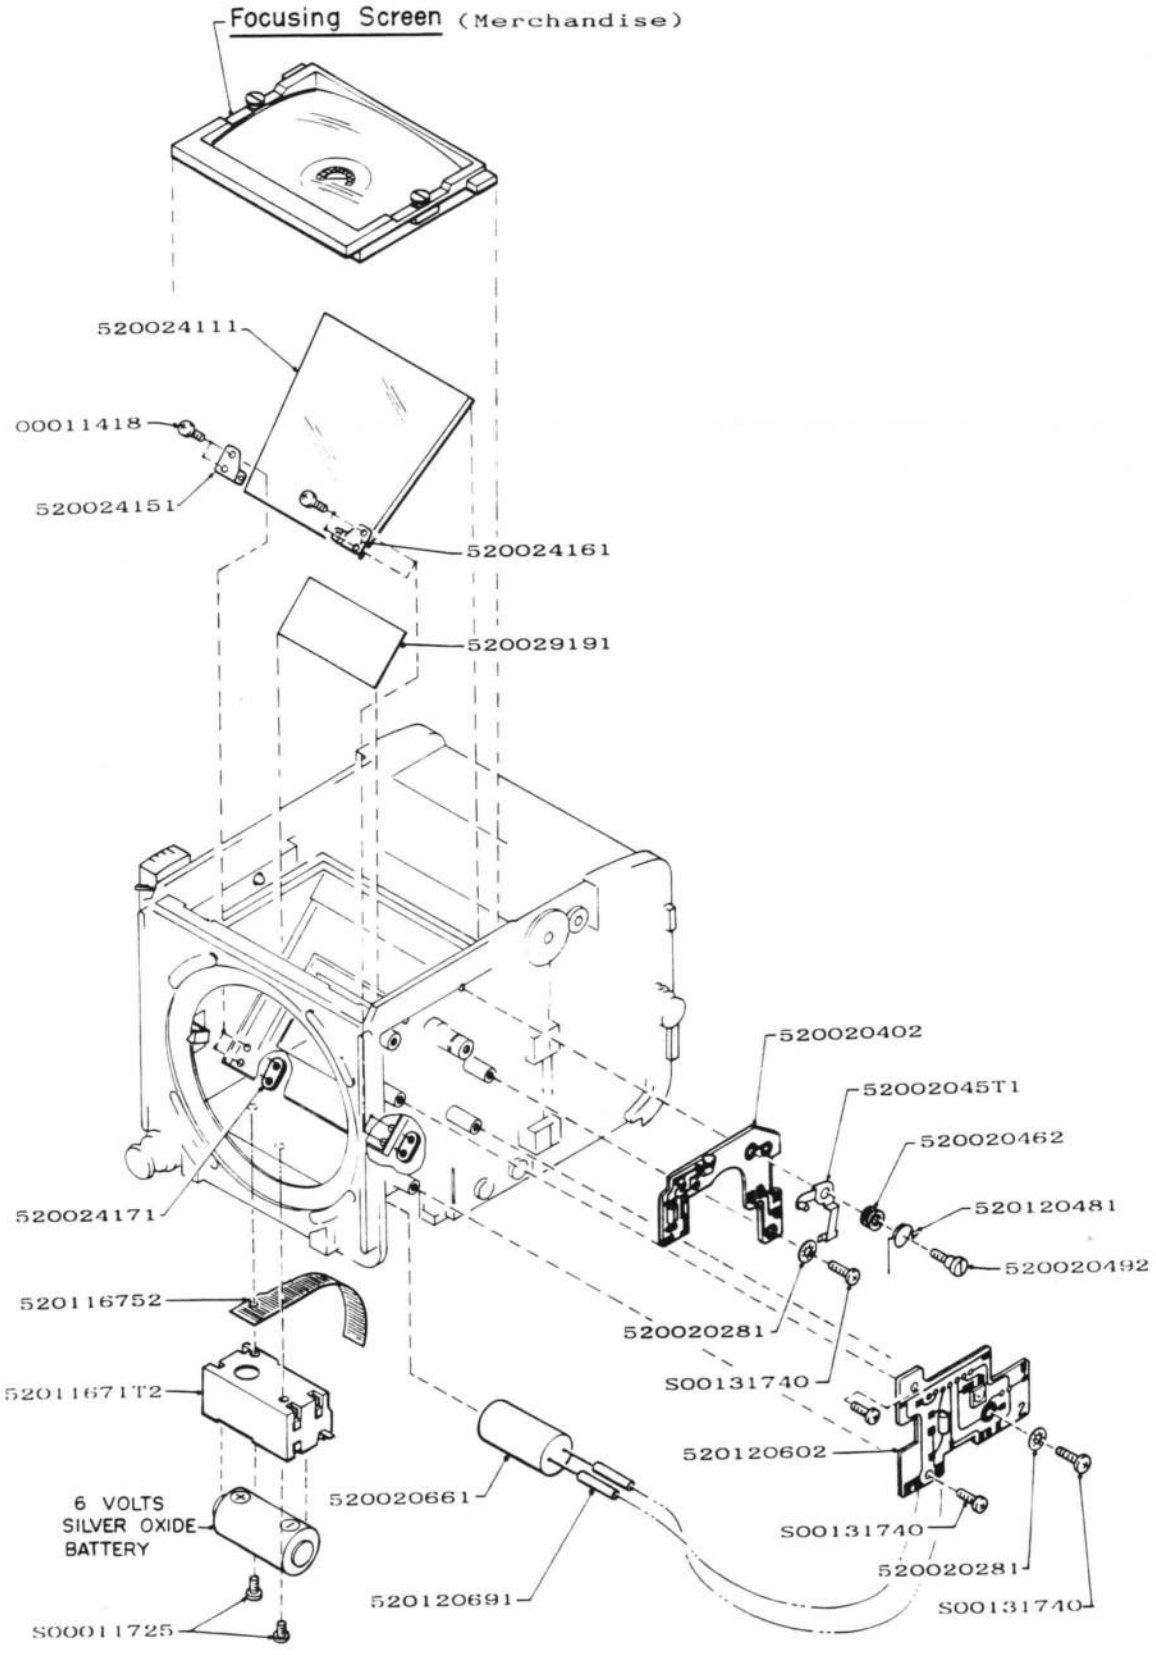
Focusing Screen (Merchandise)
520024111
00011418
520024151
520024161
520029191
520024171
520116752
52011671T2
6 VOLTS
SILVER OXIDE
BATTERY
S00011725
520020661
520120691
520020402
52002045T1
520020462
520120481
520020492
520020281
S00131740
520120602
S00131740
520020281
S00131740

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 1671T2	(SLT1671T2)	1	Battery chamber Ass'y	電池ケースAss'y
5201 16752	(SLT16752)	1	Ribbon	電池リボン
5201 20481	(SLT20481)	1	Spring	切替スイッチバネ
5201 20602	(SLT20602)	1	Shutter PC plate	T回路配線板
5201 20691	(SLT20691)	2	Vinyl tube	チューブ
5200 20281	(SLS20281)	2	Fastener	ネジアース座金
5200 20402	(SLS20402)	1	Battery check PC plate	BC基板
5200 2045T1	(SLS2045T1)	1	Switch lever	切替スイッチレバー
5200 20462	(SLS20462)	1	Hub	スイッチレバー軸
5200 20492	(SLS20492)	1	Shoulder screw	SWレバー止ネジ
5200 20661	(SLS20661)	1	MC condenser	MCコンデンサー
5200 24111	(SLS24111)	1	Mirror	ミラー
5200 24151	(SLS24151)	1	Leaf spring L	ミラー押え(左)
5200 24161	(SLS24161)	1	Leaf spring R	ミラー押え(右)
5200 24171	(SLS24171)	2	Rataining plate	ミラー座金
5200 29191	(SLS29191)	1	Paper	ミラー裏紙
00011418	(PB1.4×1.8)	4	Screw	ミラー押え止ネジ
S00011725	(PB1.7×2.5)	2	Screw	電池ケース止ネジ
S00131740	(3PB1.7×4Ni)	4	Screw	止ネジ

Remarks

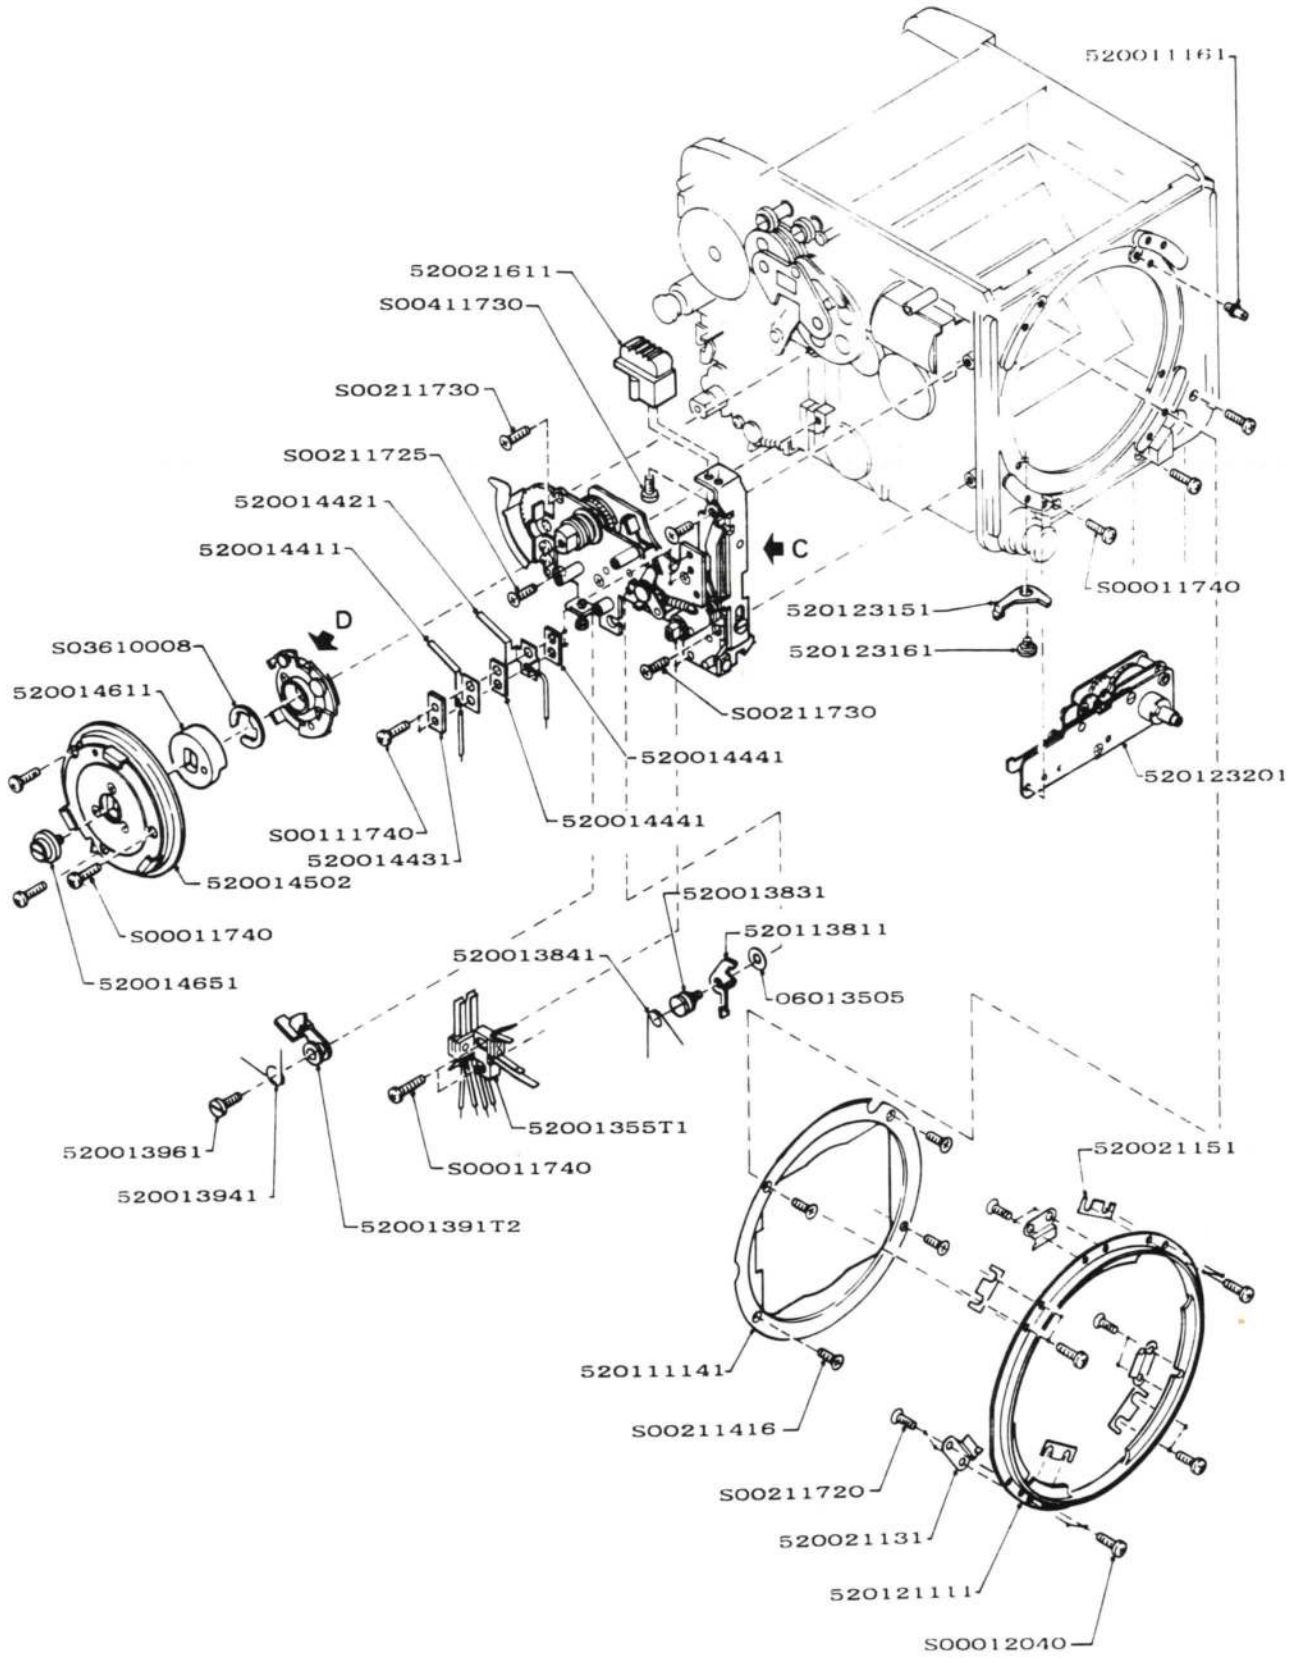
520011161
520021611
S00411730
S00211730
S00211725
520014421
520014411
C
D
S03610008
520014611
520014502
S00011740
520014651
S00111740
520014431
520014441
S00211730
520014441
520123151
520123161
S00011740
520123201
520013831
520113811
520013841
06013505
52001355T1
S00011740
520013961
520013941
52001391T2
520021151
520111141
S00211416
S00211720
520021131
520121111
S00012040

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 11141	(SLT11141)	1	Shading frame	バヨネ下カバー
5201 13811	(SLT13811)	1	Hook	スイッチ掛金
5201 21111	(SLT21111)	1	Bayonet ring	バヨネットリング
5201 23201	(SLT23201)	1	Self-timer Ass'y	セルフタイマー
5201 23151	(SLT23151)	1	Lever	セルフレバー
5201 23161	(SLT23161)	1	Shoulder screw	セルフレバー軸
5200 11161	(SLS11161)	1	Stopper pin	バヨネ回転止ピン
5200 1355T1	(SLS1355T1)	1	Main switch	トリプルSW. Ass'y
5200 13831	(SLS13831)	1	Shoulder screw	スイッチ掛金軸
5200 13841	(SLS13841)	1	Spring	スイッチ掛金バネ
5200 1391T2	(SLS1391T2)	1	Clutch stopper	ストッパー
5200 13941	(SLS13941)	1	Spring	ストッパーバネ
5200 13961	(SLS13961)	1	Screw	ストッパー止ネジ
5200 14411	(SLS14411)	1	FP contact U	上FP接片
5200 14421	(SLS14421)	1	FP contact L	下FP接片
5200 14431	(SLS14431)	1	Insulation plate	FP接片
5200 14441	(SLS14441)	2	Insulation washer	FP接片絶縁板
5200 14502	(SLS14502)	1	Winding knob disk Ass'y	巻上上基板
5200 14611	(SLS14611)	1	Winding cam	MS巻上カム
5200 14651	(SLS14651)	1	Shoulder screw	ノブ受板止め軸
5200 21131	(SLS21131)	3	Leaf spring	バヨネバネ
5200 21151	(SLS21151)	0~4	Washer(t=0.03,0.05,0.1)	バヨネワッシャ
5200 21611	(SLS21611)	1	Shutter release button	レリーズボタン
S00011740	(PB1.7×4)	8	Screw	止ネジ
S00012040	(PB2×4)	8	Screw	バヨネ止ネジ
S00111740	(3PB1.7×4)	2	Screw	FP接片台止ネジ
S00211416	(PD1.4×1.6)	4	Screw	カバー止ネジ
S00211720	(PD1.7×2)	6	Screw	バヨネバネ止ネジ
S00211725	(PD1.7×2.5)	1	Screw	巻上中基板止ネジ
S00211730	(PD1.7×3)	3	Screw	巻上下基板止ネジ
S00411730	(TB1.7×3)	2	Screw	Rボタン止ネジ
06013505	(5W2×0.5)	1	Washer	スイッチ掛金座金
S03610008	(C-8)	1	C-ring	MSI歯車止リング

※ DETAIL C Winding Base Ass'y.....Page 16
※ DETAIL D MS Clutch Disk Ass'y.....Page 18

Remarks

Body Ass'y 5

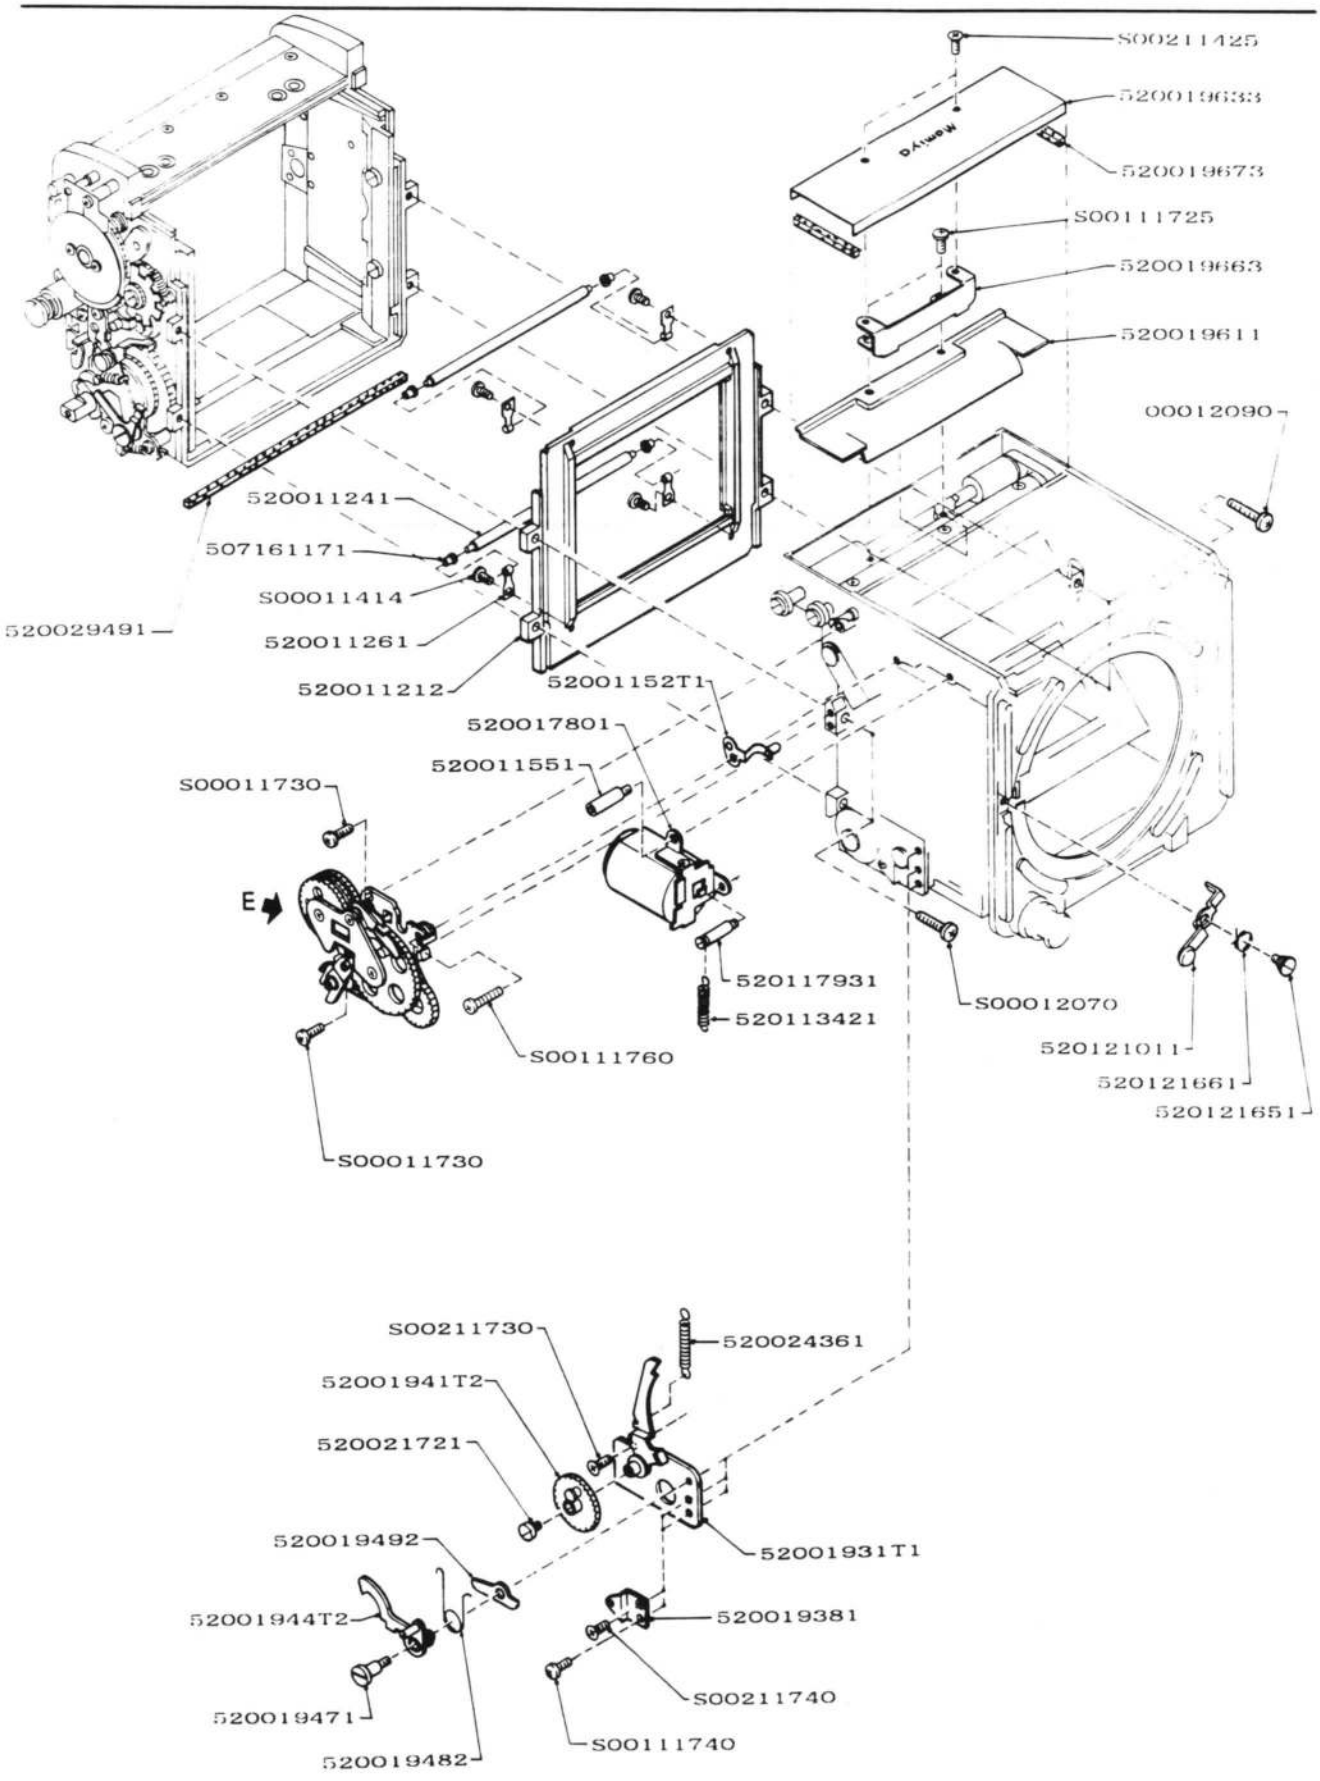
S00211425
520019633
520019673
S00111725
520019663
520019611
00012090
520011241
507161171
S00011414
520011261
520011212
520029491
52001152T1
520017801
520011551
S00011730
E
520117931
520113421
S00012070
520121011
520121661
520121651
S00111760
S00011730
S00211730
520024361
52001941T2
520021721
520019492
52001931T1
52001944T2
520019381
S00211740
520019471
S00111740
520019482

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 13421	(SLT13421)	1	Spring	レリーズ板バネ
5201 17931	(SLT17931)	1	Shaft	MU受ネジ
5201 21011	(SLT21011)	1	Lever	絞り込み操作板
5201 21651	(SLT21651)	1	Shoulder screw	絞り込み操作板軸
5201 21661	(SLT21661)	1	Spring	絞り込み操作板バネ
5200 11212	(SLS11212)	1	Guide rail frame	レール板
5200 11241	(SLS11241)	2	Film roller	フローラー
5200 11261	(SLS11261)	4	Leaf spring	フローラーバネ
5200 1152T1	(SLS1152T1)	1	Leaf spring	クリックバネ
5200 11551	(SLS11551)	1	Shaft	左側板受柱
5200 17801	(SLS17801)	1	Moving coil Ass'y	MU Ass'y
5200 1931T1	(SLS1931T1)	1	Base plate	スプリング軸左基板
5200 19381	(SLS19381)	1	Bracket	スプリング軸受板
5200 1941T2	(SLS1941T2)	1	Gear	ミラーケリ歯車
5200 1944T2	(SLS1944T2)	1	Braking lever	後幕ブレーキレバー
5200 19471	(SLS19471)	1	Shoulder screw	ブレーキレバー軸
5200 19482	(SLS19482)	1	Spring	ブレーキレバーバネ
5200 19492	(SLS19492)	1	Lever	ミラー下げレバー
5200 19611	(SLS19611)	1	Cover L	幕軸下カバー
5200 19633	(SLS19633)	1	Cover U	幕軸室カバー
5200 19663	(SLS19663)	1	Cover holder	幕軸室カバー受
5200 19673	(SLS19673)	2	Sealing strip	幕軸室モルト
5200 21721	(SLS21721)	1	Screw	歯車止ネジ
5200 24361	(SLS24361)	1	Spring	ミラー下げバネ
5200 29491	(SLS29491)	1	Sealing strip	下カバーモルト
5071 61171	(ARSH6117)	4	Collar	フローラ受け
S00011414	(PB1.4×1.4)	4	Screw	バネ止ネジ
S00011730	(PB1.7×3)	2	Screw	MS巻上基板止ネジ
S00012070	(PB2×7)	2	Screw	ボディ結合ネジ(左)
00012090	(PB2×9)	2	Screw	ボディ結合ネジ(右)
S00111725	(3PB1.7×2.5)	2	Screw	幕軸下カバー止ネジ
S00111740	(3PB1.7×4)	1	Screw	軸受板止ネジ
S00111760	(3PB1.7×6)	1	Screw	解除レバー止ネジ
S00211425	(PD1.4×2.5)	2	Screw	幕軸室止ネジ
S00211730	(PD1.7×3)	1	Screw	左基板止ネジ
S00211740	(PD1.7×4)	1	Screw	軸受板止ネジ

※ DETAIL E Charging Base Ass'y.....Page 17

Remarks

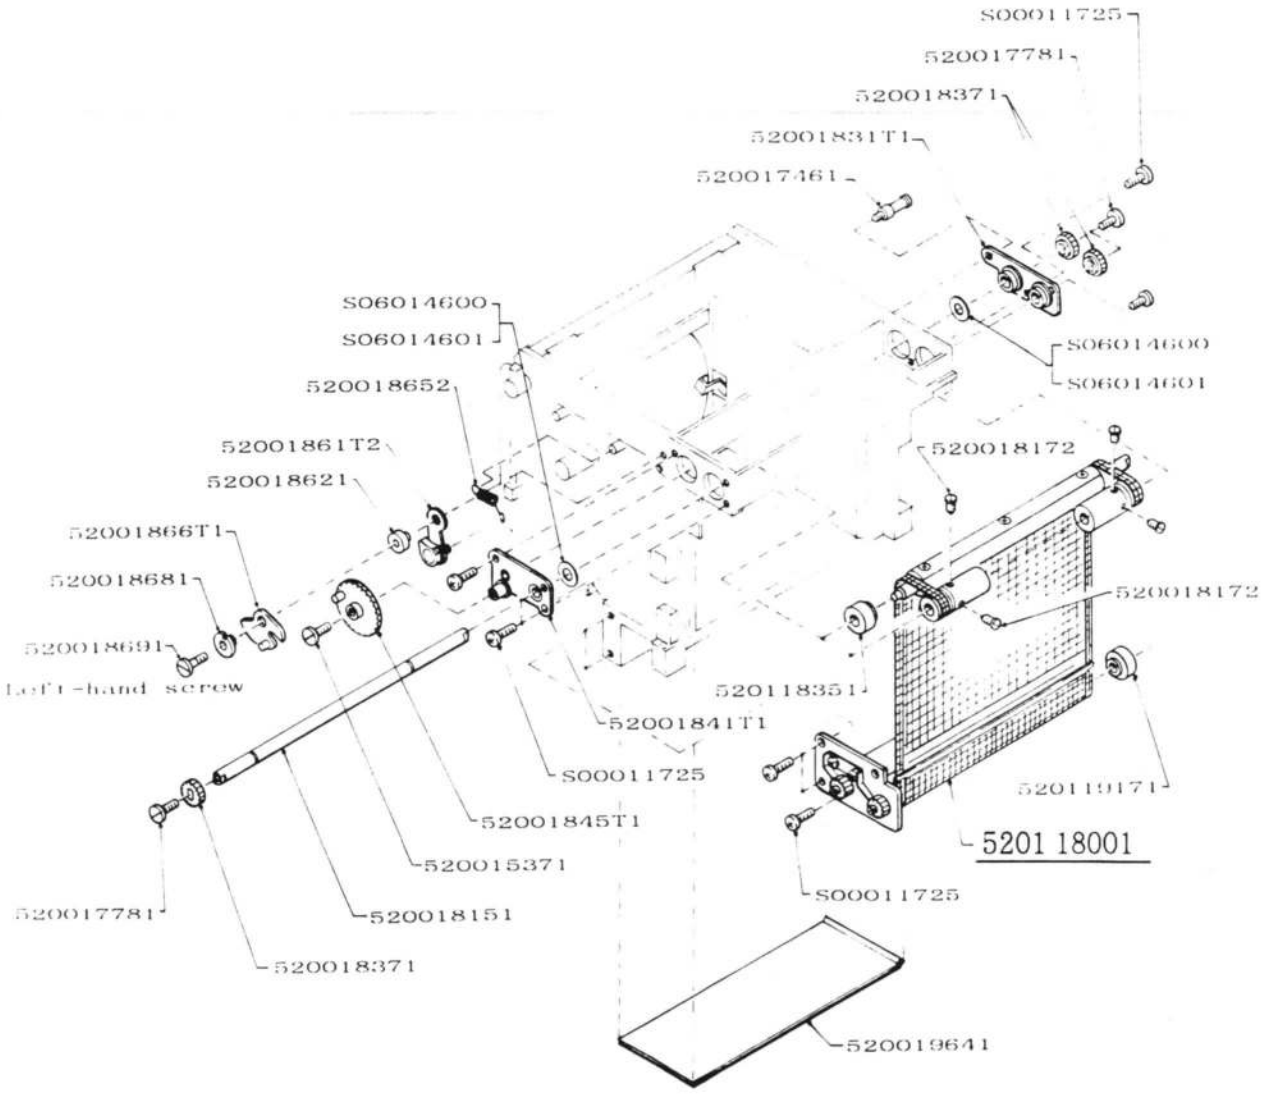
S00011725
520017781
520018371
5200183 1T1
520017461
S06014600
S06014601
520018652
5200186 1T2
520018621
5200186 6T1
520018681
520018691
Left-hand screw
S06014600
S06014601
520018172
520018172
520118351
5200184 1T1
S00011725
5200184 5T1
520015371
520018151
520017781
520018371
520119171
5201 18001
S00011725
520019641

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 18001	(SLT18001)	1	Shutter curtain Ass'y	シャッターAss'y
5201 18351	(SLT18351)	1	Pulley A	後幕軸ローラー
5201 19171	(SLT19171)	1	Pulley B	S軸ローラー
5200 15371	(SLS15371)	1	Screw	X歯車止ネジ
5200 17461	(SLS17461)	1	Anchor	SI歯車掛金バネ掛
5200 17781	(SLS17781)	3	Screw	幕軸歯車止ネジ
5200 18151	(SLS18151)	1	Shaft	先幕軸
5200 18172	(SLS18172)	4	Set screw	先幕筒止ネジ
5200 1831T1	(SLS1831T1)	1	Bushing plate	幕軸基板(左)
5200 18371	(SLS18371)	3	Gear	幕軸歯車
5200 1841T1	(SLS1841T1)	1	Bushing plate	幕軸基板(右)
5200 1845T1	(SLS1845T1)	1	X synchro gear	X歯車
5200 1861T2	(SLS1861T2)	1	Braking lever	先幕ブレーキ板(下)
5200 18621	(SLS18621)	1	Hub	先幕ブレーキ板軸
5200 18652	(SLS18652)	1	Spring	ブレーキ戻しバネ
5200 1866T1	(SLS1866T1)	1	Cam	先幕ブレーキ板(上)
5200 18681	(SLS18681)	1	Collar	先幕ブレーキカラー
5200 18691	(SLS18691)	1	Shoulder screw	ブレーキ板止ネジ
5200 19641	(SLS19641)	1	Cover	スプリング軸カバー
S00011725	(PB1.7×2.5)	8	Screw	止ネジ
S06014600	(6W2.5×0.05)	0~2	Washer	先幕軸調整ワッシャ
S06014601	(6W2.5×0.1)	0~2	Washer	先幕軸調整ワッシャ

※ 5201 18001 Shutter Curtain Ass'y.....Page 20

Remarks

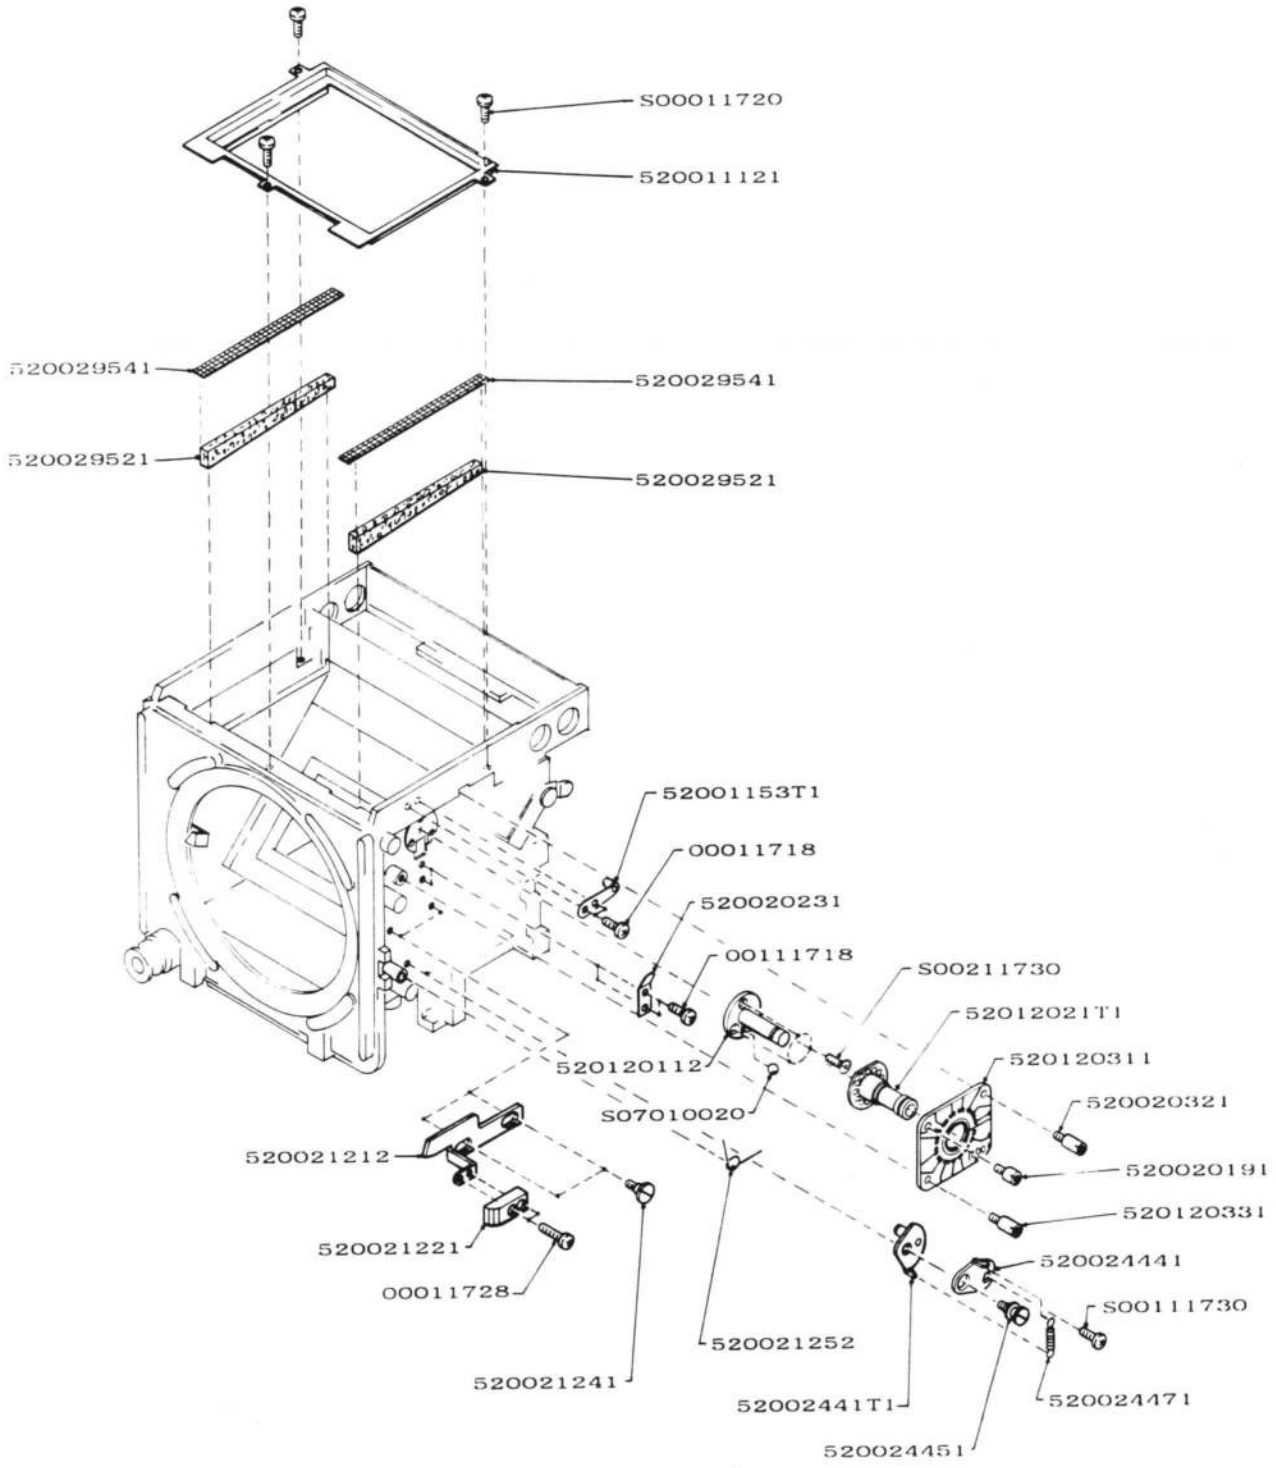
S00011720
520011121
520029541
520029541
520029521
520029521
52001153T1
00011718
520020231
00111718
S00211730
52012021T1
520120112
520120311
S07010020
520020321
520021212
520020191
520120331
520021221
520024441
00011728
S00111730
520021252
520021241
52002441T1
520024471
520024451

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 20112	(SLT20112)	1	Shaft	Tダイヤル軸
5201 2021T1	(SLT2021T1)	1	Dial click	Tクリック軸
5201 20311	(SLT20311)	1	Time PC board	Tプリント板
5201 20331	(SLT20331)	1	Pole	Tロックピン台柱
5200 11121	(SLS11121)	1	Frame	ボディ上カバー
5200 1153T1	(SLS1153T1)	1	Leaf spring R	クリックバネ(右)
5200 20191	(SLS20191)	1	Shaft	Tプリント止柱
5200 20231	(SLS20231)	1	Leaf spring	Tクリックバネ
5200 20321	(SLS20321)	1	Shaft	Tプリント止柱
5200 21212	(SLS21212)	1	Lens release lever	L戻し止
5200 21221	(SLS21221)	1	Button	L戻し止ボタン
5200 21241	(SLS21241)	2	Guide screw	L戻し止ガイド
5200 21252	(SLS21252)	1	Spring	L戻し止バネ
5200 2441T1	(SLS2441T1)	1	Mirror stopper	ミラー角度板
5200 24441	(SLS24441)	1	Adjusting plate	ミラー角度調整板
5200 24451	(SLS24451)	1	Shoulder screw	ミラー角度調整板軸
5200 24471	(SLS24471)	1	Spring	ミラー角度調整板バネ
5200 29521	(SLS29521)	2	Sealing strip	ミラー側面モルト
5200 29541	(SLS29541)	2	Light baffle	ミラー側面遮光幕
00011718	(PB1.7×1.8)	2	Screw	クリックバネ止ネジ
S00011720	(PB1.7×2)	3	Screw	上カバー止ネジ
00011728	(PB1.7×2.8)	2	Screw	ボタン止ネジ
00111718	(3PB1.7×1.8)	2	Screw	Tクリックバネ止ネジ
S00111730	(3PB1.7×3)	1	Screw	角度調整板止ネジ
S00211730	(PD1.7×3)	3	Screw	Tダイヤル軸止ネジ
S07010020	(B020)	1	Steel ball (φ2.0)	クリックボール

Remarks

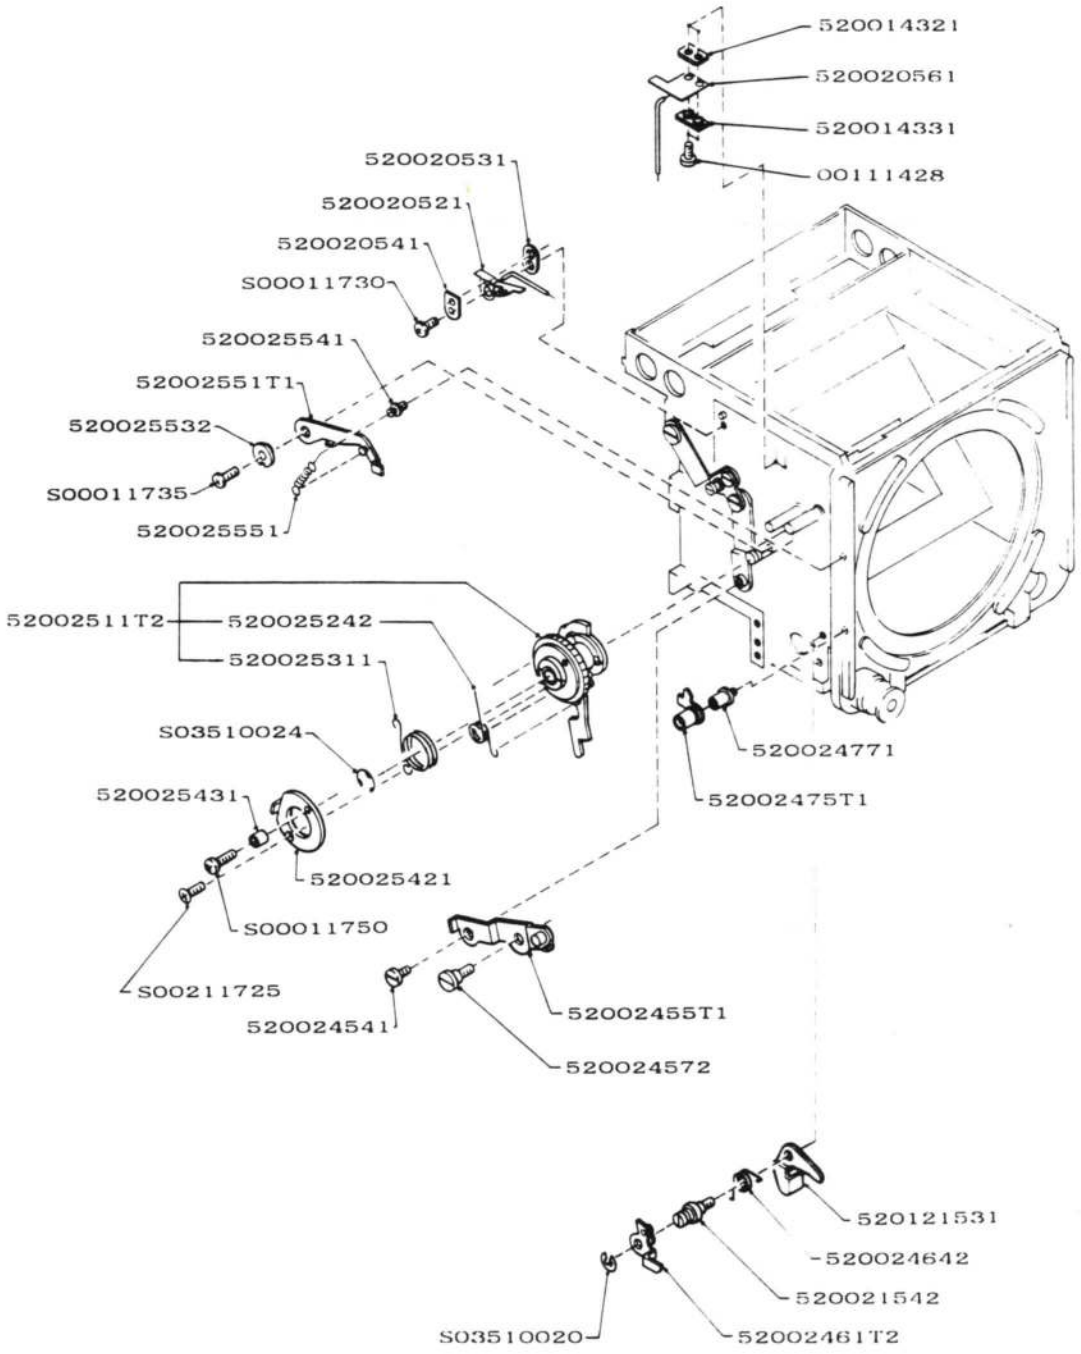
520014321
520020561
520014331
00111428
520020531
520020521
520020541
S00011730
520025541
52002551T1
520025532
S00011735
520025551
52002511T2
520025242
520025311
S03510024
520025431
520025421
S00011750
S00211725
520024541
52002455T1
520024572
520024771
52002475T1
520121531
520024642
520021542
S03510020
52002461T2

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 21531	(SLT21531)	1	C release lever	Cレリーズレバー
5200 14321	(SLS14321)	1	Insulation washer	BC極絶縁座
5200 14331	(SLS14331)	1	Insulation plate	BC極絶縁板
5200 20521	(SLS20521)	1	Leaf spring	BCボタンバネ
5200 20531	(SLS20531)	1	Insulation plate	BCボタンバネ絶縁板
5200 20541	(SLS20541)	1	Insulation holder	BCボタンバネ絶縁台
5200 20561	(SLS20561)	1	Contact plate	BC極
5200 21542	(SLS21542)	1	Shoulder screw	Cレリーズレバー軸
5200 24541	(SLS24541)	1	Screw	止ネジ
5200 2455T1	(SLS2455T1)	1	Mirror raising lever	ミラーレバー
5200 24572	(SLS24572)	1	Hub	ミラーレバー軸
5200 2461T2	(SLS2461T2)	1	Stop lever	ミラーストップレバー
5200 24642	(SLS24642)	1	Spring	ストップレバーバネ
5200 2475T1	(SLS2475T1)	1	Link lever	第2MUレバー
5200 24771	(SLS24771)	1	Shaft	第2MUレバー軸
5200 2511T2	(SLS2511T2)	1	Mirror raising crank	ミラー歯車板
5200 25242	(SLS25242)	1	Spring	ミラー上爪バネ
5200 25311	(SLS25311)	1	Spring	ミラーバネ
5200 25421	(SLS25421)	1	Disk	M3歯車板
5200 25431	(SLS25431)	1	Collar	FPスイッチピン
5200 2551T1	(SLS2551T1)	1	M release lever	ミラー歯車板掛金
5200 25532	(SLS25532)	1	Collar	ミラー歯車板掛金軸
5200 25541	(SLS25541)	1	Anchor	バネ柱
5200 25551	(SLS25551)	1	Spring	ミラー歯車板掛金バネ
S00011730	(PB1.7×3)	2	Screw	BCボタンバネ止ネジ
S00011735	(PB1.7×3.5)	1	Screw	掛金軸止ネジ
S00011750	(PB1.7×5)	1	Screw	M3歯車板ピン止ネジ
S00211725	(PD1.7×2.5)	1	Screw	M3歯車板止ネジ
00111428	(3PB1.4×2.8)	2	Screw	BC極止ネジ
S03510020	(E-20)	1	E-ring	止リング
S03510024	(E-24)	1	E-ring	M3歯車止リング

Remarks

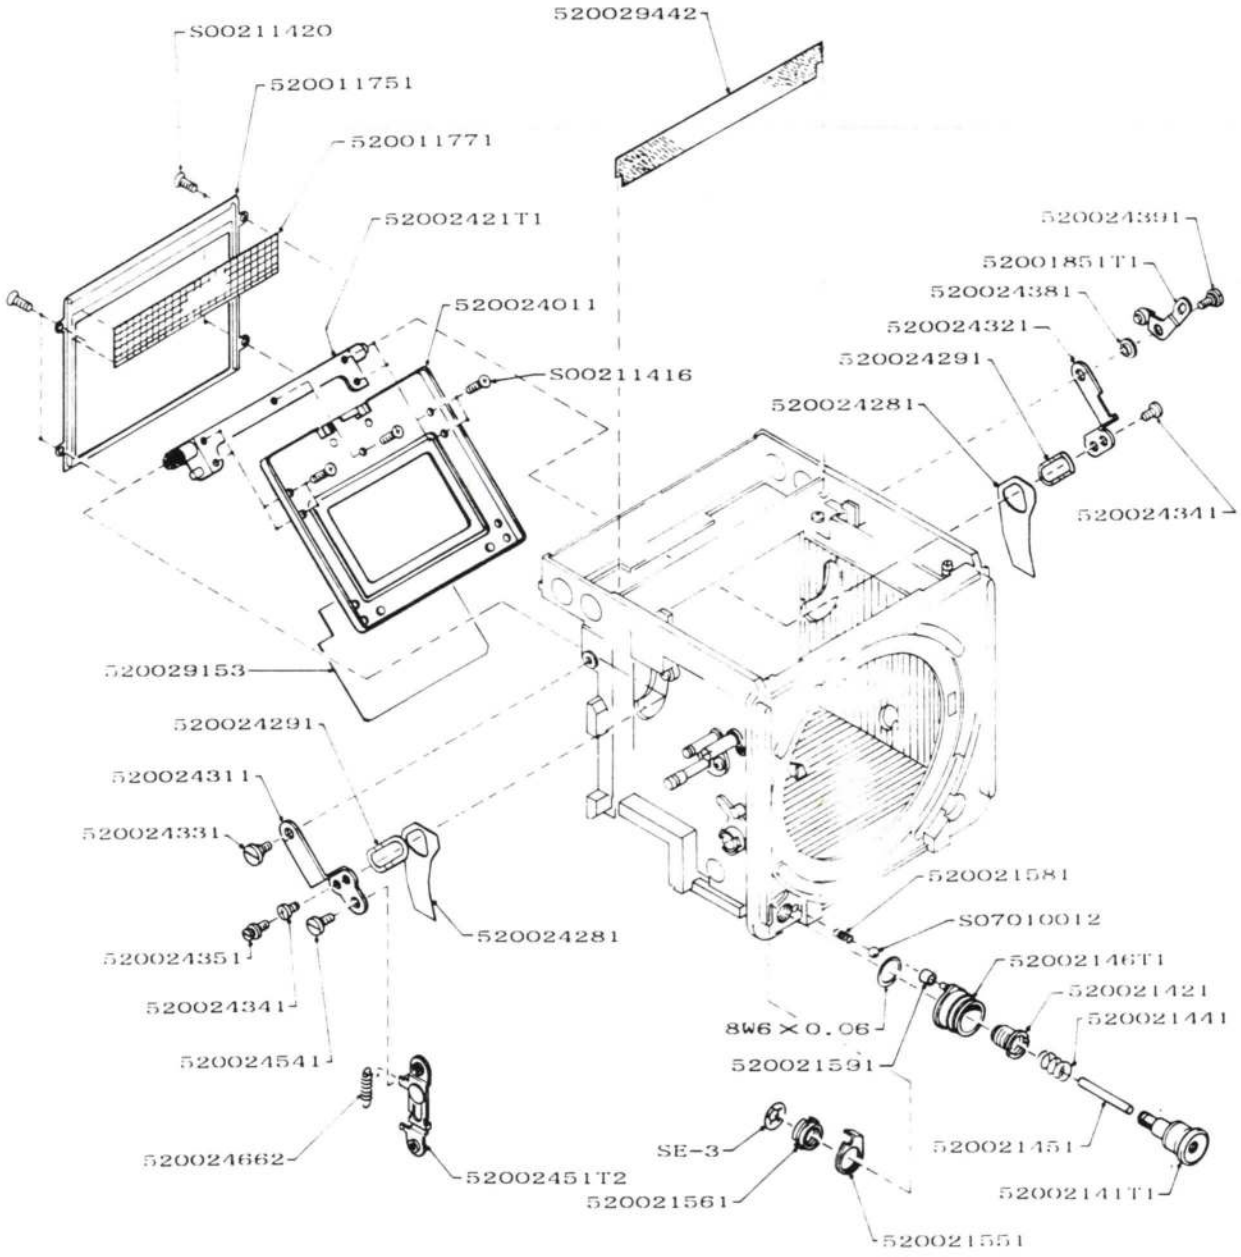
S00211420
520029442
520011751
520011771
52002421T1
520024391
52001851T1
520024381
520024321
520024291
520024011
S00211416
520024281
520024341
520029153
520024291
520024311
520024331
520021581
S07010012
520024281
52002146T1
520024351
520021421
520024341
8W6×0.06
520021441
520024541
520021591
520024662
SE-3
520021451
52002451T2
520021561
52002141T1
520021551

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 11751	(SLS11751)	1	Light baffle plate	後カバー
5200 11771	(SLS11771)	1	Light baffle	ミラー遮光幕
5200 1851T1	(SLS1851T1)	1	X Synchro lever	XSWレバー
5200 2141T1	(SLS2141T1)	1	Shutter release button	Sボタン
5200 21421	(SLS21421)	1	Button guide	Sボタンガイド
5200 21441	(SLS21441)	1	Spring	Sボタンバネ
5200 21451	(SLS21451)	1	Shutter release rod	S棒
5200 2146T1	(SLS2146T1)	1	Release lock ring	Sロックリング
5200 21551	(SLS21551)	1	Lock disk	Sロック板
5200 21561	(SLS21561)	1	Hub	Sロック板軸
5200 21581	(SLS21581)	1	Spring	クリックボールバネ
5200 21591	(SLS21591)	1	Collar	ピンカラー
5200 24011	(SLS24011)	1	Mirror holder plate	ミラーホルダー
5200 2421T1	(SLS2421T1)	1	Holder bracket	ミラーピン台
5200 24281	(SLS24281)	2	Light baffle plate	Mボディ遮光板
5200 24291	(SLS24291)	2	Spring washer	遮光板バネ
5200 24311	(SLS24311)	1	Mirror arm L	ミラーアーム(左)
5200 24321	(SLS24321)	1	Mirror arm R	ミラーアーム(右)
5200 24331	(SLS24331)	1	Shoulder screw	ミラーアーム軸
5200 24341	(SLS24341)	3	Screw (P1.7×3)	ミラーアーム止ネジ
5200 24351	(SLS24351)	1	Screw B	ミラーアーム止ネジ
5200 24381	(SLS24381)	1	Collar	ミラーアーム右カラー
5200 24391	(SLS24391)	1	Shoulder screw	ミラーアーム右軸
5200 2451T2	(SLS2451T2)	1	Coupling arm	ミラー上クランク板
5200 24541	(SLS24541)	1	Screw	クランク板止ネジ
5200 24662	(SLS24662)	1	Spring	クランク板バネ
5200 29153	(SLS29153)	1	RA Leatherette	ミラーホルダー遮光紙
5200 29442	(SLS29442)	1	Light baffle	ボディ上革
S00211416	(PD1.4×1.6)	5	Screw	ミラーピン台止ネジ
S00211420	(PD1.4×2)	4	Screw	後カバー止ネジ
8W6×0.06		1	Washer	Sロック調整ワッシャ
SE-3		1	SE-ring	Sボタン止リング
S07010012	(B012)	1	Steel ball (φ1.2)	クリックボール

Remarks

Body Ass'y 10

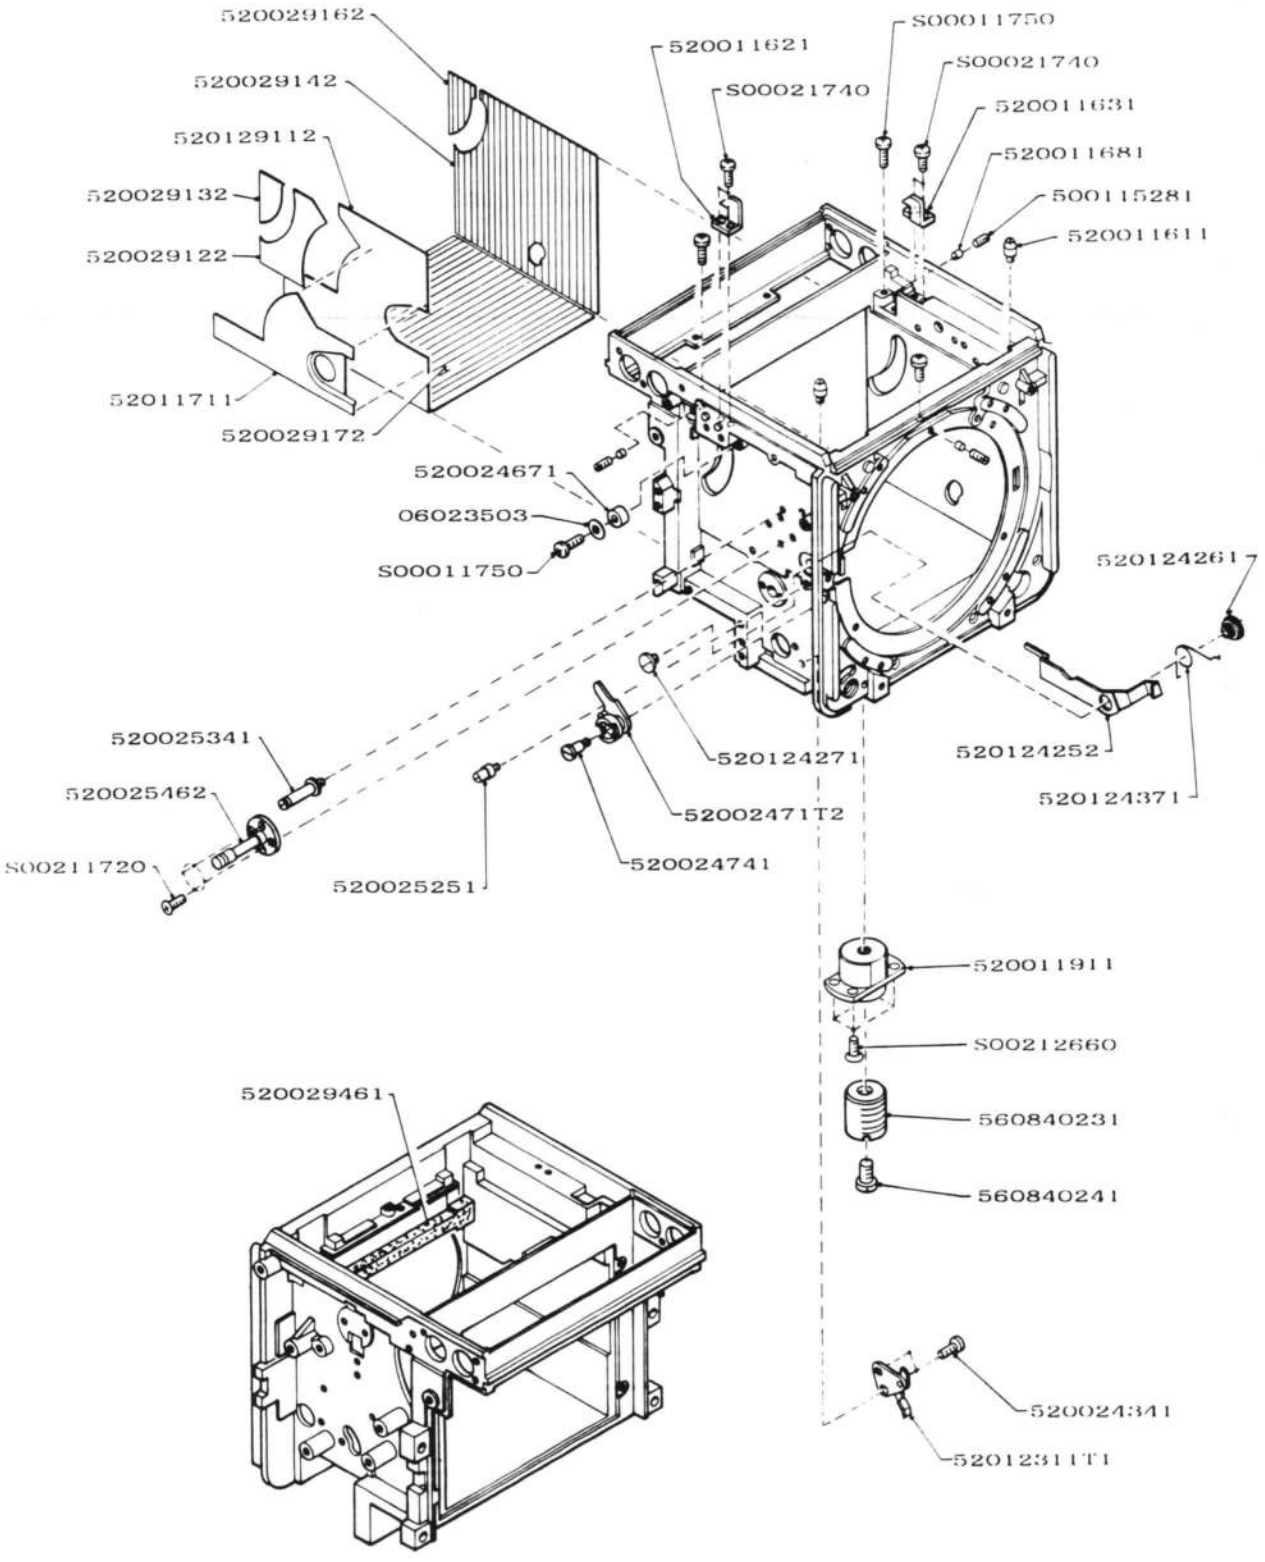
520029162
520029142
520129112
520029132
520029122
52011711
520029172
520011621
S00021740
S00011750
S00021740
520011631
520011681
500115281
520011611
520024671
06023503
S00011750
520124261
520124252
520124371
520025341
520025462
S00211720
520025251
520124271
52002471T2
520024741
520011911
S00212660
560840231
560840241
520029461
520024341
52012311T1

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 11711	(SLT11711)	1	Plate	左遮光紙台板
5201 2311T1	(SLT2311T1)	1	Self-timer lever	セルフレバー
5201 24252	(SLT24252)	1	Aperture coupling lever	絞り込みレバー
5201 24261	(SLT24261)	1	Hub	絞り込みレバー軸
5201 24271	(SLT24271)	1	Screw	絞り込みレバー軸ネジ
5201 24371	(SLT24371)	1	Spring	絞り込みレバーバネ
5201 29112	(SLT29112)	1	RA leatherette	左遮光紙(大)
5200 11611	(SLS11611)	2	Guide screw	プリズム枠ガイド
5200 11621	(SLS11621)	1	Latch L	プリズム枠掛金(左)
5200 11631	(SLS11631)	1	Latch R	プリズム枠掛金(右)
5200 11681	(SLS11681)	3	Stopper piece	ピント調整ネジ押え
5200 11911	(SLS11911)	1	Tripod socket	三脚止
5200 24341	(SLS24341)	2	Screw	止ネジ
5200 24671	(SLS24671)	1	Rubber cushion	ミラーダンパー
5200 2471T2	(SLS2471T2)	1	Mirror-up arm	MUレバー
5200 24741	(SLS24741)	1	Shaft	MUレバー軸
5200 25251	(SLS25251)	1	Guide screw	ミラー上げ爪ガイド
5200 25341	(SLS25341)	1	Shaft	ミラーバネ柱
5200 25462	(SLS25462)	1	Shaft	M3歯車軸
5200 29122	(SLS29122)	1	RA leatherette	左遮光紙(中)
5200 29132	(SLS29132)	1	RA leatherette	左遮光紙(小)
5200 29142	(SLS29142)	1	RA leatherette	右遮光紙(大)
5200 29162	(SLS29162)	1	RA leatherette	右遮光紙(小)
5200 29172	(SLS29172)	1	RA leatherette	下遮光紙
5200 29461	(SLS29461)	1	Sealing strip	ミラーモルト
5001 15281	(ARS1528)	3	Screw	ピント調整止ネジ
5608 40231	(EFC4023)	1	Tripod socket adapter	三脚ネジ
5608 40241	(EFC4024)	1	Screw	三脚ネジ止め
S00021740	(PB1.7×4Cr)	4	Screw	プリズム枠掛金止ネジ
S00011750	(PB1.7×5)	4	Screw	止ネジ
S00211720	(PD1.7×2)	4	Screw	M3歯車軸止ネジ
S00212660	(PD2.6×6)	4	Screw	三脚止め止ネジ
06023503	(5W2×0.3)	1	Washer	ミラーダンパー押え

Remarks

Body Ass'y 11

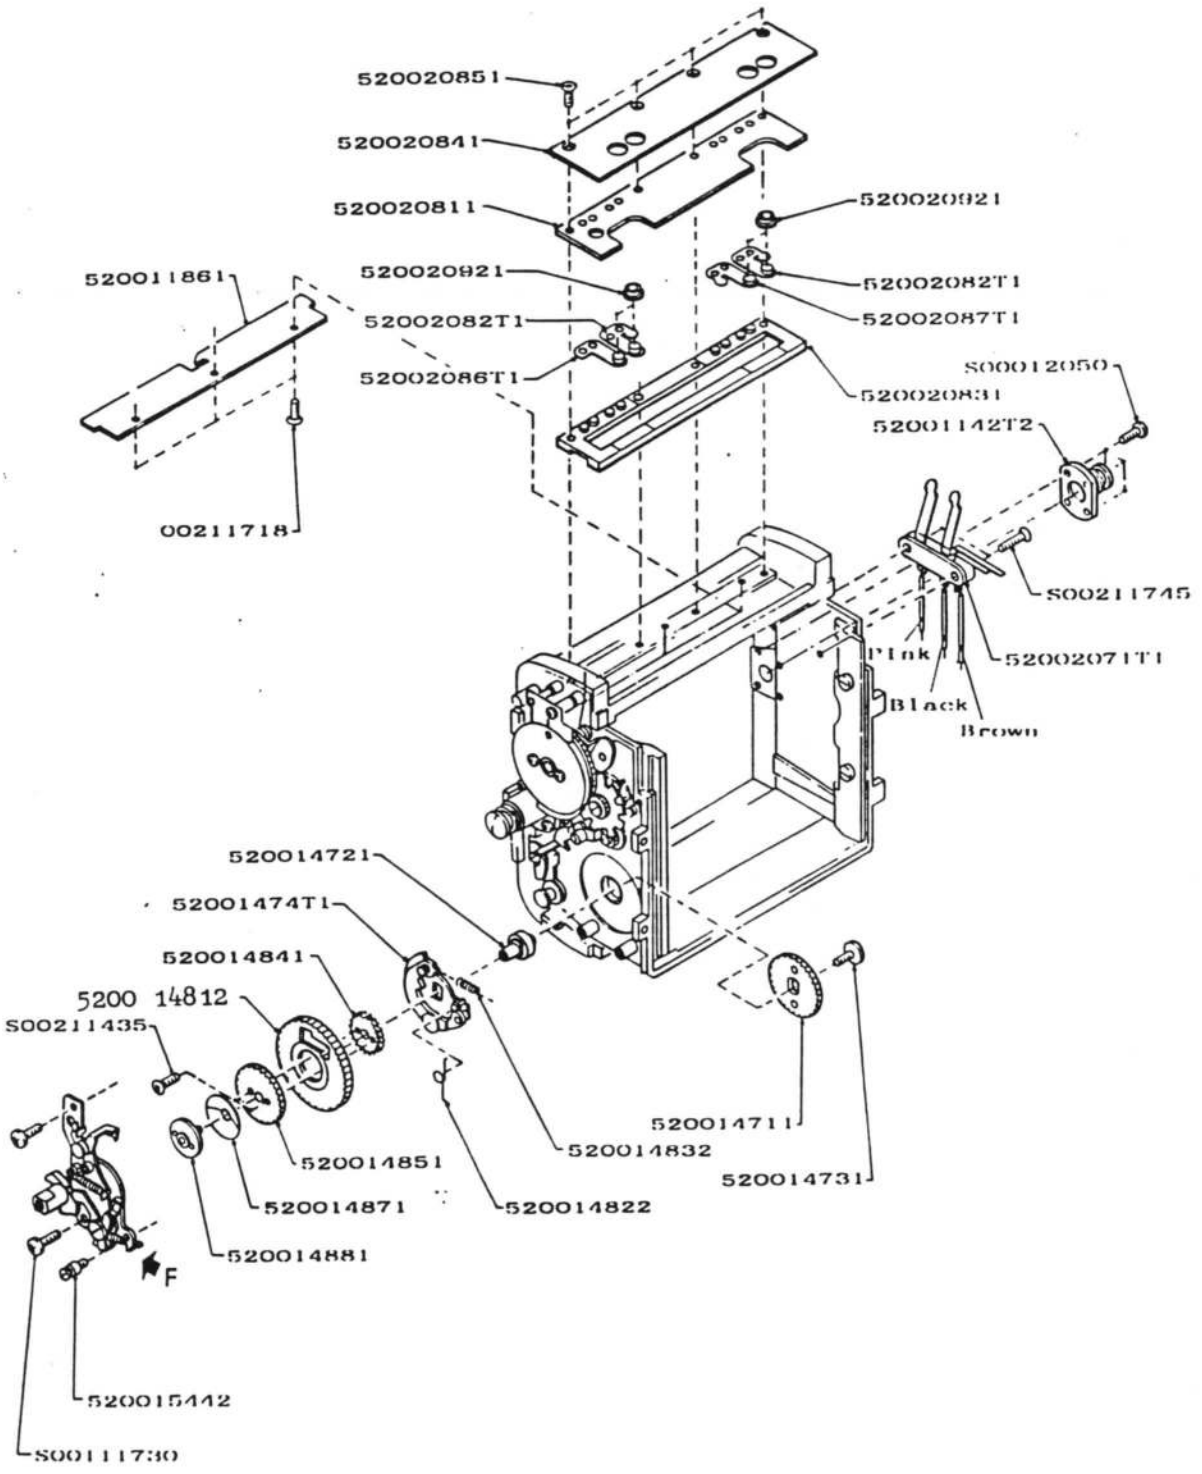
520020851
520020841
520020811
520020921
520020921
52002082T1
52002087T1
520011861
52002082T1
52002086T1
520020831
S00012050
52001142T2
00211718
S00211745
Pink
520020711
Black
Brown
520014721
52001474T1
520014841
5200 14812
S00211435
520014711
520014832
520014731
520014851
520014871
520014822
520014881
F
520015442
S00111730

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 1142T2		1	Strap lug R	吊金具(右)
5200 11861	(SLS11861)	1	Catch plate	裏蓋掛板
5200 14711	(SLS14711)	1	F4 Gear	F4歯車
5200 14721	(SLS14721)	1	Shaft	F4歯車軸
5200 14731	(SLS14731)	1	Screw	F4歯車止ネジ
5200 1474T1	(SLS1474T1)	1	Advancing clutch	Fクラッチ板
5200 14812		1	F clutch wheel	Fクラッチ爪車
5200 14822	(SLS14822)	1	Spring	Fクラッチレバーバネ
5200 14832	(SLS14832)	1	Spring	Fクラッチ押しバネ
5200 14841	(SLS14841)	1	Gear	Fクラッチ送り歯車
5200 14851	(SLS14851)	1	F3 Gear	F3歯車
5200 14871	(SLS14871)	1	Spring washer	F3歯車摩擦バネ
5200 14881	(SLS14881)	1	Screw	F3歯車摩擦バネ止
5200 15442	(SLS15442)	1	Anchor	バネ掛
5200 2071T1	(SLS2071T1)	1	Synchro contact	X接片台
5200 20811	(SLS20811)	1	Insulation plate	上部絶縁板
5200 2082T1	(SLS2082T1)	2	Contact	上部電極
5200 20831	(SLS20831)	1	Contact base plate	上部電極台
5200 20841	(SLS20841)	1	Contact cover	上部電極カバー
5200 20851	(SLS20851)	4	Screw (PD1.7×2.5)	上部電極カバー止ネジ
5200 2086T1	(SLS2086T1)	1	Earth plate	上部電極アース片
5200 2087T1	(SLS2087T1)	1	Contact	EXT電極
5200 20921	(SLS20921)	4	Collar	上部接点ブッシュ
S00012050	(PB2×5)	4	Screw	吊金具止ネジ
S00111730	(3PB1.7×3)	2	Screw	DX基板止ネジ
S00211435	(PD1.4×3.5)	2	Screw	F3歯車止ネジ
00211718	(PD1.7×1.8)	3	Screw	裏蓋掛板止ネジ
S00211745	(PD1.7×4.5)	2	Screw	X接片台止ネジ

※ DETAIL F Winding Base Gear Ass'y.....Page 18

Remarks

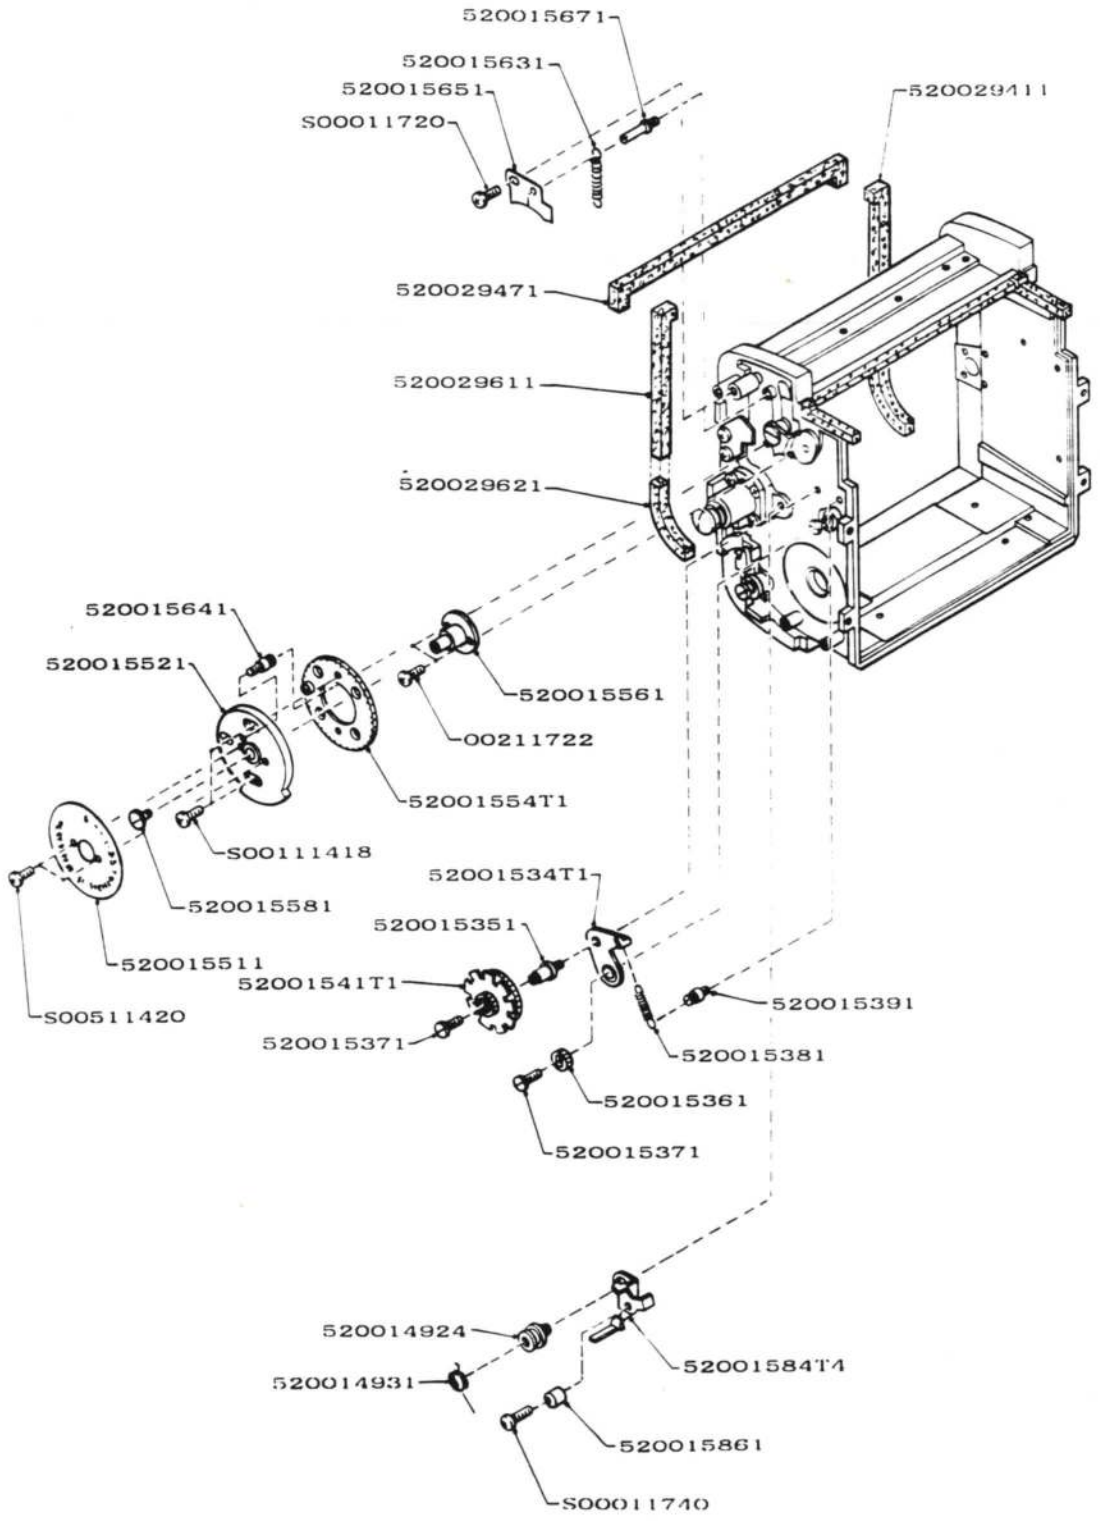
520015671
520015631
520015651
S00011720
520029411
520029471
520029611
520029621
520015641
520015521
520015561
00211722
52001554T1
S00111418
520015581
520015511
S00511420
52001534T1
520015351
52001541T1
520015371
520015391
520015381
520015361
520015371
520014924
520014931
52001584T4
520015861
S00011740

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 14924	(SLS14924)	1	Shaft	F止爪車
5200 14931	(SLS14931)	1	Spring	F止爪車バネ
5200 1534T1	(SLS1534T1)	1	Lever	C1歯車基板
5200 15351	(SLS15351)	1	Shaft	C1歯車基板軸
5200 15361	(SLS15361)	1	C2 Gear	C2歯車
5200 15371	(SLS15371)	2	Screw	止ネジ
5200 15381	(SLS15381)	1	Spring	C2歯車バネ
5200 15391	(SLS15391)	1	Anchor	C2歯車バネ掛
5200 1541T1	(SLS1541T1)	1	Counter dividing device	割出板
5200 15511	(SLS15511)	1	Counter	カウンター板
5200 15521	(SLS15521)	1	Counter base	カウンター台
5200 1554T1	(SLS1554T1)	1	Counter gear	カウンター歯車
5200 15561	(SLS15561)	1	Hub	カウンター軸
5200 15581	(SLS15581)	1	Screw	カウンター板止ネジ
5200 15631	(SLS15631)	1	Spring	カウンターバネ
5200 15641	(SLS15641)	1	Anchor	カウンターバネ掛
5200 15651	(SLS15651)	1	Indicator	指標
5200 15671	(SLS15671)	1	Guide screw	指標ガイド
5200 1584T4	(SLS1584T4)	1	Stop lever	割出爪
5200 15861	(SLS15861)	1	Collar	割出爪鋲
5200 29411	(SLS29411)	2	Sealing strip	Fボディ溝モルト
5200 29471	(SLS29471)	1	Sealing strip	Fボディモルト
5200 29611	(SLS29611)	1	Sealing strip	Fボディ溝モルト
5200 29621	(SLS29621)	1	Sealing strip	Fボディ溝モルト
S00011720	(PB1.7×2)	1	Screw	指標止ネジ
S00011740	(PB1.7×4)	1	Screw	割出爪止ネジ
S00111418	(3PB1.4×1.8)	2	Screw	C歯車止ネジ
00211722	(PD1.7×2.2)	2	Screw	カウンター軸止ネジ
S00511420	(3TB1.4×2)	2	Screw	カウンター板止ネジ

Remarks

Body Ass'y 13

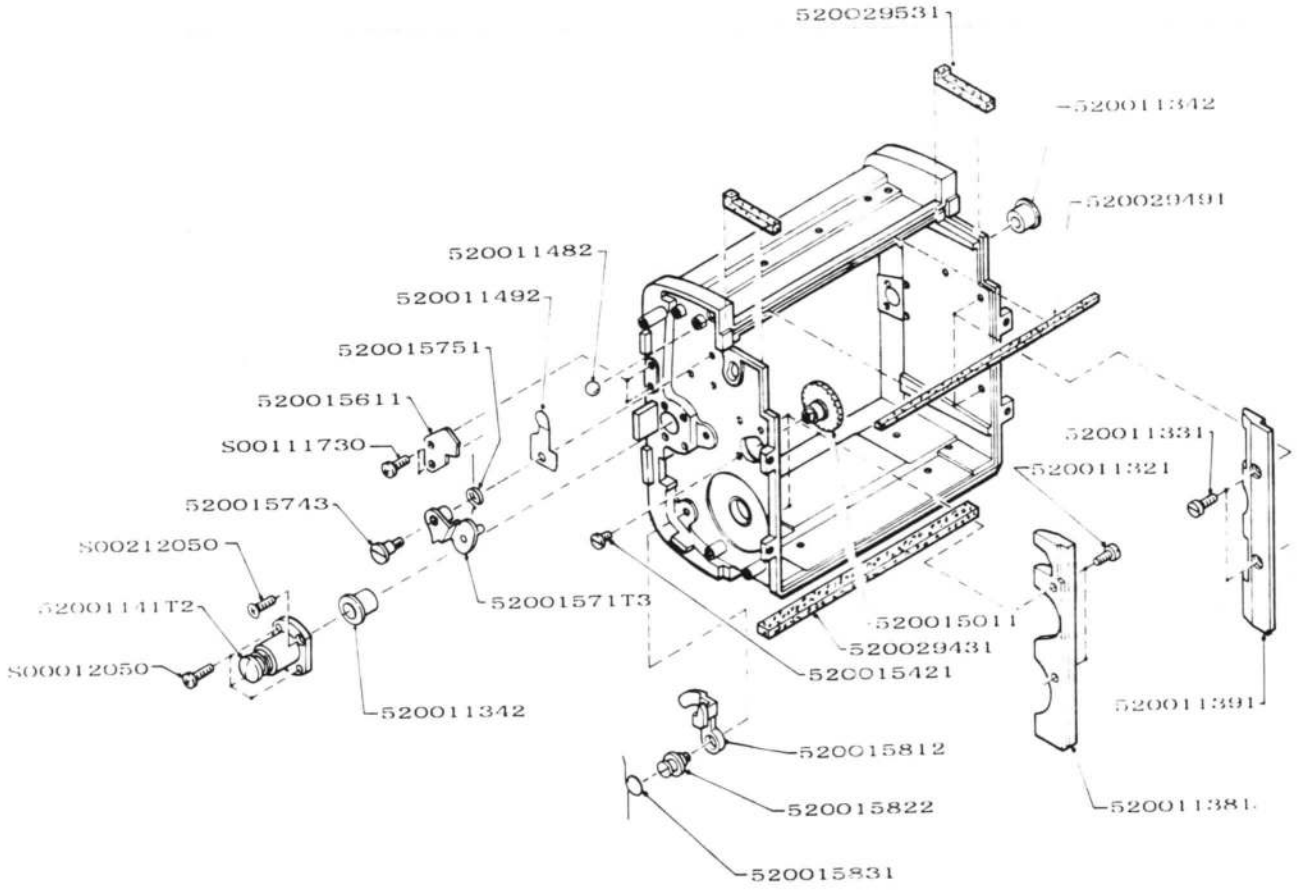
520029531
520011342
520029491
520011482
520011492
520015751
520015611
S00111730
520015743
S00212050
520011411T2
S00012050
520011342
52001571T3
520015011
520029431
520015421
520011331
520011321
520011391
520015812
520015822
520015831
520011381

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 11321	(SLS11321)	2	Guide screw L	Fホルダーガイド
5200 11331	(SLS11331)	2	Guide screw R	Fホルダーガイド
5200 11342	(SLS11342)	2	Lock guide	中枠ロックガイド
5200 11381	(SLS11381)	1	Guide plate L	F遮光枠(左)
5200 11391	(SLS11391)	1	Guide plate R	F遮光枠(右)
5200 1141T2		1	Strap lug L	吊金具(左)
5200 11482	(SLS11482)	1	Ball	F固定ボール
5200 11492	(SLS11492)	1	Leaf spring	F固定ボールバネ
5200 15011	(SLS15011)	1	C1 Gear	C1歯車
5200 15421	(SLS15421)	1	Screw	ストッパー
5200 15611	(SLS15611)	1	Stopper	カウンター戻し止
5200 1571T3	(SLS1571T3)	1	Change-over lever	カウンター切換板
5200 15743	(SLS15743)	1	Shoulder screw	カウンター切換板軸
5200 15751	(SLS15751)	1	Spring	カウンター切換板バネ
5200 15812	(SLS15812)	1	C release lever	カウンター解除レバー
5200 15822	(SLS15822)	1	Shoulder screw	解除レバー軸
5200 15831	(SLS15831)	1	Spring	解除レバーバネ
5200 29431	(SLS29431)	1	Sealing strip	Fボディ蝶番モルト
5200 29491	(SLS29491)	1	Sealing strip	Fボディ正面溝モルト
5200 29531	(SLS29531)	2	Sealing strip	ボディモルト(小)
S00012050	(PB2×5)	3	Screw	吊金具止ネジ
S00111730	(3PB1.7×3)	2	Screw	止ネジ
S00212050	(PD2×5)	1	Screw	吊金具止ネジ

Remarks

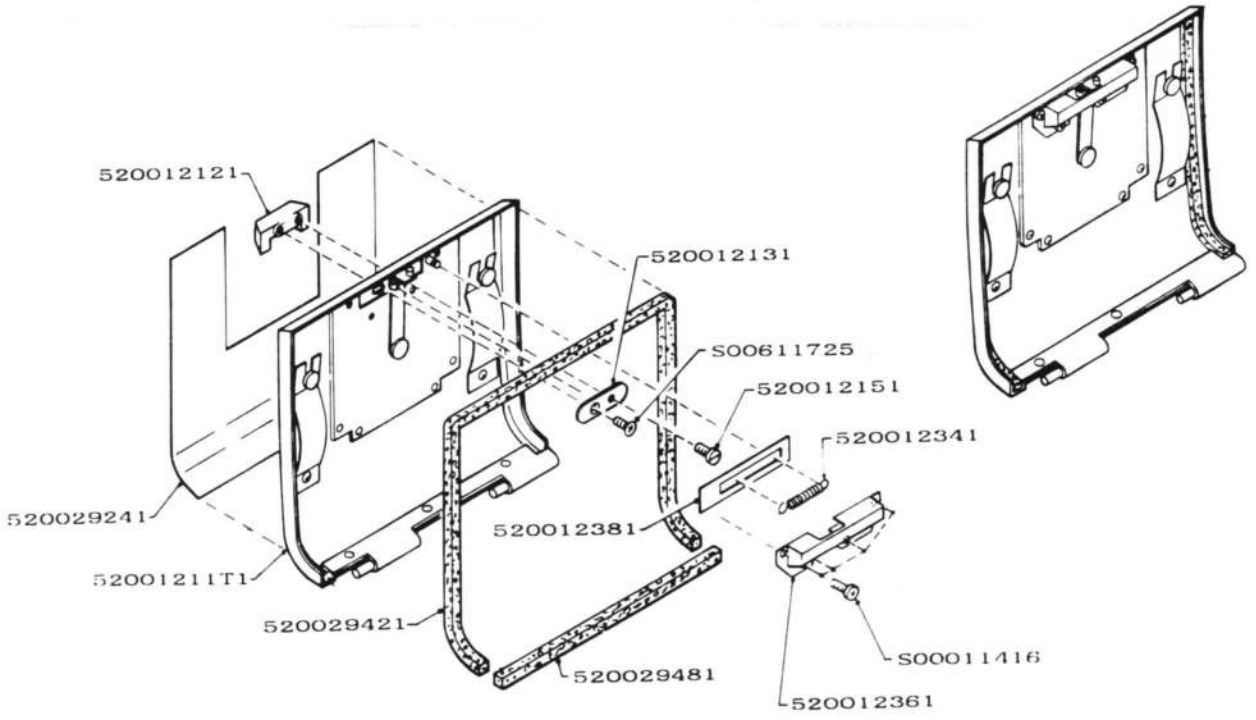
520012121
520012131
S00611725
520012151
520012341
520029241
520012381
52001211T1
520029421
520029481
S00011416
520012361

DETAIL A

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 1211T1	(SLS1211T1)	1	Back cover	裏蓋
5200 12121	(SLS12121)	1	Knob	裏蓋つまみ
5200 12131	(SLS12131)	1	Rataining plate	裏蓋つまみ止板
5200 12151	(SLS12151)	1	Screw	裏蓋つまみ止ネジ
5200 12341	(SLS12341)	1	Spring	裏蓋掛金バネ
5200 12361	(SLS12361)	1	Cover	裏蓋掛金ケース
5200 12381	(SLS12381)	1	Light tight seal	裏蓋掛金遮光幕
5200 29241	(SLS29241)	1	Leatherette	裏蓋革
5200 29421	(SLS29421)	1	Sealing strip	裏蓋モルト
5200 29481	(SLS29481)	1	Sealing strip	裏蓋蝶番モルト
S00011416	(PB1.4×1.6)	4	Screw	ケース止ネジ
S00611725	(TD1.7×2.5)	1	Screw	つまみ止板止ネジ

Remarks

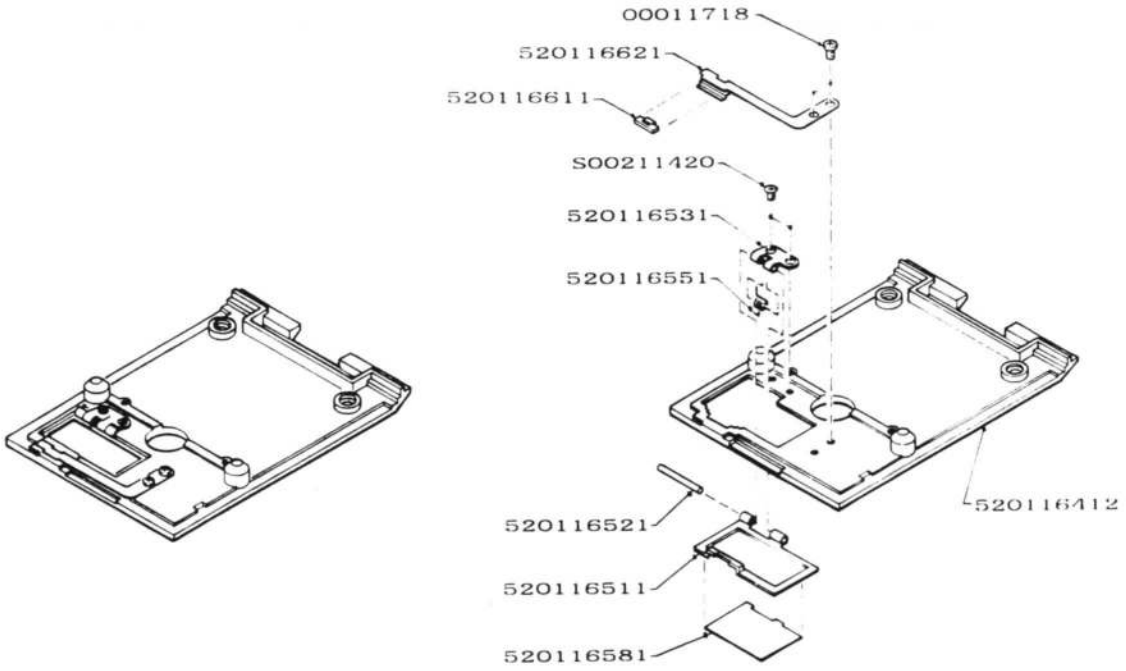
00011718
520116621
520116611
S0021420
520116531
520116551
520116412
520116521
520116511
520116581

DETAIL B

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 16412	(SLT16412)	1	Bottom cover	下部カバー
5201 16511	(SLT16511)	1	Battery chamber cover	電池蓋
5201 16521	(SLT16521)	1	Shaft	電池蓋軸
5201 16531	(SLT16531)	1	Hinge	電池蓋軸受
5201 16551	(SLT16551)	1	Spring	電池蓋バネ
5201 16581	(SLT16581)	1	Seal	電池蓋シール
5201 16611	(SLT16611)	1	Lock plate	電池蓋爪
5201 16621	(SLT16621)	1	Leaf spring	電池蓋爪カバー
00011718	(PB1.7×1.8)	2	Screw	電池蓋爪カバー止ネジ
S00211420	(PD1.4×2)	2	Screw	電池蓋軸受止ネジ

Remarks

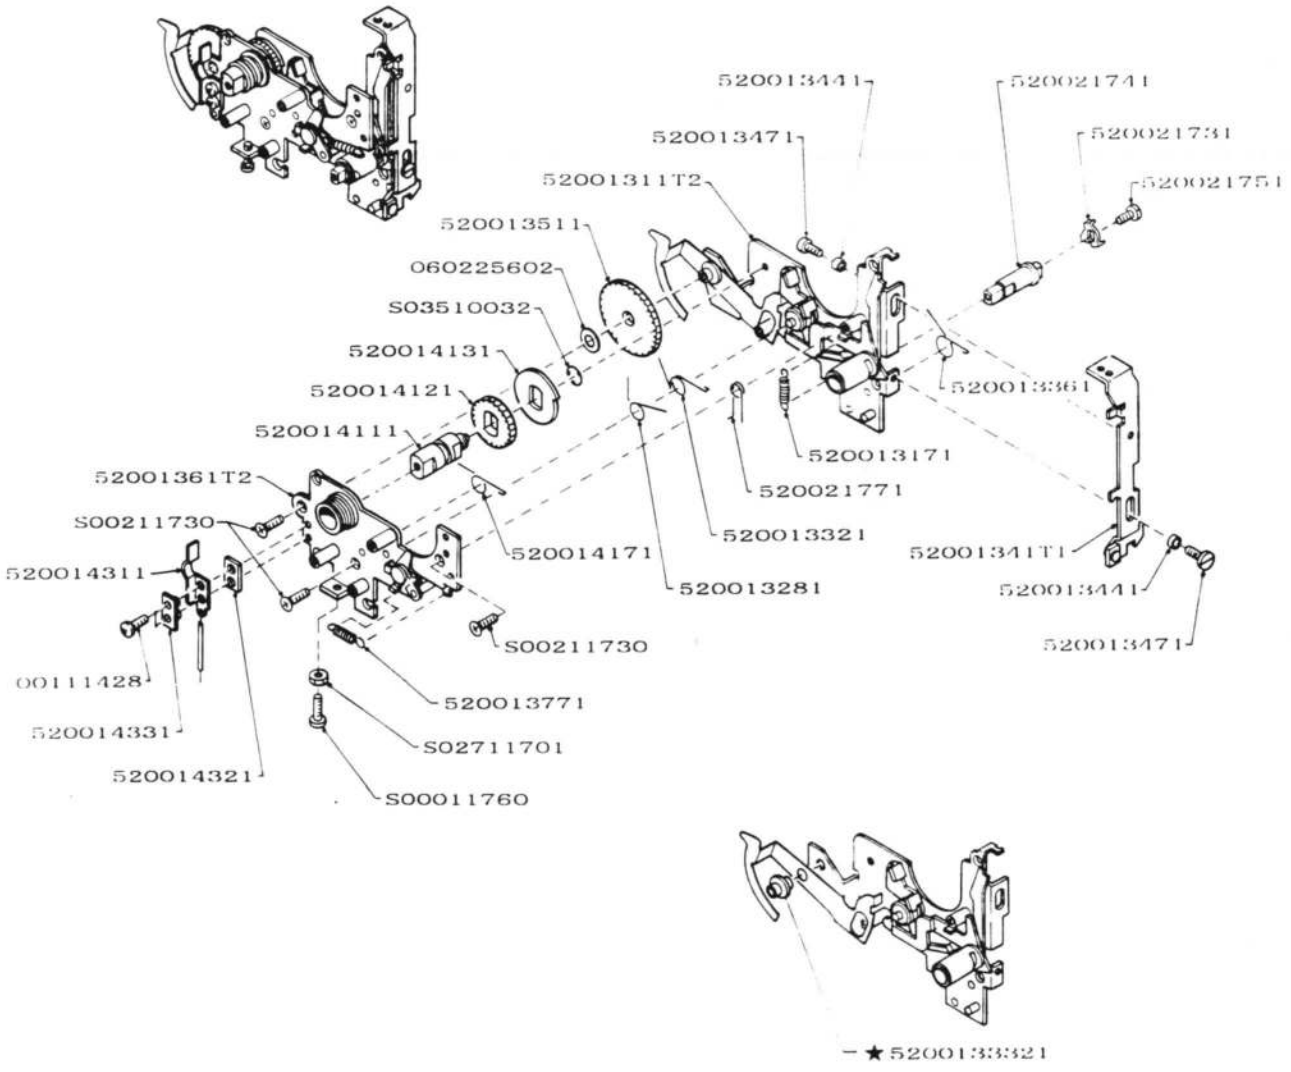
520013441
520021741
520013471
520021731
52001311T2
520021751
520013511
060225602
S03510032
520014131
520014121
520014111
52001361T2
S00211730
520014311
00111428
520014331
520014321
S00011760
520014171
520013281
520013321
520021771
520013171
520013361
520013441
520013471
S00211730
520013771
S02711701
520013333321

DETAIL C

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 1311T2	(SLS1311T2)	1	Winding base plate L	巻上下基板
5200 13171	(SLS13171)	1	Spring	R止レバーバネ
5200 13281	(SLS13281)	1	Spring	一回転止レバーバネ
5200 13321	(SLS13321)	1	Spring	巻止連動レバーバネ
5200 13361	(SLS13361)	1	Spring	MU解除レバーバネ
5200 1341T1	(SLS1341T1)	1	Shutter release bar	レリーズ板
5200 13441	(SLS13441)	2	Collar	レリーズ板ガイド
5200 13471	(SLS13471)	2	Shuolder screw	レリーズ板止ネジ
5200 13511	(SLS13511)	1	F2 Gear	F2歯車
5200 1361T2	(SLS1361T2)	1	Winding base plate M	巻上中基板
5200 13771	(SLS13771)	1	Spring	スイッチレバーバネ
5200 14111	(SLS14111)	1	Shaft	巻上軸
5200 14121	(SLS14121)	1	F1 Gear	F1歯車
5200 14131	(SLS14131)	1	Wind stop disk	一回転停止板
5200 14171	(SLS14171)	1	Spring	F1歯車ギチバネ
5200 14311	(SLS14311)	1	Trigger switch	Tスイッチ接片
5200 14321	(SLS14321)	1	Insulation washer	Tスイッチ絶縁座
5200 14331	(SLS14331)	1	Insulation plate	Tスイッチ絶縁板
5200 21731	(SLS21731)	1	MU cam	MUカム
5200 21741	(SLS21741)	1	Shaft	MUカム軸
5200 21751		1	Screw	MUカム止ネジ
5200 21771	(SLS21771)	1	Spring	MUクリックバネ
S00011760	(PB1.7×6)	1	Screw	MSCS調整ネジ
S00211730	(PD1.7×3)	3	Screw	巻上中基板止ネジ
00111428	(3PB1.4×2.8)	2	Screw	Tスイッチ止ネジ
06025602	(6W3×0.2)	1	Washer	F2歯車ワッシャ
S03510032	(E-32)	1	E-ring	止リング
S02711701	(N1.7)	1	Nut	MSCS調整ナット
★5200 13332		1	Hob	巻止め連動レバー軸

Remarks

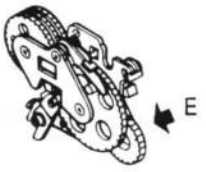
E

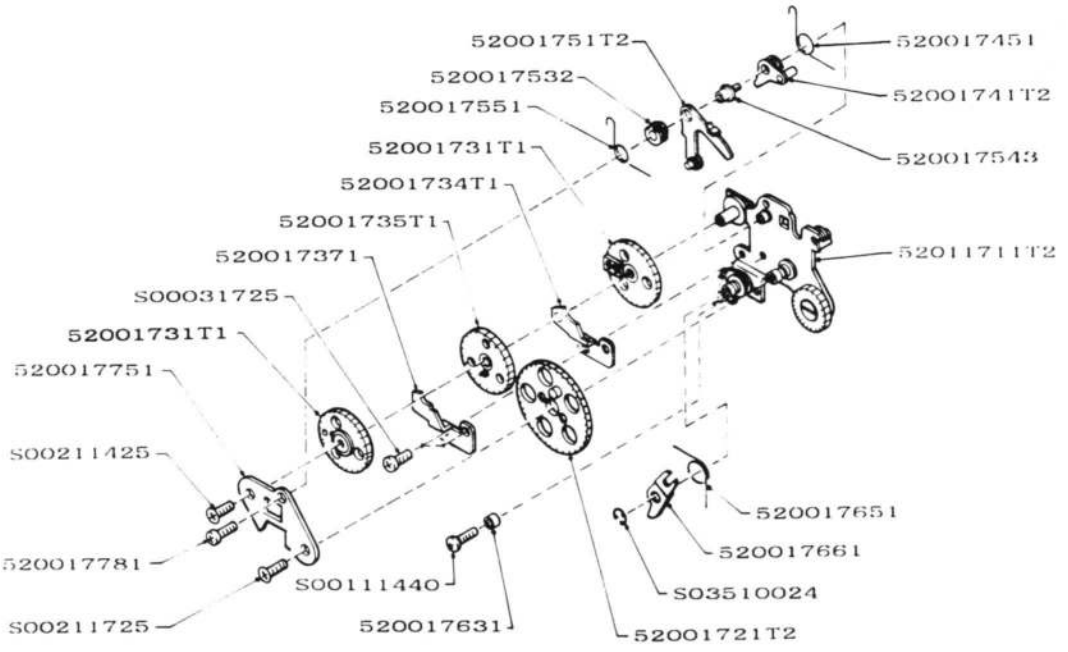
52001751T2
520017532
520017551
52001731T1
52001734T1
52001735T1
520017371
S00031725
52001731T1
520017751
S00211425
520017781
S00211725
S00111440
520017631
520017451
52001741T2
520017543
520017111T2
520017651
520017661
S03510024
520017211T2

DETAIL E

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 1711T2	(SLT1711T2)	1	Charging base L	ＭＳ巻上基板(下)
5200 1721T2	(SLS1721T2)	1	MS2 gear	ＭＳ２歯車
5200 1731T1	(SLS1731T1)	2	S1 gear	Ｓ１歯車
5200 1734T1	(SLS1734T1)	1	Stopper	Ｓ１歯車止め
5200 1735T1	(SLS1735T1)	1	S2 gear	Ｓ２歯車
5200 17371	(SLS17371)	1	Stopper	Ｓ３歯車止め
5200 1741T2	(SLS1741T2)	1	Hook	Ｓ１歯車掛金
5200 17451	(SLS17451)	1	Spring	Ｓ１歯車掛金バネ
5200 1751T2	(SLS1751T2)	1	Hook	Ｓ３歯車掛金
5200 17532	(SLS17532)	1	Hub	Ｓ３歯車掛金ハブ
5200 17543	(SLS17543)	1	Stud	Ｓ３歯車掛金軸
5200 17551	(SLS17551)	1	Spring	Ｓ３歯車掛金バネ
5200 17631	(SLS17631)	1	Eccentric collar	ピン
5200 17651	(SLS17651)	1	Spring	バネ
5200 17661	(SLS17661)	1	Trigger switch lever	Ｔスタートレバー
5200 17751	(SLS17751)	1	Charging base U	ＭＳ巻上基板(上)
5200 17781	(SLS17781)	1	Screw (※PB1.4×2.8)	ＭＳ巻上基板止ネジ
S00031725	(PB1.7×2.5Ni)	2	Screw	Ｓ３歯車止止ネジ
S00111440	(3PB1.4×4)	1	Screw	ピン止ネジ
S00211425	(PD1.4×2.5)	1	Screw	ＭＳ巻上基板止ネジ
S00211725	(PD1.7×2.5)	1	Screw	ＭＳ巻上基板止ネジ
S03510024	(E-24)	1	E-ring	止リング

Remarks

DETAIL "D" MS Clutch Disk Ass'y
& "F" Winding Base Gear Ass'y

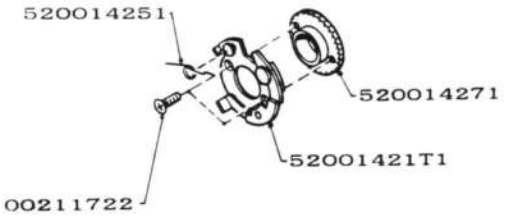

DETAIL D

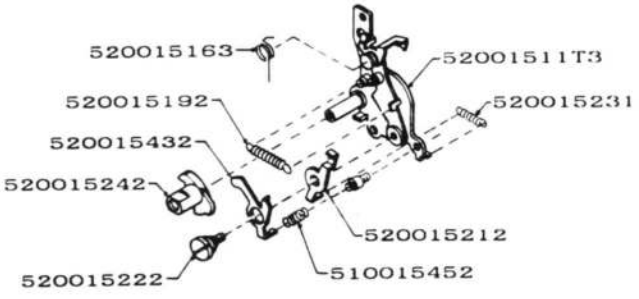

DETAIL F

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 1421T1	(SLS1421T1)	1	MS clutch disk	ＭＳクラッチ基板
5200 14251	(SLS14251)	1	Spring	ＭＳクラッチ爪バネ
5200 14271	(SLS14271)	1	MS gear	ＭＳＩ歯車
00211722	(PD1.7×2.2)	2	Screw	基板止ネジ
5200 1511T3	(SLS1511T3)	1	Change-over lever	ＤＸ基板
5200 15163	(SLS15163)	1	Spring	ＤＸ爪バネ
5200 15192	(SLS15192)	1	Spring	ＤＸ爪レバーバネ
5200 15212	(SLS15212)	1	Sub lever	ＤＸ補助レバー
5200 15222	(SLS15222)	1	Shoulder screw	ＤＸ補助レバー軸
5200 15231	(SLS15231)	1	Spring	ＤＸ補助レバーバネ
5200 15242	(SLS15242)	1	Cam	ＤＸカム
5200 15432	(SLS15432)	1	Click lever	ＤＸクリックレバー
5200 15452	(SLS15452)	1	Spring	クリックレバーバネ

Remarks

5201 16201 Side Panel R Ass'y

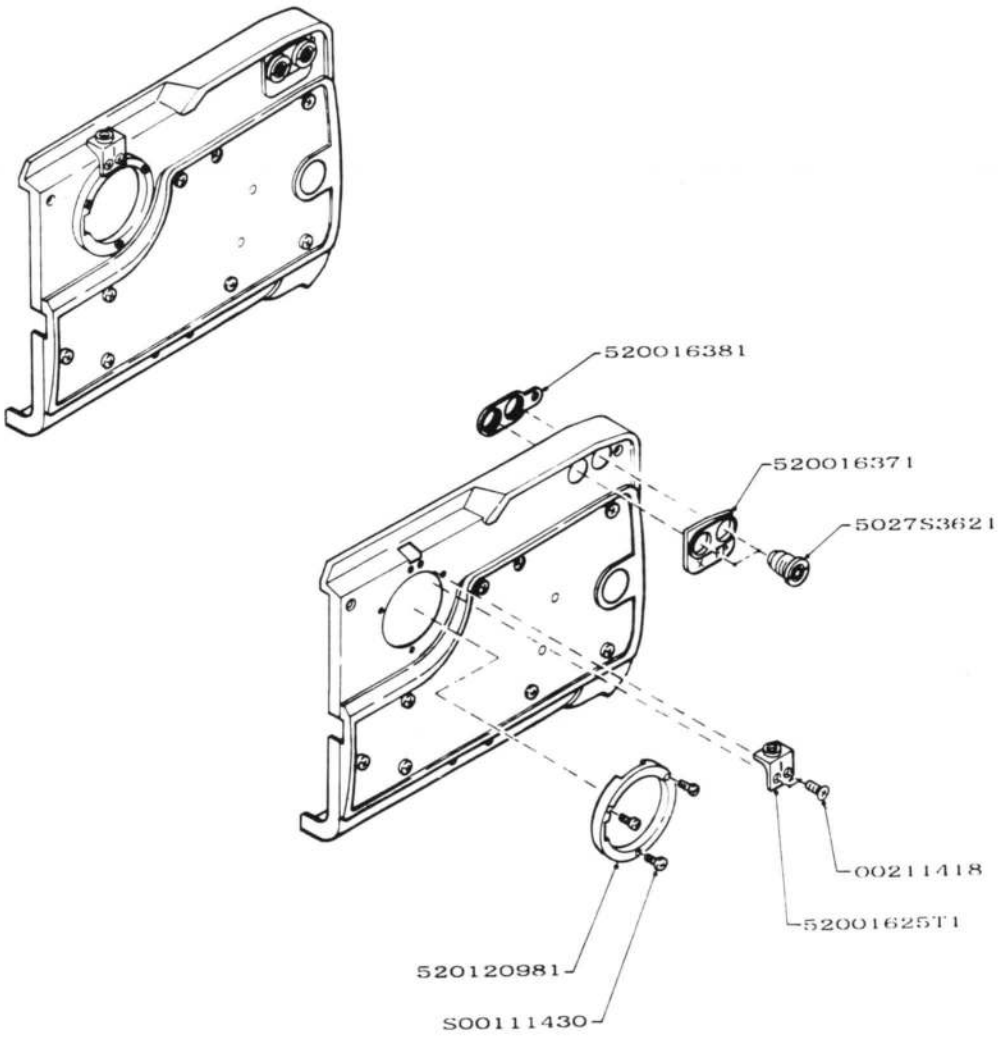

5200 16201

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 20981	(SLT20981)	1	Shutter dial ring	Tダイヤルリング
5200 1625T1	(SLS1625T1)	1	Shutter speed indicator	スピード指標
5200 16371	(SLS16371)	1	Terminal base	シンクロ座
5200 16381	(SLS16381)	1	Terminal nut	シンクロ止ナット
5027 S3621	(LE103-362K2)	2	Flash terminal	シンクロAss'y
S00111430	(3PB1.4×3)	3	Screw	止ネジ
00211418	(PD1.4×1.8)	2	Screw	スピード指標止ネジ

Remarks

5201 18001 Shutter Curtain Ass'y

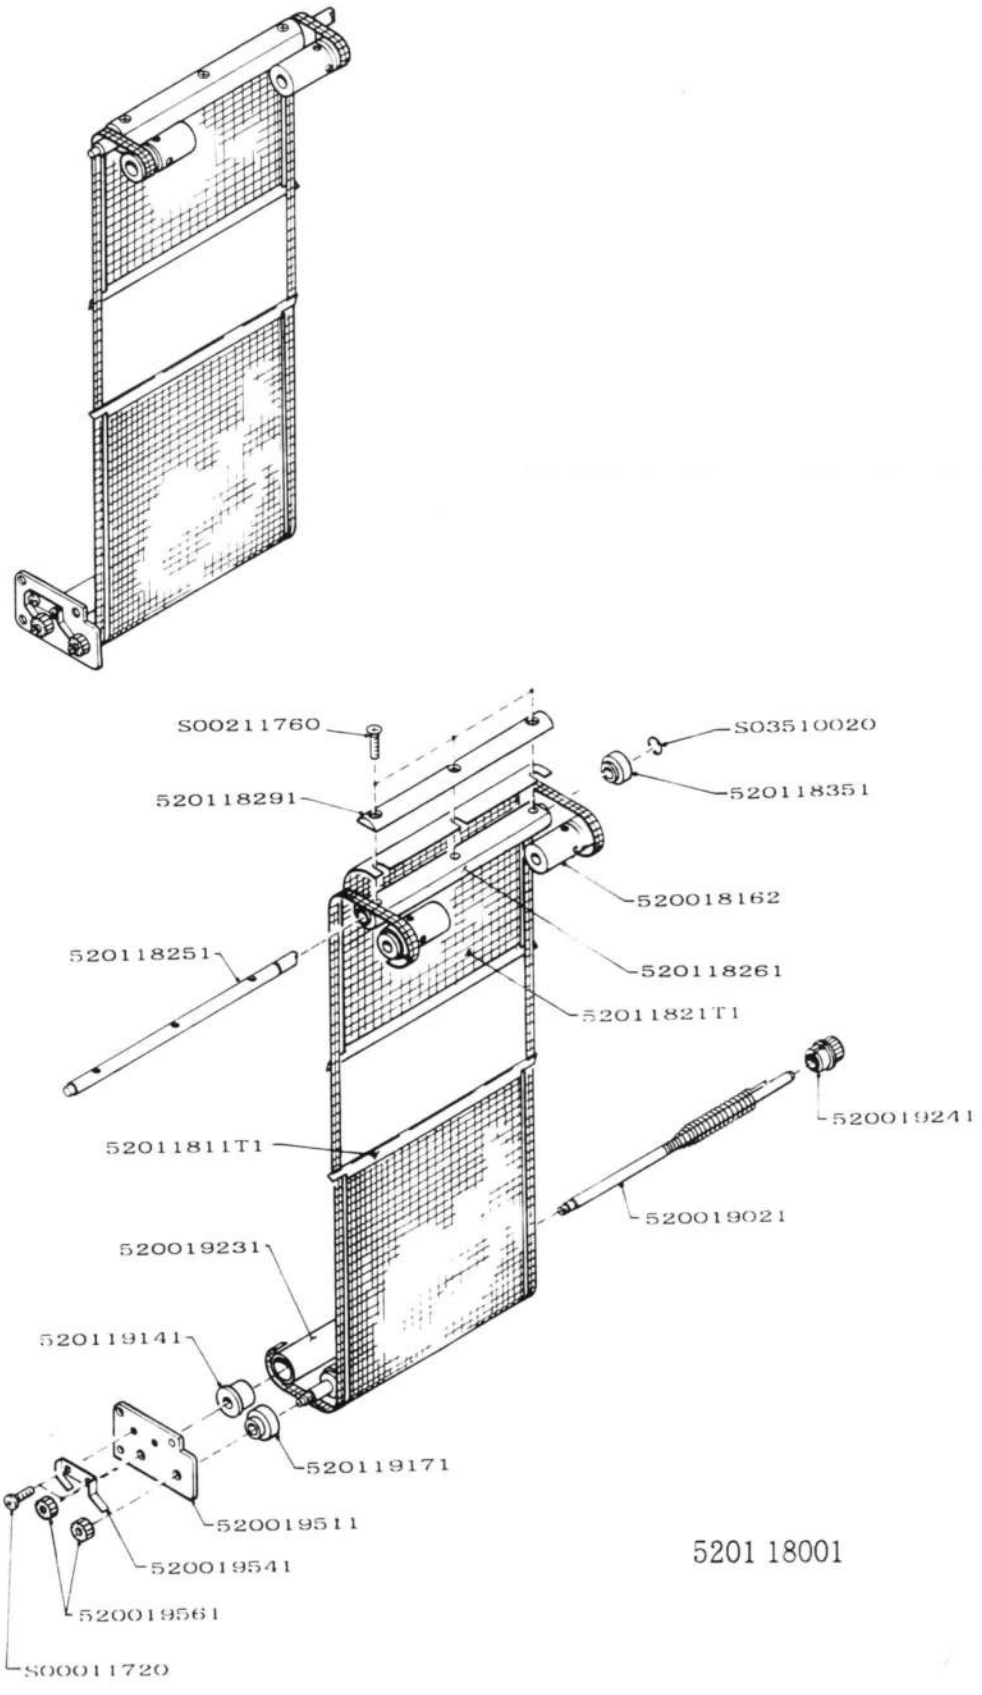

5201 18001

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 1811T1	(SLT1811T1)	1	First curtain Ass'y	先幕
5201 1821T1	(SLT1821T1)	1	Second curtain Ass'y	後幕
5201 18251	(SLT18251)	1	Shaft	後幕軸
5201 18261	(SLT18261)	1	Tube	後幕筒
5201 18291	(SLT18291)	1	Rataining plate	後幕止
5201 18351	(SLT18351)	1	Pulley A	後幕軸ローラー
5201 19141	(SLT19141)	1	Hub	スプリング軸受
5201 19171	(SLT19171)	1	Pulley B	スプリング軸ローラー
5200 18162	(SLS18162)	2	Ribbon pipe	先幕筒
5200 19021	(SLS19021)	1	Shaft	後幕スプリング
5200 19231	(SLS19231)	1	Tube	後幕スプリング筒
5200 19241	(SLS19241)	1	Wheel	後幕スプリング軸受
5200 19511	(SLS19511)	1	Base plate	スプリング軸右基板
5200 19541	(SLS19541)	1	Adjusting spring	調整スプリング
5200 19561	(SLS19561)	2	Adjusting gear	スプリング調整歯車
S00011720	(PB1.7×2)	2	Screw	調整スプリング止ネジ
S00211760	(PD1.7×6)	3	Screw	後幕筒止ネジ
S03510020	(E-20)	1	E-ring	後幕軸止リング

Remarks

M645 1000S

Film Advance Crank

Film Advance Crank Ass'y.....21

Film Advance Crank Ass'y

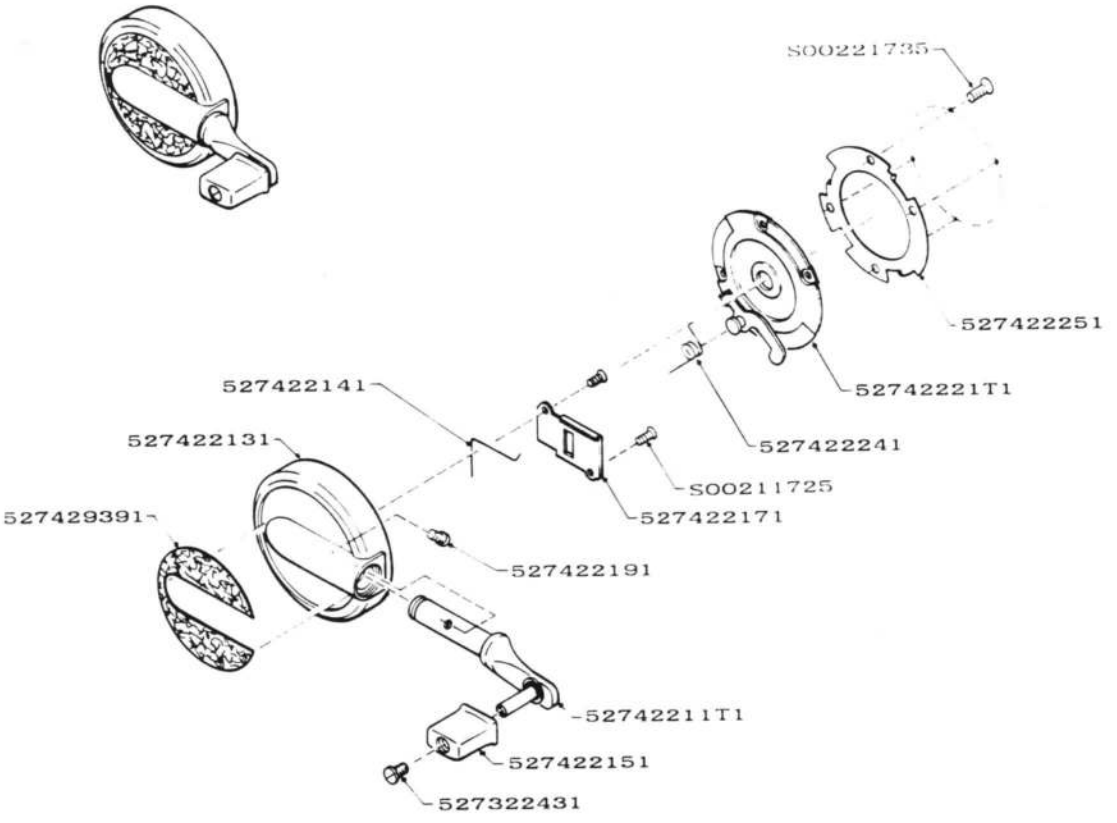

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5274 2211T1		1	Film advance crank	巻上レバー
5274 22131	(SLT22131)	1	Film advance crank lid	巻上レバー台
5274 22141	(SLT22141)	1	Spring	クリックバネ
5274 22151	(SLT22151)	1	Knob	巻上レバーつまみ
5274 22171	(SLT22171)	1	Angle plate	巻上レバー押え
5274 22191	(SLT22191)	1	Screw	巻上レバーピン
5274 2221T1	(SLT2221T1)	1	Base bisk	巻上レバー台板
5274 22241	(SLT22241)	1	Spring	ノブロックレバーバネ
5274 22251	(SLT22251)	1	Bayonet bisk	ノブバヨネ
5274 29391	(SLT29391)	1	Leatherette	巻上レバー台革
5273 22431	(SLS22431)	1	Screw	つまみ止ネジ
S00211725	(PD1.7×2.5)	2	Screw	押え止リング
S00221735	(PD1.7×3.5Cr)	4	Screw	ノブバヨネ止ネジ

Remarks

M645 1000S

120 Roll Film Insert & 220 Roll Film Insert

120 Roll Film Insert Ass'y.....22
DETAIL "A" Left Panel Ass'y.....23
DETAIL "B" Pressure Plate Ass'y & "C" Release Latch Ass'y...24
Exclusive use for 220 Roll Film Insert.....25

120 Roll Film Insert Ass'y

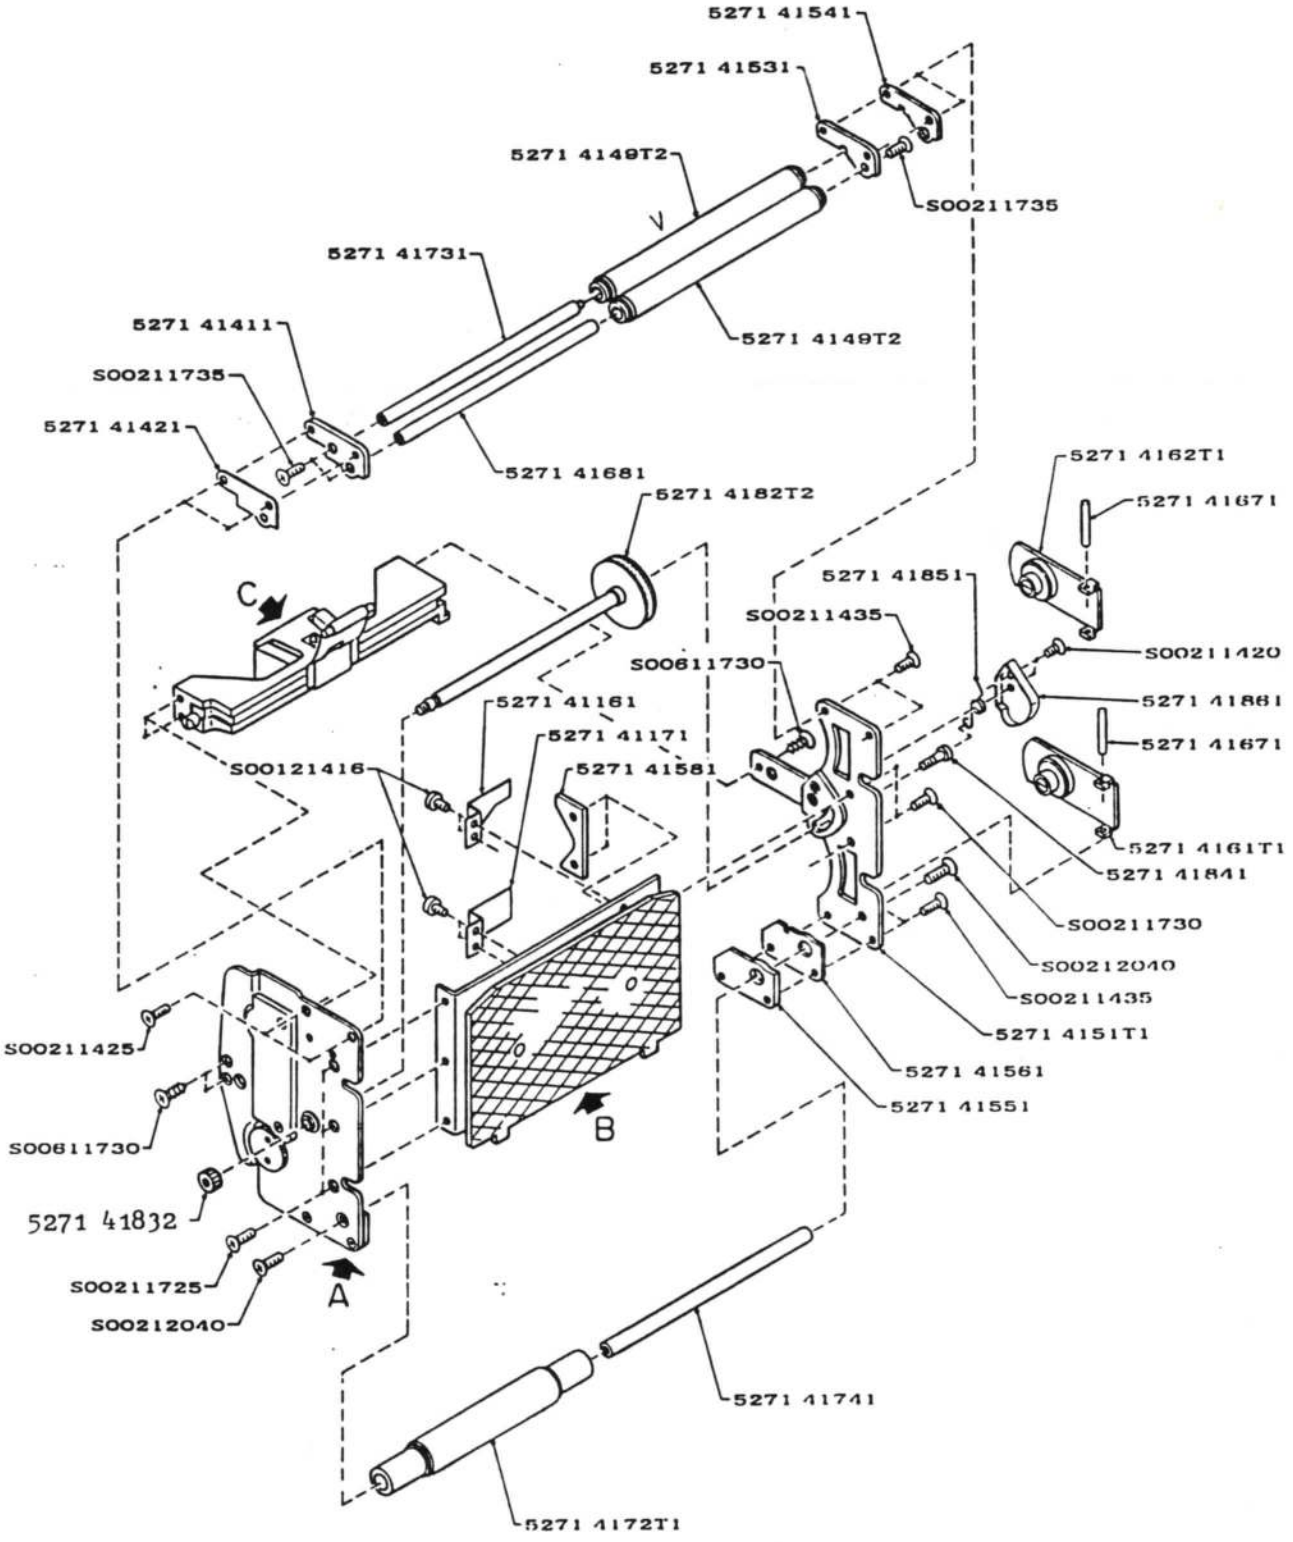

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5271 41161	(SLS41161)	1	Leaf spring U	SP受板バネ(上)
5271 41171	(SLS41171)	1	Leaf spring L	SP受板バネ(下)
5271 41411	(SLS41411)	1	Guide	Fガイド左上
5271 41421	(SLS41421)	1	Spacer	Fガイド左上座金
5271 4149T2	(SLS4149T2)	2	Roller	繰出しローラー
5271 4151T1	(SLS4151T1)	1	Right panel	右基板
5271 41531	(SLS41531)	1	Guide	Fガイド右上
5271 41541	(SLS41541)	1	Spacer	Fガイド右上座金
5271 41551	(SLS41551)	1	Guide	Fガイド右上
5271 41561	(SLS41561)	1	Spacer	Fガイド右上座金
5271 41581	(SLS41581)	1	Plate	右基板止め板
5271 4161T1	(SLS4161T1)	1	Spool clip L	SP受板下
5271 4162T1	(SLS4162T1)	1	Spool clip U	SP受板上
5271 41671	(SLS41671)	2	Shaft	SP受板軸
5271 41681	(SLS41681)	1	Shaft	繰出しローラー軸(前)
5271 4172T1	(SLS4172T1)	1	Film roller	巻取ローラー
5271 41731	(SLS41731)	1	Shaft	繰出しローラー軸(後)
5271 41741	(SLS41741)	1	Shaft	巻取ローラー軸
5271 4182T2	(SLS4182T2)	1	Friction wheel	摩擦コロ軸
5271 41832		1	Gear	摩擦コロ歯車
5271 41841	(SLS41841)	1	Screw	摩擦コロ軸ネジ
5271 41851	(SLS41851)	1	Spring	摩擦コロバネ
5271 41861	(SLS41861)	1	Cover	摩擦コロバネカバー
S00121416	(3PB1.4×1.6Cr)	4	Screw	SP受板バネ止ネジ
S00211420	(PD1.4×2)	2	Screw	カバー止ネジ
S00211425	(PD1.4×2.5)	2	Screw	Fガイド左上止ネジ
S00211435	(PD1.4×3.5)	4	Screw	Fガイド右上止ネジ
S00211725	(PD1.7×2.5)	3	Screw	左基板止ネジ
S00211730	(PD1.7×3)	2	Screw	右基板止ネジ
S00211735	(PD1.7×3.5)	3	Screw	ローラー軸止ネジ
S00212040	(PD2×4)	2	Screw	巻取ローラー止ネジ
S00611730	(TD1.7×3)	3	Screw	基板支え止ネジ

Remarks

Detail "A" Left Panel Ass'y

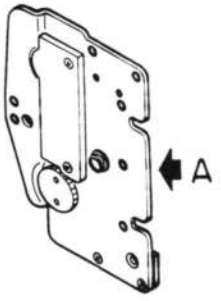

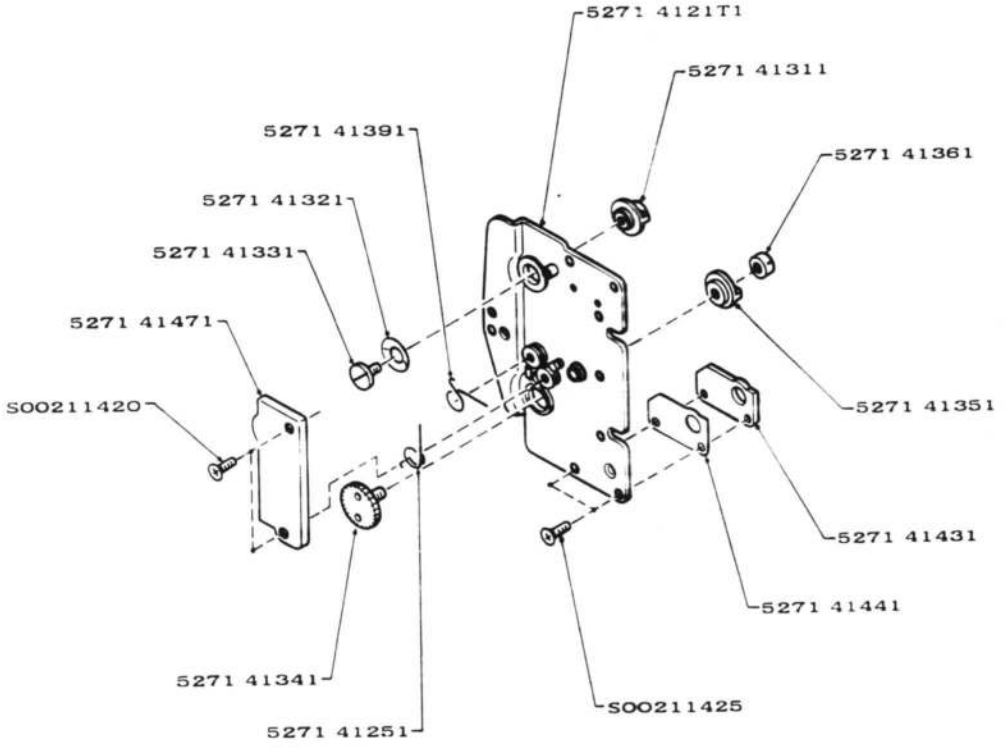

DETAIL "A"

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5271 4121T1	(SLS4121T1)	1	Left panel	左基板
5271 41251	(SLS41251)	1	Spring	SP歯車バネ
5271 41311	(SLS41311)	1	Spool holder	SP受け
5271 41321	(SLS41321)	1	Friction spring	SP受け摩擦バネ
5271 41331	(SLS41331)	1	Screw	SP受け止ネジ
5271 41341	(SLS41341)	1	Film spool gear	SP歯車
5271 41351	(SLS41351)	1	Film take-up spool	SP歯車爪
5271 41361	(SLS41361)	1	Nut	SP歯車ナット
5271 41391	(SLS41391)	1	Spring	SP歯車サブギチバネ
5271 41431	(SLS41431)	1	Guide	Fサイド左下
5271 41441	(SLS41441)	1	Spacer	Fサイド左下座金
5271 41471	(SLS41471)	1	Cover	左基板カバー
S00211420	(PD1.4×2)	2	Screw	左基板カバー止ネジ
S00211425	(PD1.4×2.5)	2	Screw	Fガイド左下止ネジ

Remarks

Detail "B" Pressure Plate Ass'y & "C" Release Latch Ass'y

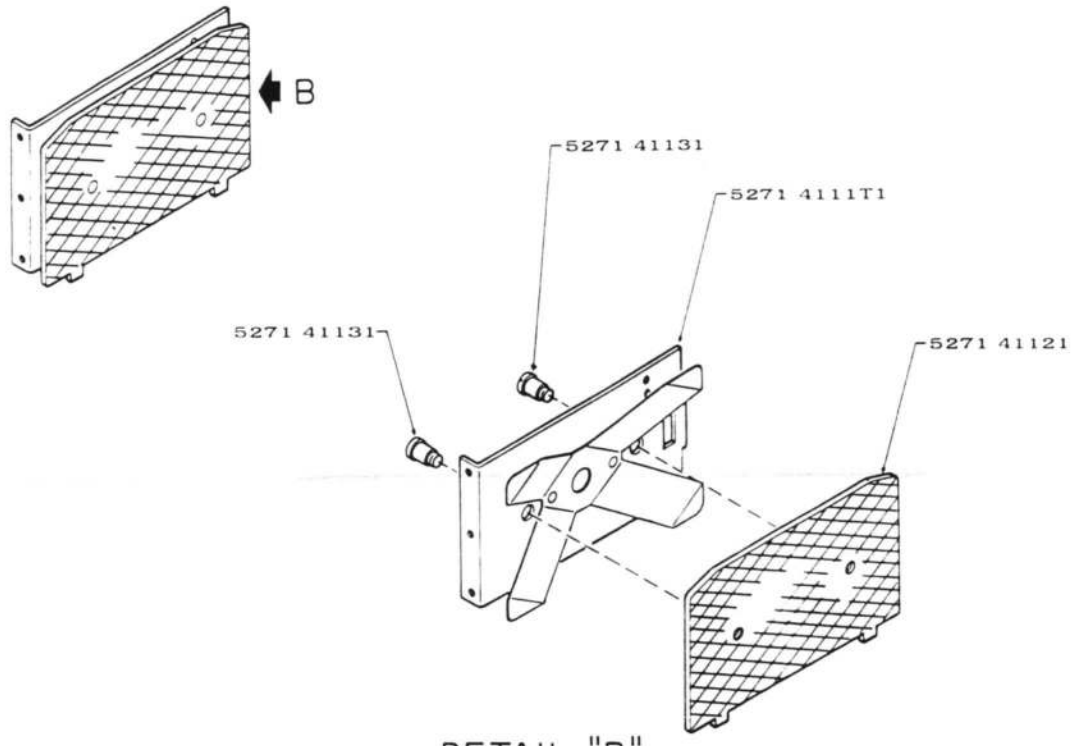

DETAIL "B"

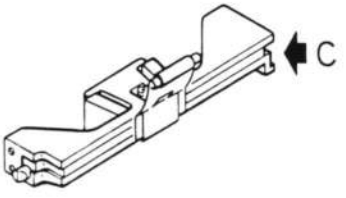

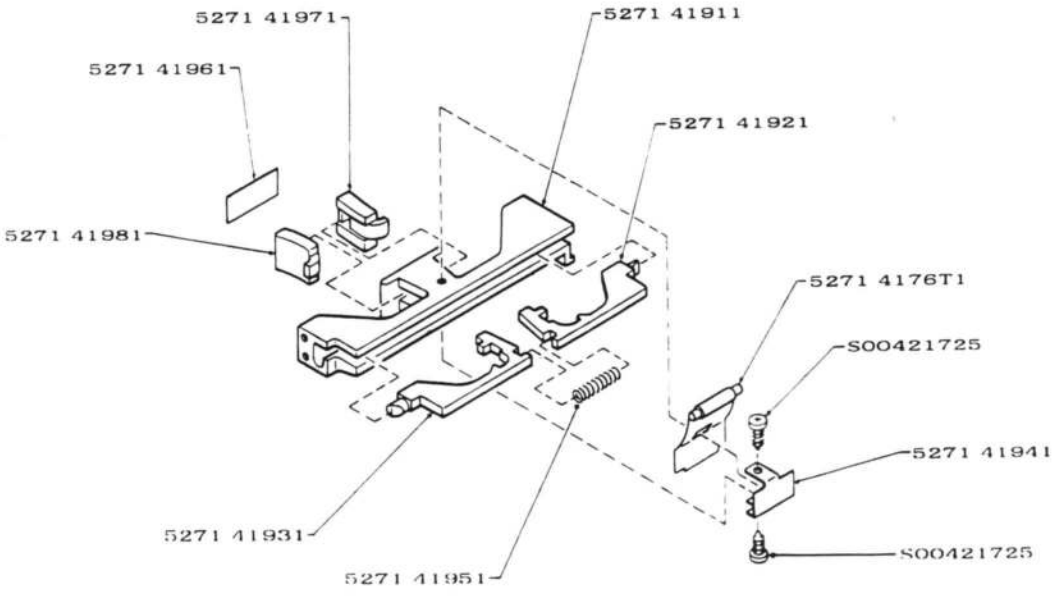

DETAIL "C"

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5271 4111T1	(SLS4111T1)	1	Base plate	H前基板
5271 41121	(SLS41121)	1	Pressure plate	圧板(120用)
5271 41131	(SLS41131)	2	Shoulder screw	圧板軸
5271 4176T1	(SLS4176T1)	1	T-spring	SPバネ
5271 41911	(SLS41911)	1	Release latch base	基板支え
5271 41921	(SLS41921)	1	Locking bracket	中枠ロック軸左
5271 41931	(SLS41931)	1	Locking bracket	中枠ロック軸右
5271 41941	(SLS41941)	1	Bracket	中枠ロック軸支え
5271 41951	(SLS41951)	1	Spring	ロック軸バネ
5271 41961	(SLS41961)	1	Index plate for 120	プレート(120用)
5271 41971	(SLS41971)	1	Release latch	中枠ツマミ左
5271 41981	(SLS41981)	1	Release latch	中枠ツマミ右
S00421725	(TB1.7×2.5Cr)	2	Screw	SPバネ止ネジ

Remarks

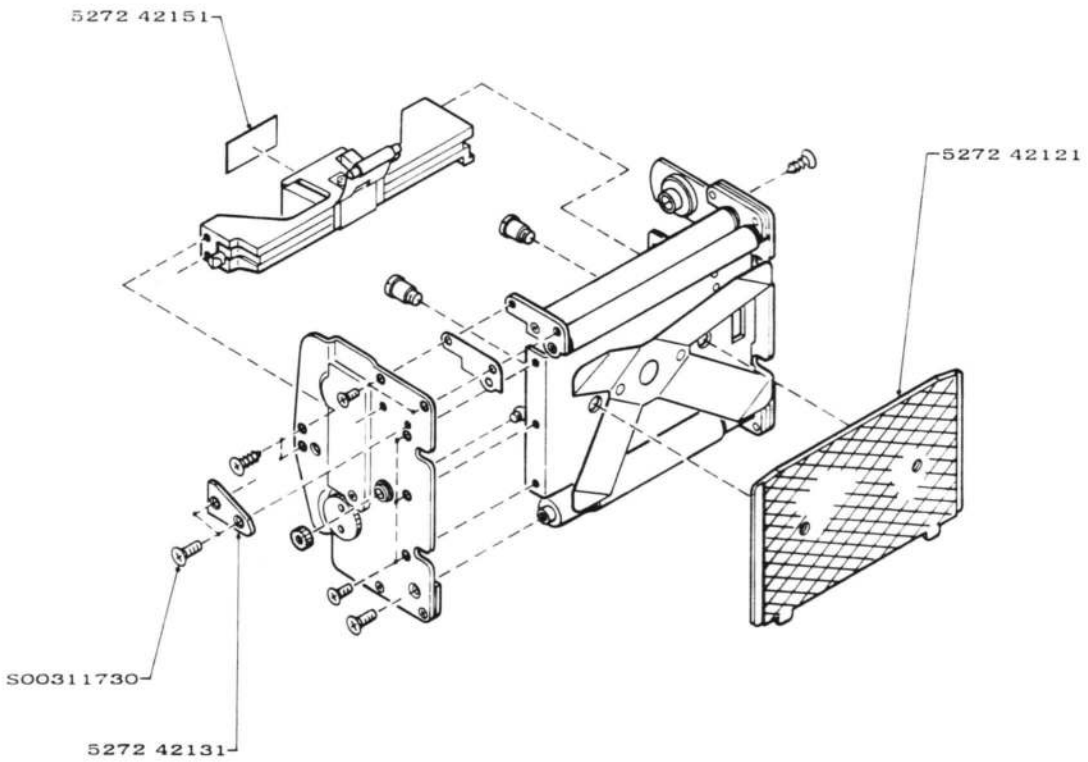
5272 42151
5272 42121
S00311730
5272 42131

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5272 42121	(SLS42121)	1	Pressure plate	圧板(220用)
5272 42131	(SLS42131)	1	Guide	220用フィルムカム
5272 42151	(SLS42151)	1	Index plate for 220	プレート(220用)
S00311730	(3PD1.7×3)	2	Screw	フィルムカム止ネジ

Remarks

M645

Camera Body

Body Ass'y 1.....26
Body Ass'y 2.....27
Body Ass'y 3.....28
Body Ass'y 4.....29
Body Ass'y 5.....30
Body Ass'y 6.....31
Body Ass'y 7.....32
Body Ass'y 8.....33
Body Ass'y 9.....34
Body Ass'y 10.....35
Body Ass'y 11.....36
Body Ass'y 12.....37
Body Ass'y 13.....38
5200 16201 Side Panel R Ass'y.....39

Catalog No. 1004101009

M645

Body Ass'y 1

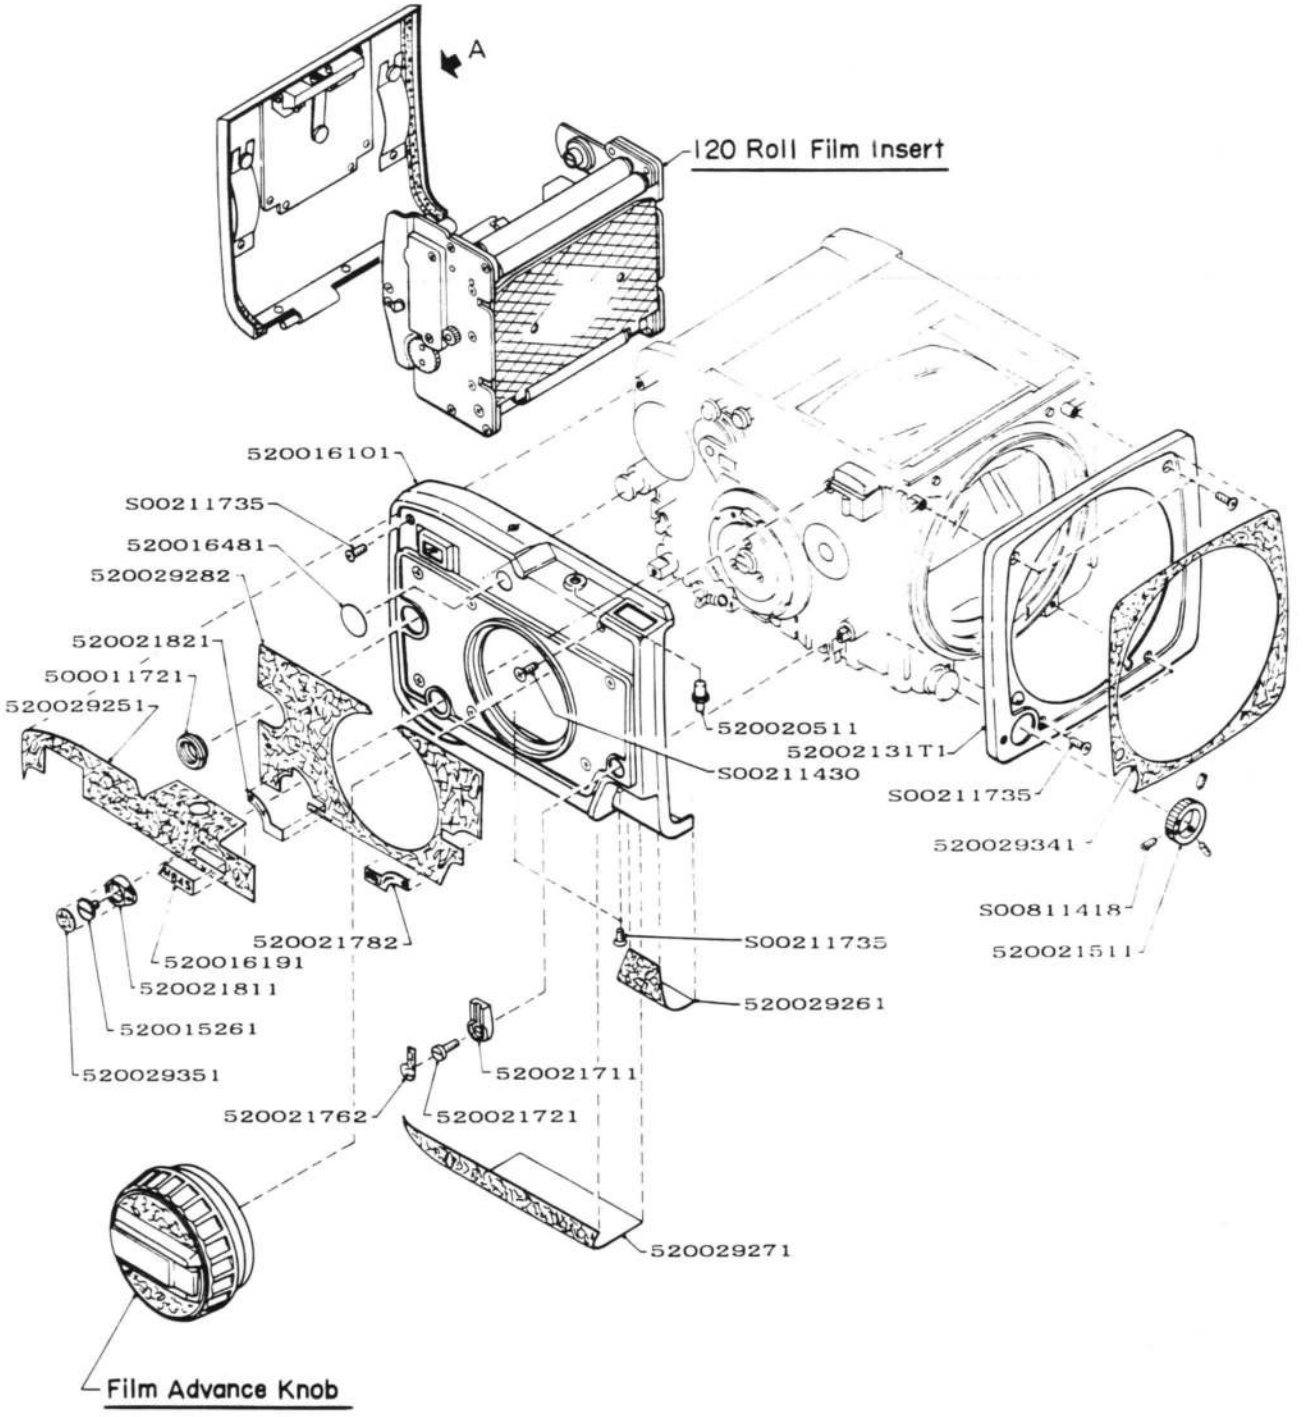

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 15261	(SLS15261)	1	Screw	ＤＸカム止ネジ
5200 16101	(SLS16101)	1	Side panel L	左側板
5200 16191	(SLS16191)	1	Name plate	Ｍ６４５マーク
5200 16481	(SLS16481)	1	Disk	左側板盲板
5200 20511	(SLS20511)	1	BC Button	ＢＣボタン
5200 2131T1	(SLS2131T1)	1	Front panel	前カバー
5200 21511	(SLS21511)	1	S Lock ring	Ｓロックつまみ
5200 21711	(SLS21711)	1	Mirror-up lever	ＭＵつまみ
5200 21721	(SLS21721)	1	Screw	ＭＵつまみ止ネジ
5200 21762	(SLS21762)	1	Leatherette C	ＭＵつまみ革
5200 21782	(SLS21782)	1	Indicator plate	ＭＵ表示板
5200 21811	(SLS21811)	1	M exposure lever	ＤＸつまみ
5200 21821	(SLS21821)	1	Indicator plate	ＤＸ表示板
5200 29261	(SLS29261)	1	Leatherette D	左側板革(下前)
5200 29271	(SLS29271)	1	Leatherette E	左側板革(下後)
5200 29282	(SLS29282)	1	Leatherette F	左側板飾革
5200 29251	(SLS29251)	1	Leatherette	左側板革(上)
5200 29341	(SLS29341)	1	Leatherette	前カバー革
5200 29351	(SLS29351)	1	Leatherette G	ＤＸつまみ革
5000 11721	(RS1172)	1	Nut	吊金具止ネジ
S00811418	(A1.4×1.8)	3	Screw	ロックつまみ止ネジ
S00211430	(PD1.4×3)	1	Screw	左側板止ネジ
S00211735	(PD1.7×3.5)	7	Screw	止ネジ

※ Film Aduvance Knob.....Page 40
※ 120 Roll Film Insert.....Page 22 Common use M645 1000S
※ DETAIL A Back Cover Ass'y.....Page 14 Common use M645 1000S

Remarks

M645

Body Ass'y 2

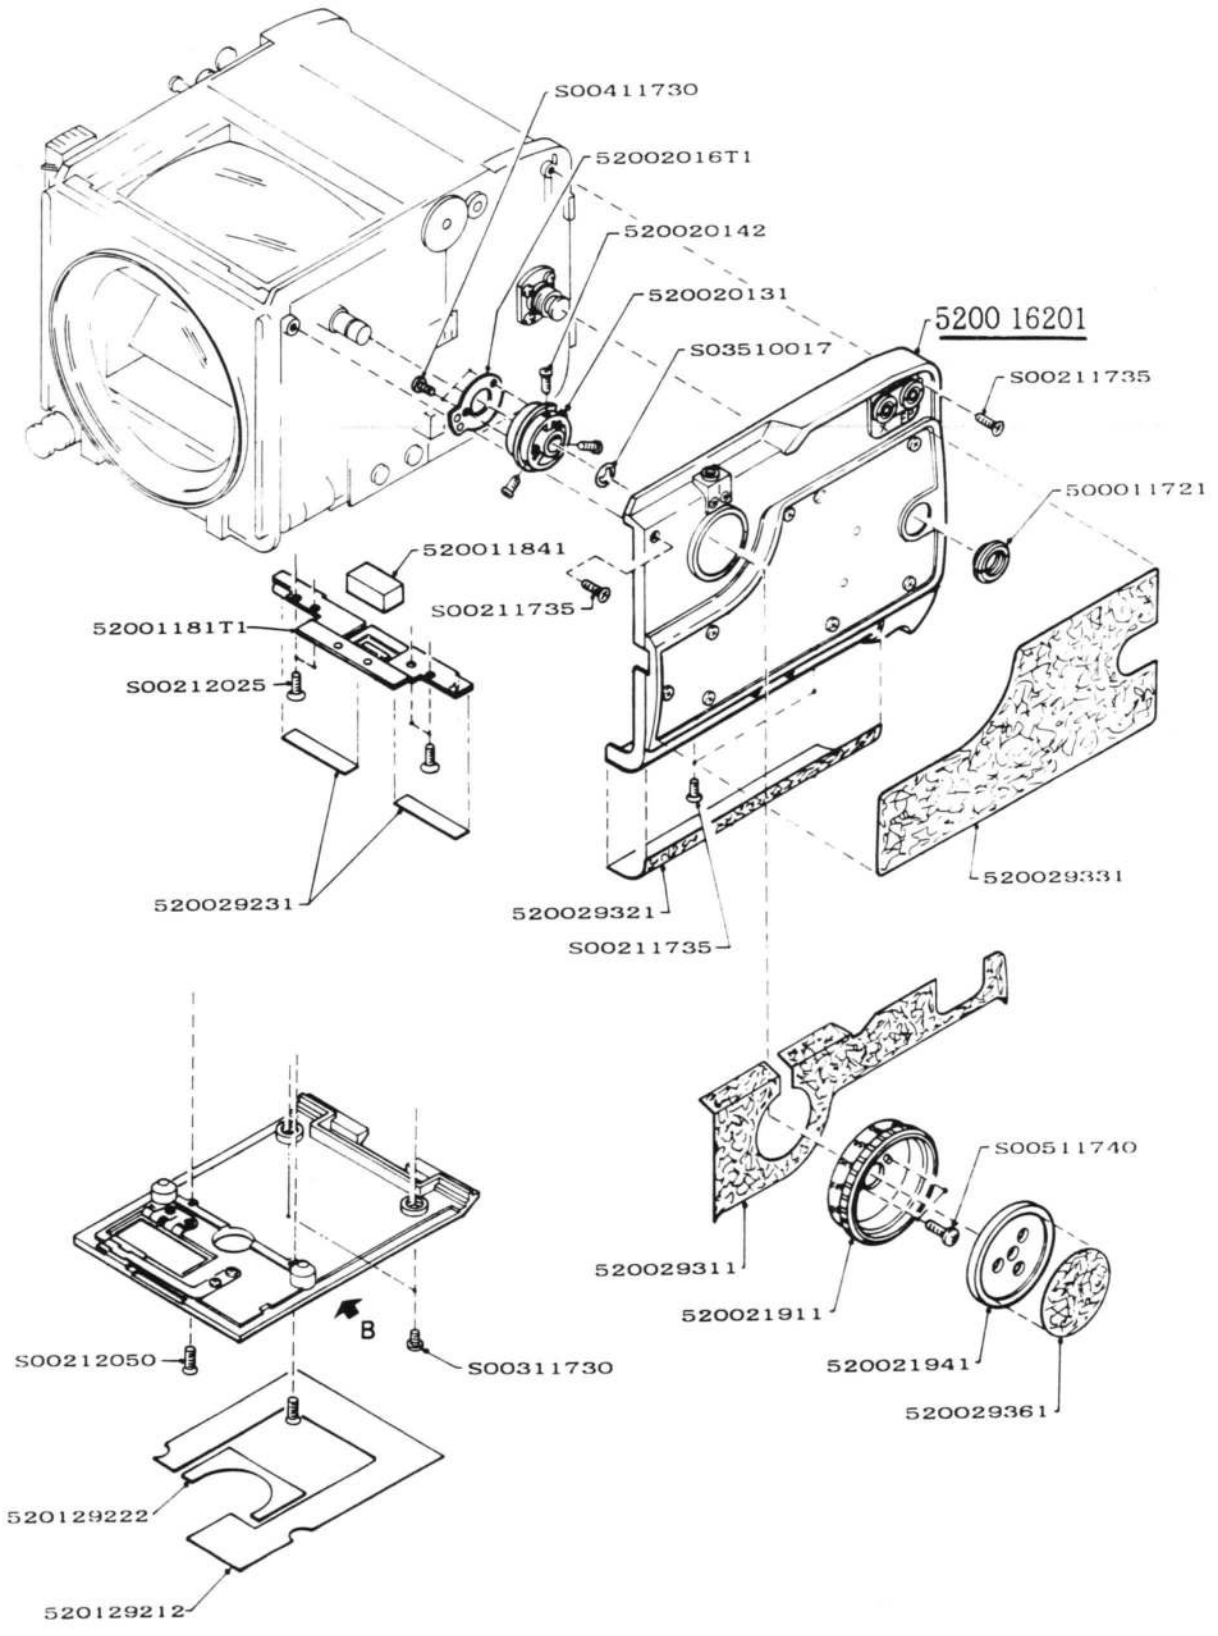

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 1181T1	(SLS1181T1)	1	Hinge plate	蝶番
5200 11841	(SLS11841)	1	Cushion	蝶番止金クッション
5200 16201	(SLS16201)	1	Side panel R	右側板Ass'y
5200 20131	(SLS20131)	1	Shutter dial hub	Tダイヤルハブ
5200 20142	(SLS20142)	3	Screw	ダイヤルハブ止ネジ
5200 2016T1	(SLS2016T1)	1	Brush disk	Tブラシ台板
5200 21911	(SLS21911)	1	Shutter speed dial	Tダイヤル
5200 21941	(SLS21941)	1	Disk	Tダイヤルプレート
5200 29231	(SLS29231)	2	Leatherette	ボディ蝶番革
5200 29311	(SLS29311)	1	Leatherette	右側板革(上)
5200 29321	(SLS29321)	1	Leatherette	右側板革(下)
5200 29331	(SLS29331)	1	Leatherette	右側板飾り革
5200 29361	(SLS29361)	1	Leatherette	Tダイヤル革
5201 29212	(SLT29212)	1	Leatherette	下部カバー革(大)
5201 29222	(SLT29222)	1	Leatherette	下部カバー革(小)
5000 11721	(RS1172)	1	Nut	吊金具台ナット
S00211735	(PD1.7×3.5)	4	Screw	左側板止ネジ
S00212025	(PD2×2.5)	4	Screw	蝶番止ネジ
S00212050	(PD2×5)	2	Screw	下部カバー止ネジ前
S00311730	(3PD1.7×3)	2	Screw	下部カバー止ネジ後
S00411730	(TB1.7×3)	2	Screw	Tブラシ台板止ネジ
S00511740	(3TB1.7×4)	2	Screw	Tダイヤル止ネジ
S03510017	(E-17)	1	E-ring	Tダイヤル止リング

※ DETAIL B Bottom Cover Ass'y.....Page 15 Common use M645 1000S

※ 5200 16201 Side Panel R Ass'y.....Page 39

Remarks

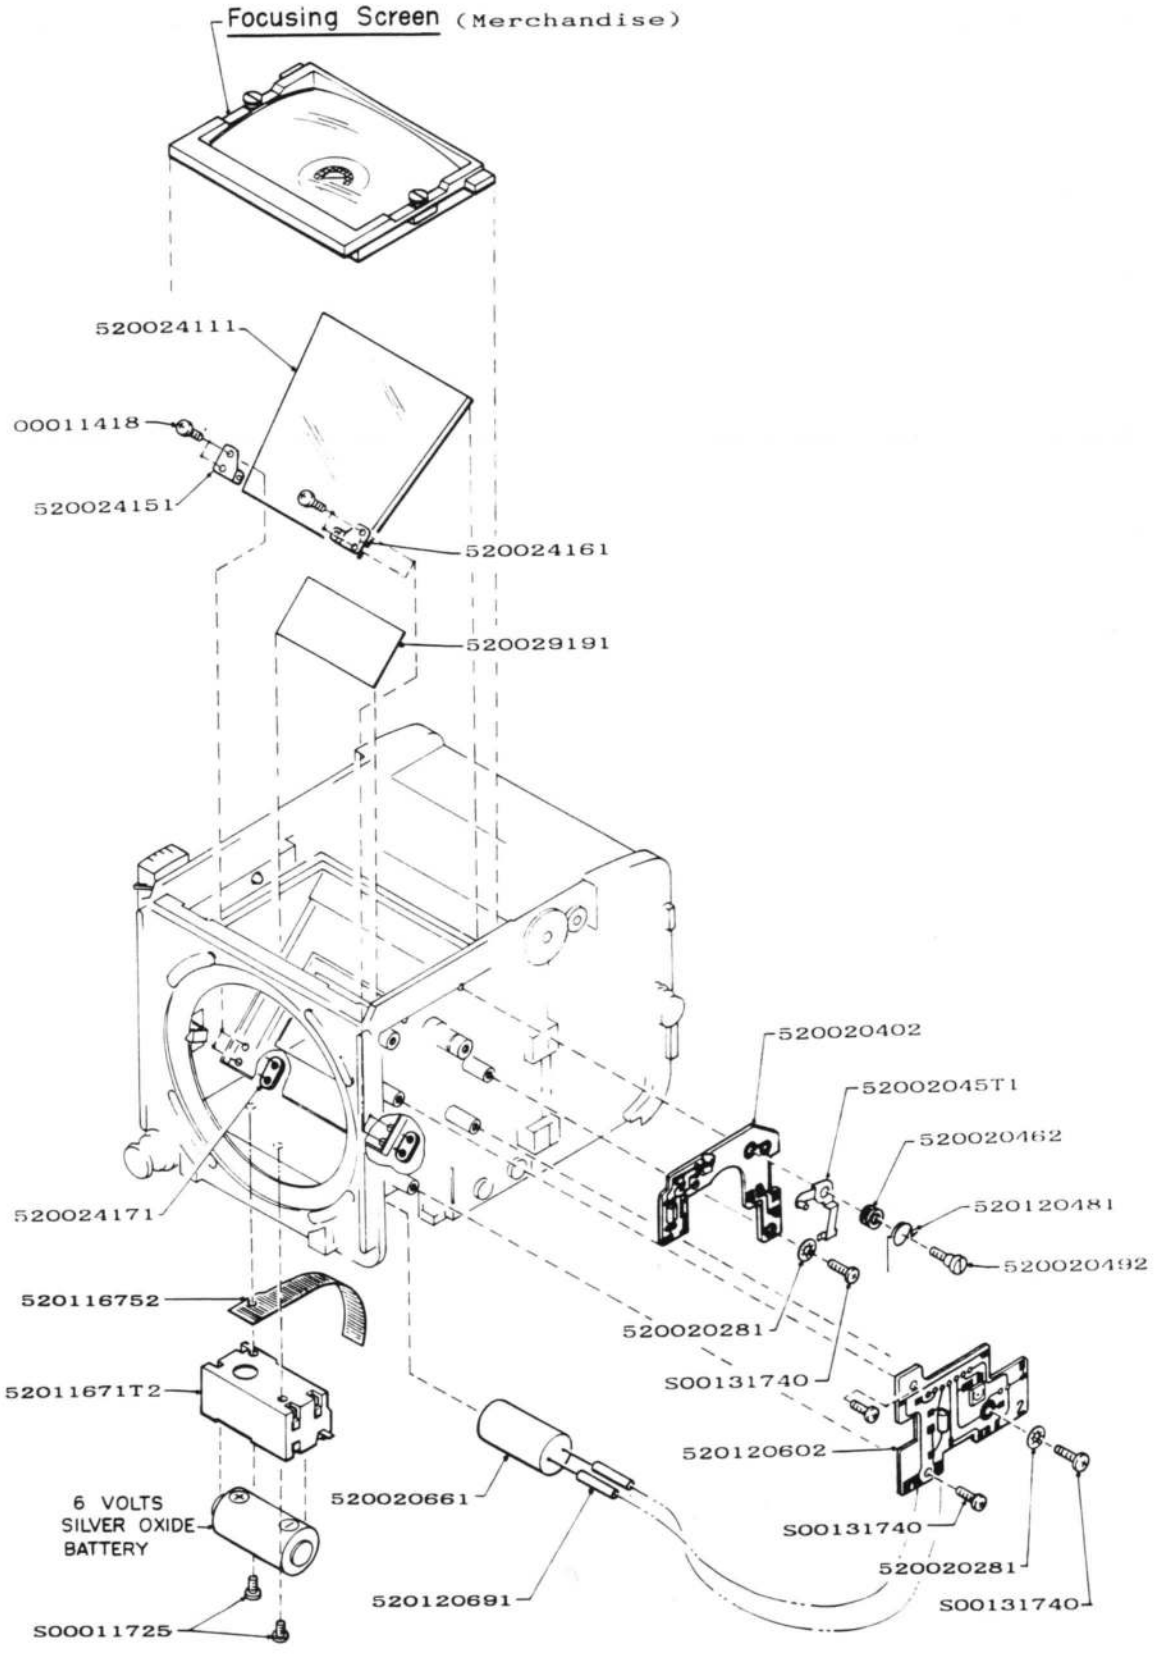
Focusing Screen (Merchandise)
520024111
00011418
520024151
520024161
520029191
520024171
520116752
52011671T2
6 VOLTS
SILVER OXIDE
BATTERY
S00011725
520020661
520120691
520020402
52002045T1
520020462
520120481
520020492
520020281
S00131740
520120602
S00131740
520020281
S00131740

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 1671T2	(SLT1671T2)	1	Battery chamber Ass'y	電池ケースAss'y
5201 16752	(SLT16752)	1	Ribbon	電池リボン
5201 20481	(SLT20481)	1	Spring	切替スイッチバネ
5201 20602	(SLT20602)	1	Shutter PC plate	T回路配線板
5201 20691	(SLT20691)	2	Vinyl tube	チューブ
5200 20281	(SLS20281)	2	Fastener	ネジアース座金
5200 20402	(SLS20402)	1	Battery check PC plate	BC基板
5200 2045T1	(SLS2045T1)	1	Switch lever	切替スイッチレバー
5200 20462	(SLS20462)	1	Hub	スイッチレバー軸
5200 20492	(SLS20492)	1	Shoulder screw	SWレバー止ネジ
5200 20661	(SLS20661)	1	MC condenser	MCコンデンサー
5200 24111	(SLS24111)	1	Mirror	ミラー
5200 24151	(SLS24151)	1	Leaf spring L	ミラー押え(左)
5200 24161	(SLS24161)	1	Leaf spring R	ミラー押え(右)
5200 24171	(SLS24171)	2	Rataining plate	ミラー座金
5200 29191	(SLS29191)	1	Paper	ミラー裏紙
00011418	(PB1.4×1.8)	4	Screw	ミラー押え止ネジ
S00011725	(PB1.7×2.5)	2	Screw	電池ケース止ネジ
S00131740	(3PB1.7×4Ni)	4	Screw	止ネジ

Remarks

M645

Body Ass'y 4

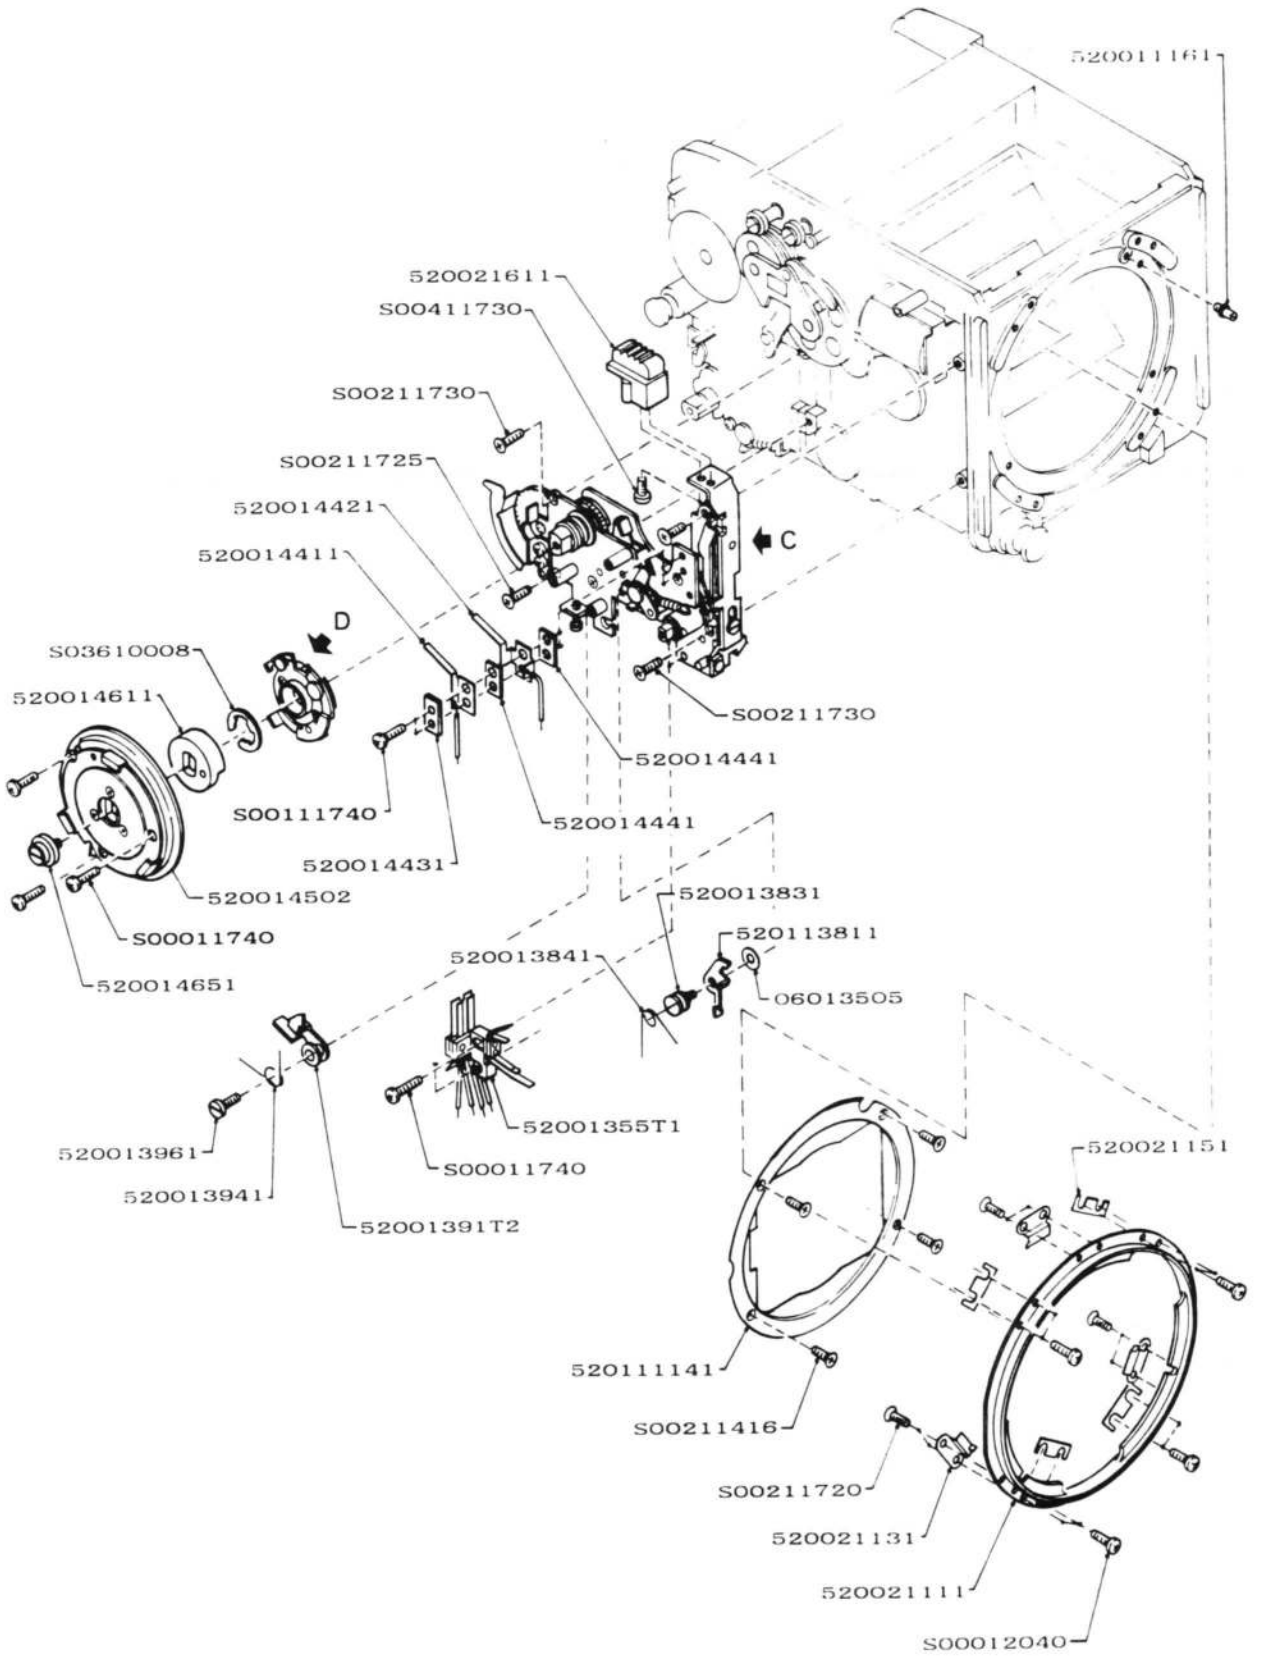

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 11161	(SLS11161)	1	Stopper pin	バヨネ回転止ピン
5200 1355T1	(SLS1355T1)	1	Main switch	トリプルスイッチ
5200 13831	(SLS13831)	1	Shoulder screw	スイッチ掛金軸
5200 13841	(SLS13841)	1	Spring	スイッチ掛金バネ
5200 1391T2	(SLS1391T2)	1	Clutch stopper	ストッパー
5200 13941	(SLS13941)	1	Spring	ストッパーバネ
5200 13961	(SLS13961)	1	Screw	ストッパー止ネジ
5200 14411	(SLS14411)	1	FP contact U	上ＦＰ接片
5200 14421	(SLS14421)	1	FP contact L	下ＦＰ接片
5200 14431	(SLS14431)	1	Insulation plate	ＦＰ接片
5200 14441	(SLS14441)	2	Insulation washer	ＦＰ接片絶縁板
5200 14502	(SLS14502)	1	Winding knob disk Ass'y	巻上上基板
5200 14611	(SLS14611)	1	Winding cam	ＭＳ巻上カム
5200 14651	(SLS14651)	1	Shoulder screw	ノブ受板止め軸
5200 21111	(SLS21111)	1	Bayonet ring	バヨネットリング
5200 21131	(SLS21131)	3	Leaf spring	バヨネバネ
5200 21151	(SLS21151)	0~4	Washer (t=0.03,0.05,0.1)	バヨネワッシャ
5200 21611	(SLS21611)	1	Shutter release button	レリーズボタン
5201 11141	(SLT11141)	1	Shading frame	バヨネ下カバー
5201 13811	(SLT13811)	1	Hook	スイッチ掛金
S00011740	(PB1.7×4)	5	Screw	止ネジ
S00012040	(PB2×4)	8	Screw	バヨネ止ネジ
S00111740	(3PB1.7×4)	2	Screw	ＦＰ接片台止ネジ
S00211416	(PD1.4×1.6)	4	Screw	カバー止ネジ
S00211720	(PD1.7×2)	6	Screw	バヨネバネ止ネジ
S00211725	(PD1.7×2.5)	1	Screw	巻上中基板止ネジ
S00211730	(PD1.7×3)	3	Screw	巻上下基板止ネジ
S00411730	(TB1.7×3)	2	Screw	Ｒボタン止ネジ
06013505	(5W2×0.5)	1	Washer	スイッチ掛金座金
S03610008	(C-8)	1	C-ring	ＭＳＩ歯車止リング

※ DETAIL C Winding Base Ass'y.....Page 16 Common use M645 1000S
※ DETAIL D MS Clutch Disk Ass'y.....Page 18 Common use M645 1000S

Remarks

M645

Body Ass'y 5

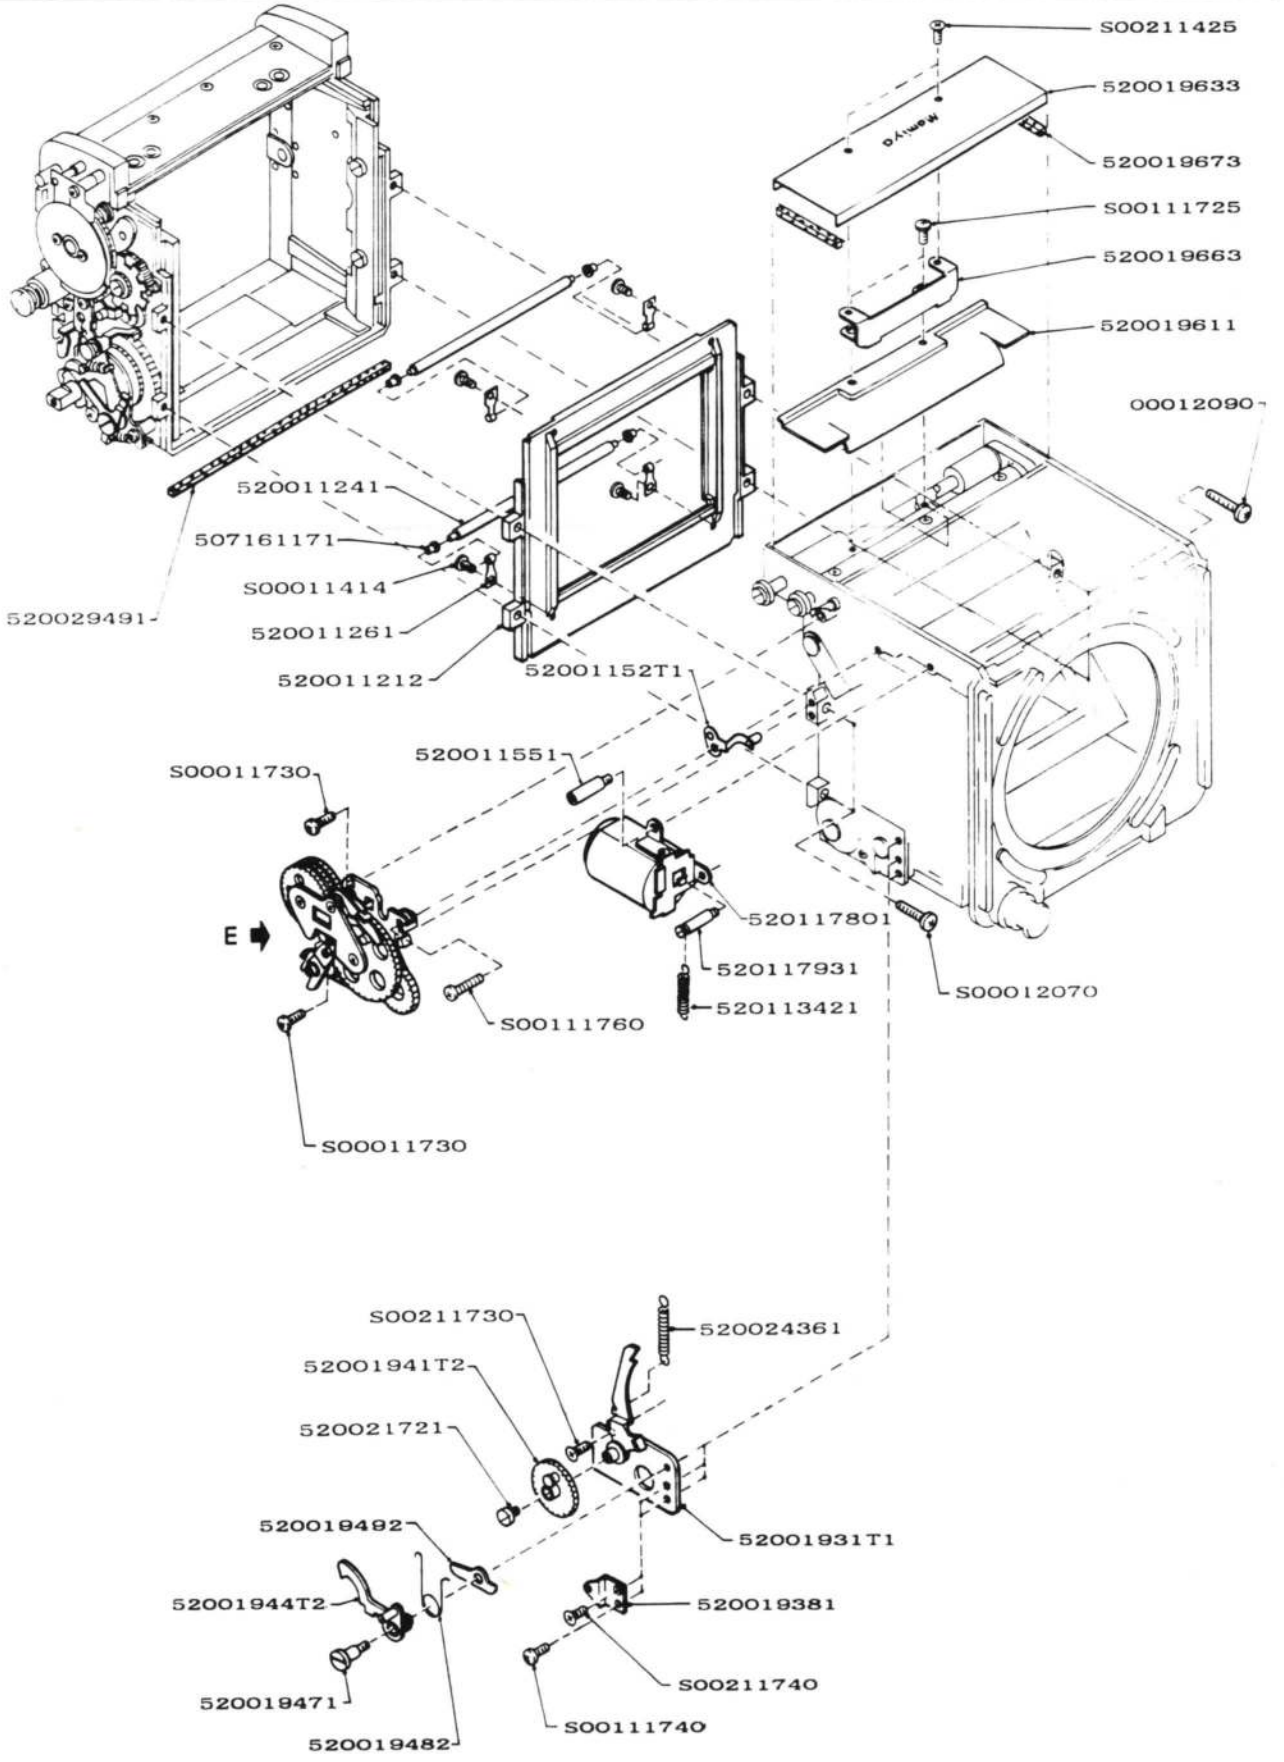

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 11212	(SLS11212)	1	Guide reil frame	レール板
5200 11241	(SLS11241)	2	Film roller	Fローラー
5200 11261	(SLS11261)	4	Leaf spring	Fローラーバネ
5200 1152T1	(SLS1152T1)	1	Leaf spring	クリックバネ
5200 11551	(SLS11551)	1	Shaft	左側板受柱
5200 1931T1	(SLS1931T1)	1	Base plate	スプリング軸左基板
5200 19381	(SLS19381)	1	Bracket	スプリング軸受板
5200 1941T2	(SLS1941T2)	1	Gear	ミラーケリ歯車
5200 1944T2	(SLS1944T2)	1	Braking lever	後幕ブレーキレバー
5200 19471	(SLS19471)	1	Shoulder screw	ブレーキレバー軸
5200 19482	(SLS19482)	1	Spring	ブレーキレバーバネ
5200 19492	(SLS19492)	1	Lever	ミラー下げレバー
5200 19611	(SLS19611)	1	Cover L	幕軸下カバー
5200 19633	(SLS19633)	1	Cover U	幕軸室カバー
5200 19663	(SLS19663)	1	Cover holcer	幕軸室カバー受
5200 19673	(SLS19673)	2	Sealing strip	幕軸室モルト
5200 21721	(SLS21721)	1	Screw	歯車止ネジ
5200 24361	(SLS24361)	1	Spring	ミラー下げバネ
5200 29491	(SLS29491)	1	Sealing strip	下カバーモルト
5201 13421	(SLT13421)	1	Spring	レリーズ板バネ
5201 17801	(SLT17801)	1	Moving coil Ass'y	MU Ass'y
5201 17931	(SLT17931)	1	Shaft	MU受ネジ
5071 61171	(ARSH6117)	4	Collar	Fローラー受
S00011414	(PB1.4×1.4)	4	Screw	Fローラーバネ止ネジ
S00011730	(PB1.7×3)	2	Screw	MS巻上基板止ネジ
S00012070	(PB2×7)	2	Screw	ボディ結合ネジ(左)
00012090	(PB2×9)	2	Screw	ボディ結合ネジ(右)
S00111725	(3PB1.7×2.5)	2	Screw	幕軸下カバー止ネジ
S00111740	(3PB1.7×4)	1	Screw	軸受板止ネジ
S00111760	(3PB1.7×6)	1	Screw	解除レバー止ネジ
S00211425	(PD1.4×2.5)	2	Screw	幕軸室止ネジ
S00211730	(PD1.7×3)	1	Screw	左基板止ネジ
S00211740	(PD1.7×4)	1	Screw	軸受板止ネジ

※ DETAIL E Charging Base Ass'y.....Page 17 Common use M645 1000S

Remarks

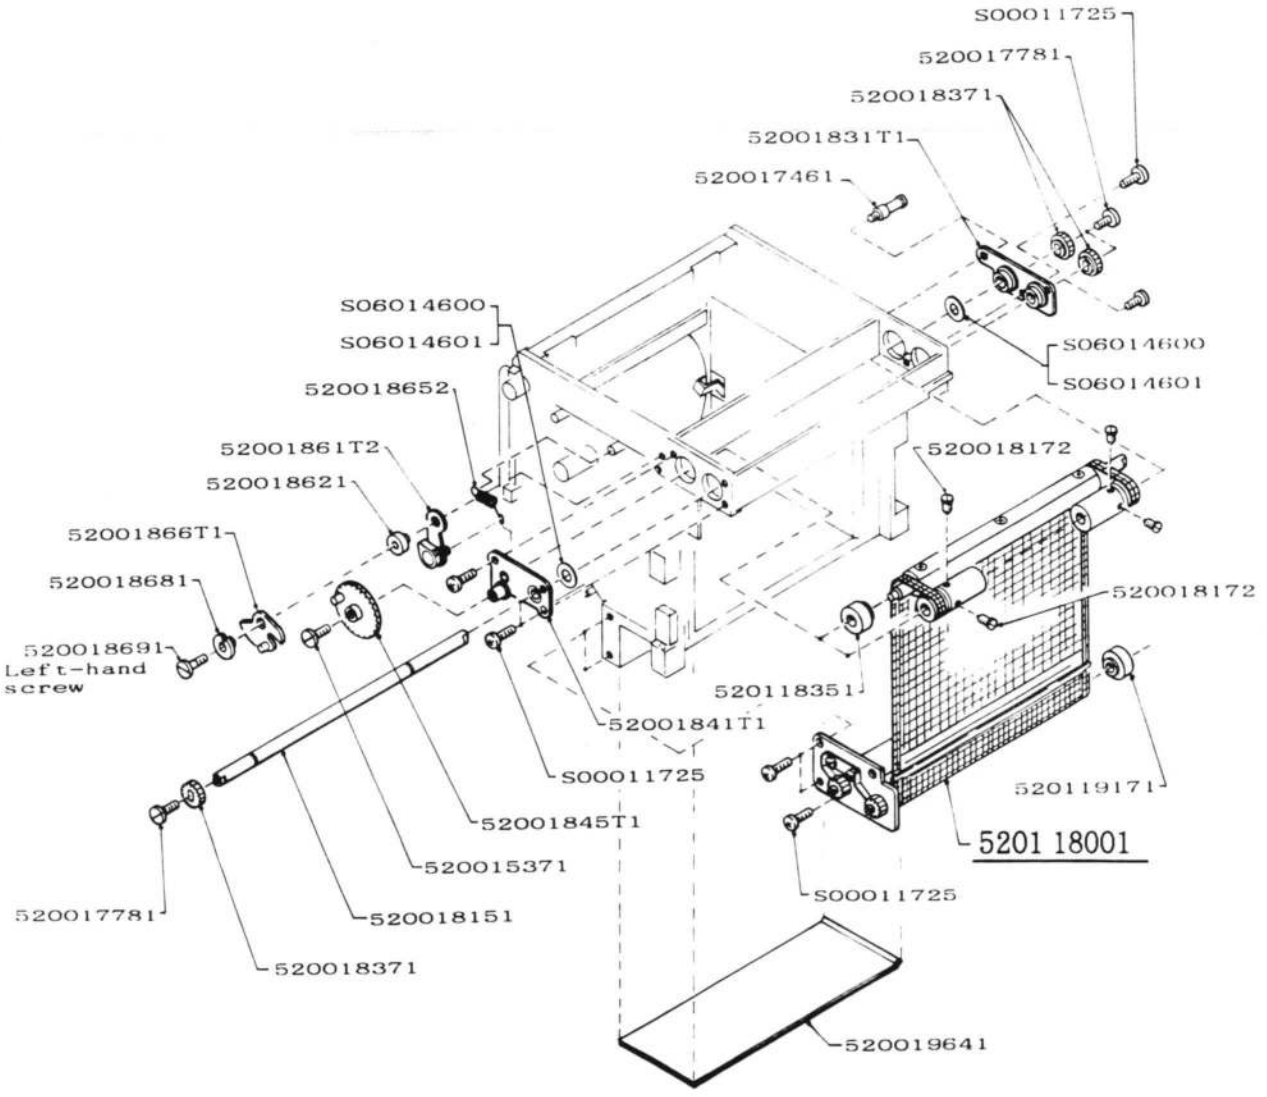
S00011725
520017781
520018371
52001831T1
520017461
S06014600
S06014601
520018652
52001861T2
520018621
52001866T1
520018681
520018691
Left-hand screw
520018172
520118351
52001841T1
S00011725
52001845T1
520015371
520018151
520017781
520018371
520119171
5201 18001
S00011725
520019641

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 18001	(SLT18001)	1	Shutter curtain Ass'y	シャッターAss'y
5201 18351	(SLT18351)	1	Pulley A	後幕軸ローラー
5201 19171	(SLT19171)	1	Pulley B	S軸ローラー
5200 15371	(SLS15371)	1	Screw	X歯車止ネジ
5200 17461	(SLS17461)	1	Anchor	SI歯車掛金バネ掛
5200 17781	(SLS17781)	3	Screw	幕軸歯車止ネジ
5200 18151	(SLS18151)	1	Shaft	先幕軸
5200 18172	(SLS18172)	4	Set screw	先幕筒止ネジ
5200 1831T1	(SLS1831T1)	1	Bushing plate	幕軸基板(左)
5200 18371	(SLS18371)	3	Gear	幕軸歯車
5200 1841T1	(SLS1841T1)	1	Bushing plate	幕軸基板(右)
5200 1845T1	(SLS1845T1)	1	X synchro gear	X歯車
5200 1861T2	(SLS1861T2)	1	Braking lever	先幕ブレーキ板(下)
5200 18621	(SLS18621)	1	Hub	先幕ブレーキ板軸
5200 18652	(SLS18652)	1	Spring	ブレーキ戻しバネ
5200 1866T1	(SLS1866T1)	1	Cam	先幕ブレーキ板(上)
5200 18681	(SLS18681)	1	Collar	先幕ブレーキカラー
5200 18691	(SLS18691)	1	Shoulder screw	ブレーキ板止ネジ
5200 19641	(SLS19641)	1	Cover	スプリング軸カバー
S00011725	(PB1.7×2.5)	8	Screw	止ネジ
S06014600	(6W2.5×0.05)	0~2	Washer	先幕軸調整ワッシャ
S06014601	(6W2.5×0.1)	0~2	Washer	先幕軸調整ワッシャ

※ 5201 18001 Shutter Curtain Ass'y.....Page 20 Common use M645 1000S

Remarks

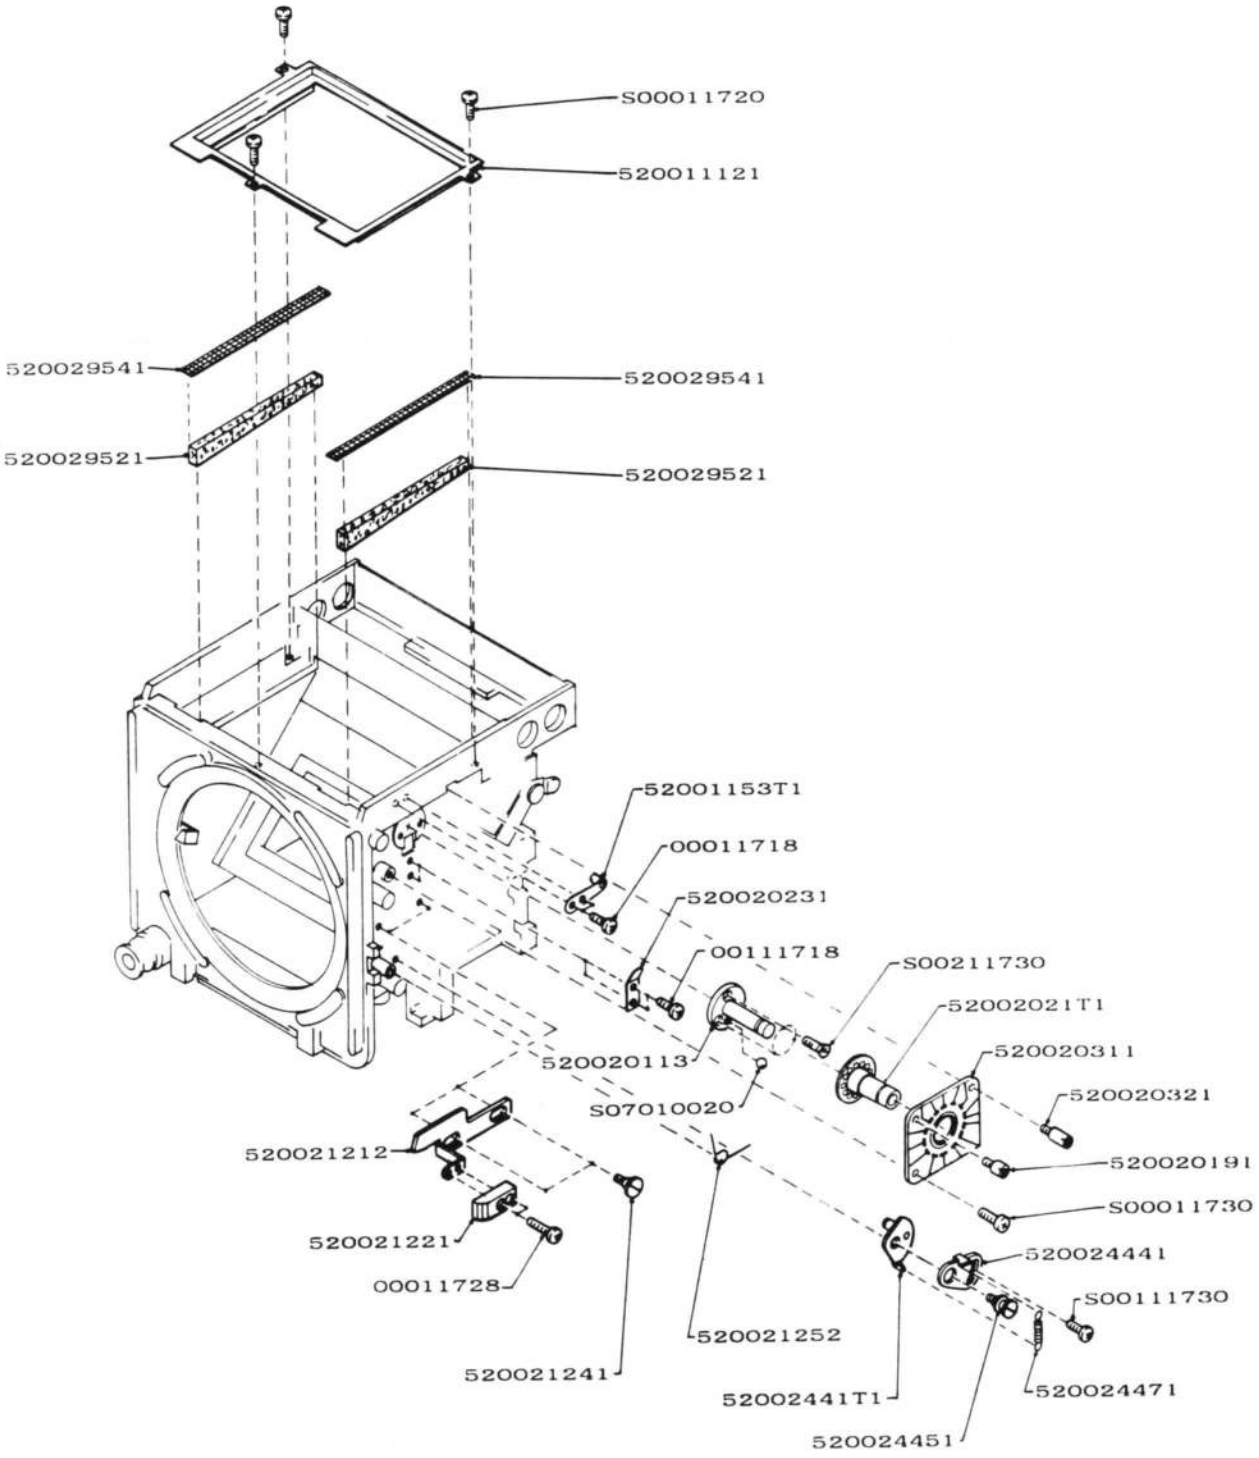
S00011720
520011121
520029541
520029541
520029521
520029521
52001153T1
00011718
520020231
00111718
S00211730
52002021T1
520020311
520020113
S07010020
520020321
520021212
520020191
S00011730
520021221
00011728
520024441
S00111730
520021241
520021252
52002441T1
520024471
520024451

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 11121	(SLS11121)	1	Frame	ボディ上カバー
5200 1153T1	(SLS1153T1)	1	Leaf spring R	枠クリックバネ(右)
5200 20113	(SLS20113)	1	Shaft	Tダイヤル軸
5200 20191	(SLS20191)	1	Shaft	Tプリント止柱
5200 2021T1	(SLS2021T1)	1	Dial click	Tクリック軸
5200 20231	(SLS20231)	1	Leaf spring	Tクリックバネ
5200 20311	(SLS20311)	1	Time PC board	Tプリント板
5200 20321	(SLS20321)	1	Shaft	Tプリント止柱
5200 21212	(SLS21212)	1	Lens release lever	L戻し止
5200 21221	(SLS21221)	1	Button	L戻し止ボタン
5200 21241	(SLS21241)	2	Guide screw	L戻し止ガイド
5200 21252	(SLS21252)	1	Spring	L戻し止バネ
5200 2441T1	(SLS2441T1)	1	Mirror stopper	ミラー角度板
5200 24441	(SLS24441)	1	Adjusting plate	ミラー角度調整板
5200 24451	(SLS24451)	1	Shoulder screw	ミラー角度調整板軸
5200 24471	(SLS24471)	1	Spring	ミラー角度調整板バネ
5200 29521	(SLS29521)	2	Sealing strip	ミラー側面モルト
5200 29541	(SLS29541)	2	Light baffle	ミラー側面遮光幕
00011718	(PB1.7×1.8)	2	Screw	クリックバネ止ネジ
S00011720	(PB1.7×2)	3	Screw	上カバー止ネジ
00011728	(PB1.7×2.8)	2	Screw	ボタン止ネジ
S00011730	(PB1.7×3)	1	Screw	Tプリント止ネジ
S00211730	(PD1.7×3)	3	Screw	Tダイヤル軸止ネジ
00111718	(3PB1.7×1.8)	2	Screw	Tクリックバネ止ネジ
S00111730	(3PB1.7×3)	1	Screw	調整板止ネジ
S07010020	(B020)	1	Steel baLL (φ2.0)	クリックボール

Remarks

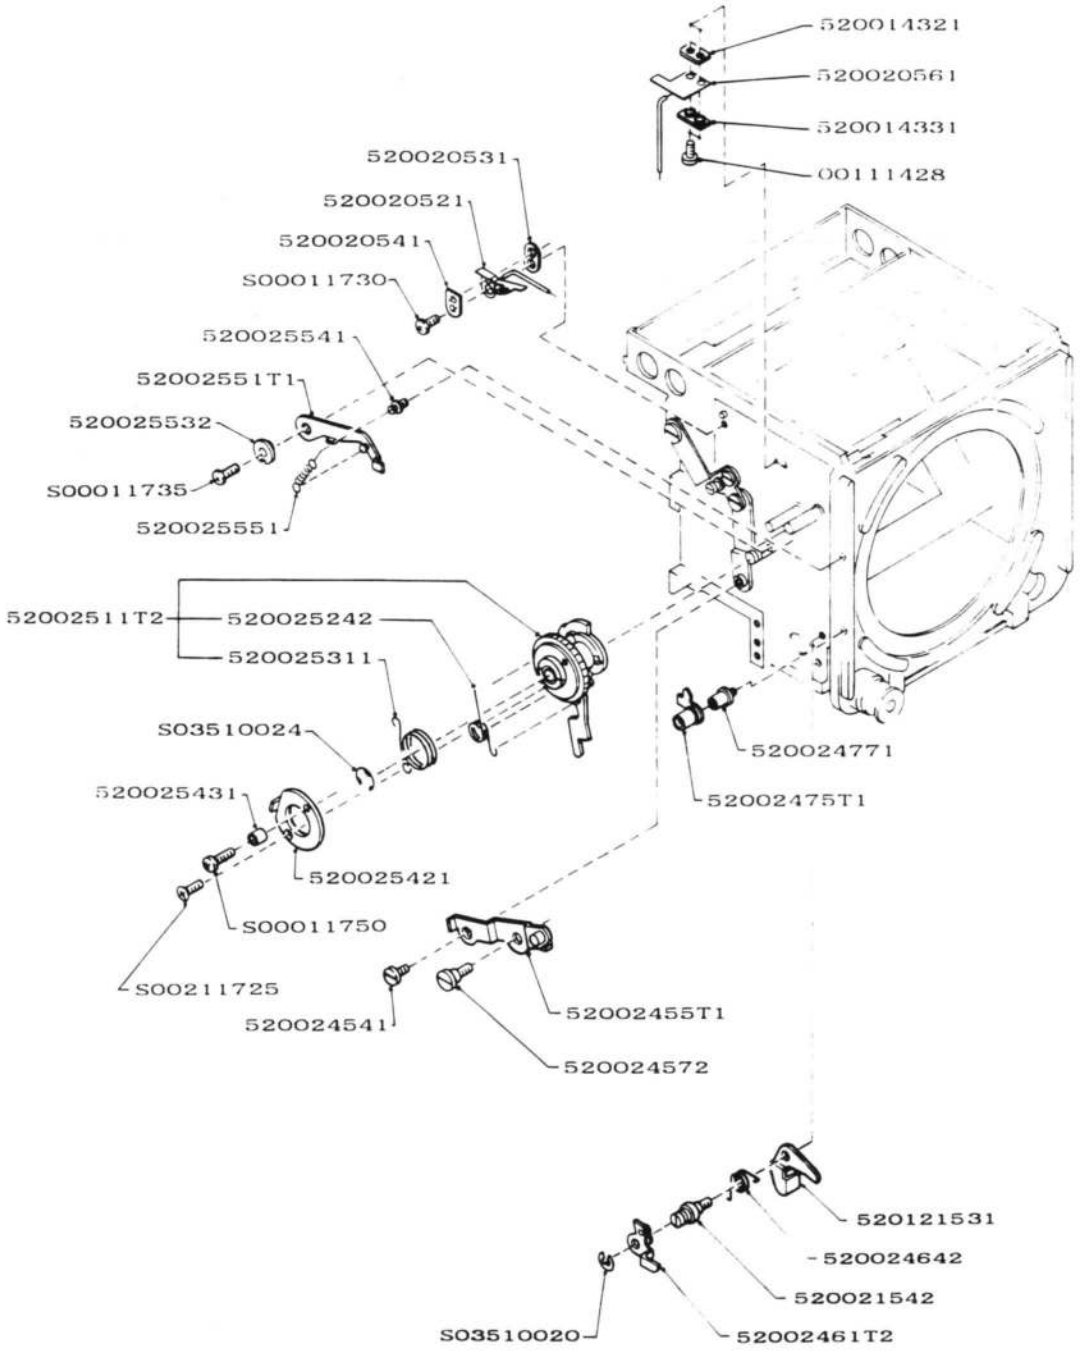
520014321
520020561
520014331
00111428
520020531
520020521
520020541
S00011730
520025541
52002551T1
520025532
S00011735
520025551
52002511T2
520025242
520025311
S03510024
520025431
520025421
S00011750
S00211725
520024541
52002455T1
520024572
520024771
52002475T1
520121531
520024642
520021542
S03510020
52002461T2

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 21531	(SLT21531)	1	C release lever	Cレリーズレバー
5200 14321	(SLS14321)	1	Insulation washer	BC極絶縁座
5200 14331	(SLS14331)	1	Insulation plate	BC極絶縁板
5200 20521	(SLS20521)	1	Leaf spring	BCボタンバネ
5200 20531	(SLS20531)	1	Insulation plate	BCボタンバネ絶縁板
5200 20541	(SLS20541)	1	Insulation holder	BCボタンバネ絶縁台
5200 20561	(SLS20561)	1	Contact plate	BC極
5200 21542	(SLS21542)	1	Shoulder screw	Cレリーズレバー軸
5200 24541	(SLS24541)	1	Screw	止ネジ
5200 2455T1	(SLS2455T1)	1	Mirror raising lever	ミラーレバー
5200 24572	(SLS24572)	1	Hub	ミラーレバー軸
5200 2461T2	(SLS2461T2)	1	Stop lever	ミラーストップレバー
5200 24642	(SLS24642)	1	Spring	ストップレバーバネ
5200 2475T1	(SLS2475T1)	1	Link lever	第2MUレバー
5200 24771	(SLS24771)	1	Shaft	第2MUレバー軸
5200 2511T2	(SLS2511T2)	1	Mirror raising crank	ミラー歯車板
5200 25242	(SLS25242)	1	Spring	ミラー止爪バネ
5200 25311	(SLS25311)	1	Spring	ミラーバネ
5200 25421	(SLS25421)	1	Disk	M3歯車板
5200 25431	(SLS25431)	1	Collar	FPスイッチピン
5200 2551T1	(SLS2551T1)	1	M release lever	ミラー歯車板掛金
5200 25532	(SLS25532)	1	Collar	ミラー歯車板掛金軸
5200 25541	(SLS25541)	1	Anchor	バネ柱
5200 25551	(SLS25551)	1	Spring	ミラー歯車板掛金バネ
S00011730	(PB1.7×3)	2	Screw	BCボタンバネ止ネジ
S00011735	(PB1.7×3.5)	1	Screw	掛金軸止ネジ
S00011750	(PB1.7×5)	1	Screw	M3歯車板ピン止ネジ
S00211725	(PD1.7×2.5)	1	Screw	M3歯車板止ネジ
00111428	(3PB1.4×2.8)	2	Screw	BC極止ネジ
S03510020	(E-20)	1	E-ring	止リング
S03510024	(E-24)	1	E-ring	M3歯車止リング

Remarks

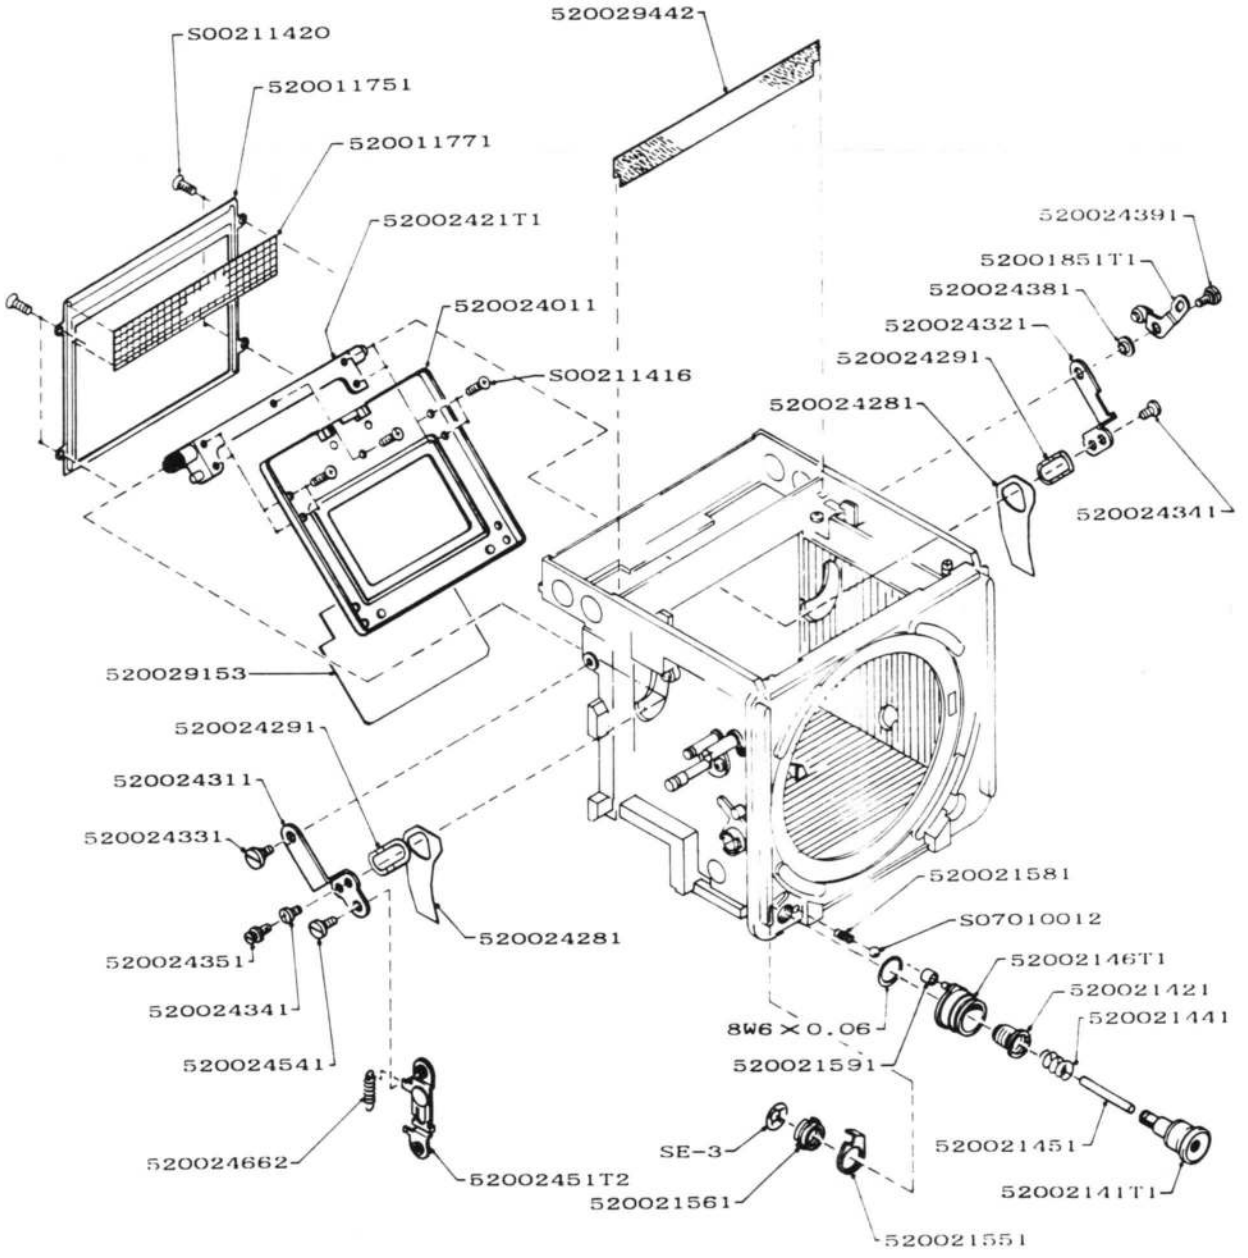
S00211420
520011751
520011771
52002421T1
520024011
S00211416
520029442
520024391
520018511T1
520024381
520024321
520024291
520024281
520024341
520029153
520024291
520024311
520024331
520024351
520024341
520024541
520024662
52002451T2
520024281
520021581
S07010012
52002146T1
520021421
520021441
8W6×0.06
520021591
520021451
52002141T1
SE-3
520021561
520021551

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 11751	(SLS11751)	1	Light baffle plate	後カバー
5200 11771	(SLS11771)	1	Light baffle	ミラー遮光幕
5200 1851T1	(SLS1851T1)	1	X Synchro lever	XSWレバー
5200 2141T1	(SLS2141T1)	1	Shutter release button	Sボタン
5200 21421	(SLS21421)	1	Button guide	Sボタンガイド
5200 21441	(SLS21441)	1	Spring	Sボタンバネ
5200 21451	(SLS21451)	1	Shutter release rod	S棒
5200 2146T1	(SLS2146T1)	1	Release lock ring	Sロックリング
5200 21551	(SLS21551)	1	Lock disk	Sロック板
5200 21561	(SLS21561)	1	Hub	Sロック板軸
5200 21581	(SLS21581)	1	Spring	クリックボールバネ
5200 21591	(SLS21591)	1	Collar	ピンカラー
5200 24011	(SLS24011)	1	Mirror holder plate	ミラーホルダー
5200 2421T1	(SLS2421T1)	1	Holder bracket	ミラーピン台
5200 24281	(SLS24281)	2	Light baffle plate	Mボディ遮光板
5200 24291	(SLS24291)	2	Spring washer	遮光板バネ
5200 24311	(SLS24311)	1	Mirror arm L	ミラーアーム(左)
5200 24321	(SLS24321)	1	Mirror arm R	ミラーアーム(右)
5200 24331	(SLS24331)	1	Shoulder screw	ミラーアーム軸
5200 24341	(SLS24341)	3	Screw (P1.7×3)	ミラーアーム止ネジ
5200 24351	(SLS24351)	1	Screw B	ミラーアーム止ネジ
5200 24381	(SLS24381)	1	Collar	ミラーアーム右カラー
5200 24391	(SLS24391)	1	Shoulder screw	ミラーアーム右軸
5200 2451T2	(SLS2451T2)	1	Coupling arm	ミラー上クランク板
5200 24541	(SLS24541)	1	Screw	クランク板止ネジ
5200 24662	(SLS24662)	1	Spring	クランク板バネ
5200 29153	(SLS29153)	1	RA Leatherette	ミラーホルダー遮光紙
5200 29442	(SLS29442)	1	Light baffle	ボディ上革
S00211416	(PD1.4×1.6)	5	Screw	ミラーピン台止ネジ
S00211420	(PD1.4×2)	4	Screw	後カバー止ネジ
8W6×0.06		1	Washer	Sロック調整ワッシャ
SE-3		1	SE-ring	Sボタン止リング
S07010012	(B012)	1	Steel ball (φ1.2)	クリックボール

Remarks

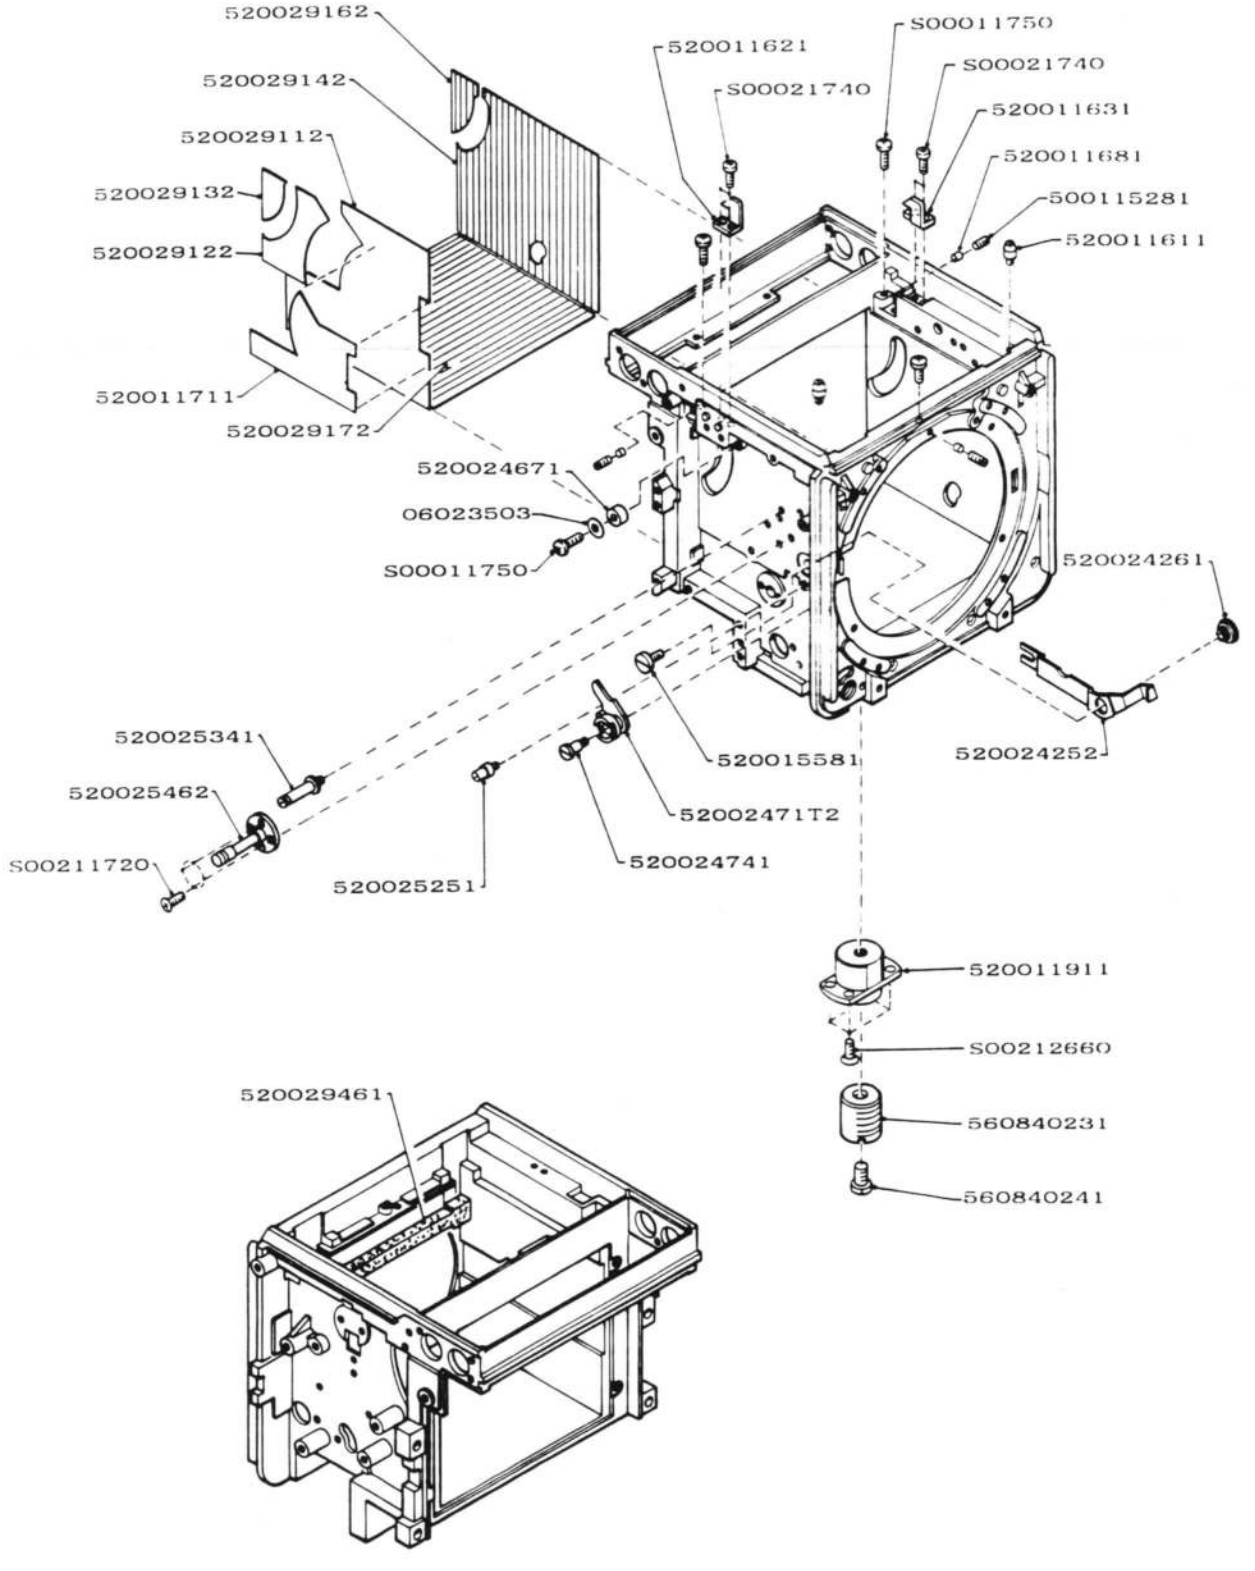
520029162
520029142
520029112
520029132
520029122
520011711
520029172
520011621
S00021740
S00011750
S00021740
520011631
520011681
S00115281
520011611
520024671
06023503
S00011750
520024261
520025341
520025462
S00211720
520025251
520015581
52002471T2
520024741
520024252
520011911
S00212660
560840231
560840241
520029461

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 11611	(SLS11611)	2	Guide screw	プリズム枠ガイド
5200 11621	(SLS11621)	1	Latch L	プリズム枠掛金(左)
5200 11631	(SLS11631)	1	Latch R	プリズム枠掛金(右)
5200 11681	(SLS11681)	3	Stopper piece	ピント調整ネジ押え
5200 11711	(SLS11711)	1	Plate	左遮光紙台板
5200 11911	(SLS11911)	1	Tripod socket	三脚止
5200 15581	(SLS15581)	1	Screw	レバー軸ネジ
5200 24252	(SLS24252)	1	Aperture coupling lever	絞り込みレバー
5200 24261	(SLS24261)	1	Hub	絞り込みレバー軸
5200 24671	(SLS24671)	1	Rubber cushion	ミラーダンパー
5200 2471T2	(SLS2471T2)	1	Mirror-up arm	MUレバー
5200 24741	(SLS24741)	1	Shaft	MUレバー軸
5200 25251	(SLS25251)	1	Guide screw	ミラー上げ爪ガイド
5200 25341	(SLS25341)	1	Shaft	ミラーバネ柱
5200 25462	(SLS25462)	1	Shaft	M3歯車軸
5200 29112	(SLS29112)	1	RA leatherette	左遮光紙(大)
5200 29122	(SLS29122)	1	RA leatherette	左遮光紙(中)
5200 29132	(SLS29132)	1	RA leatherette	左遮光紙(小)
5200 29142	(SLS29142)	1	RA leatherette	右遮光紙(大)
5200 29162	(SLS29162)	1	RA leatherette	右遮光紙(小)
5200 29172	(SLS29172)	1	RA leatherette	下遮光紙
5200 29461	(SLS29461)	1	Sealing strip	ミラーモルト
5001 15281	(ARS1528)	3	Screw	ピント調整止ネジ
5608 40231	(EFC4023)	1	Tripod socket adapter	三脚ネジ
5608 40241	(EFC4024)	1	Screw	三脚ネジ止め
S00021740	(PB1.7×4Cr)	4	Screw	掛金止ネジ
S00011750	(PB1.7×5)	4	Screw	止ネジ
S00211720	(PD1.7×2)	4	Screw	M3歯車軸止ネジ
S00212660	(PD2.6×6)	4	Screw	三脚止め止ネジ
06023503	(5W2×0.3)	1	Washer	ミラーダンパー押え

Remarks

Body Ass'y 11

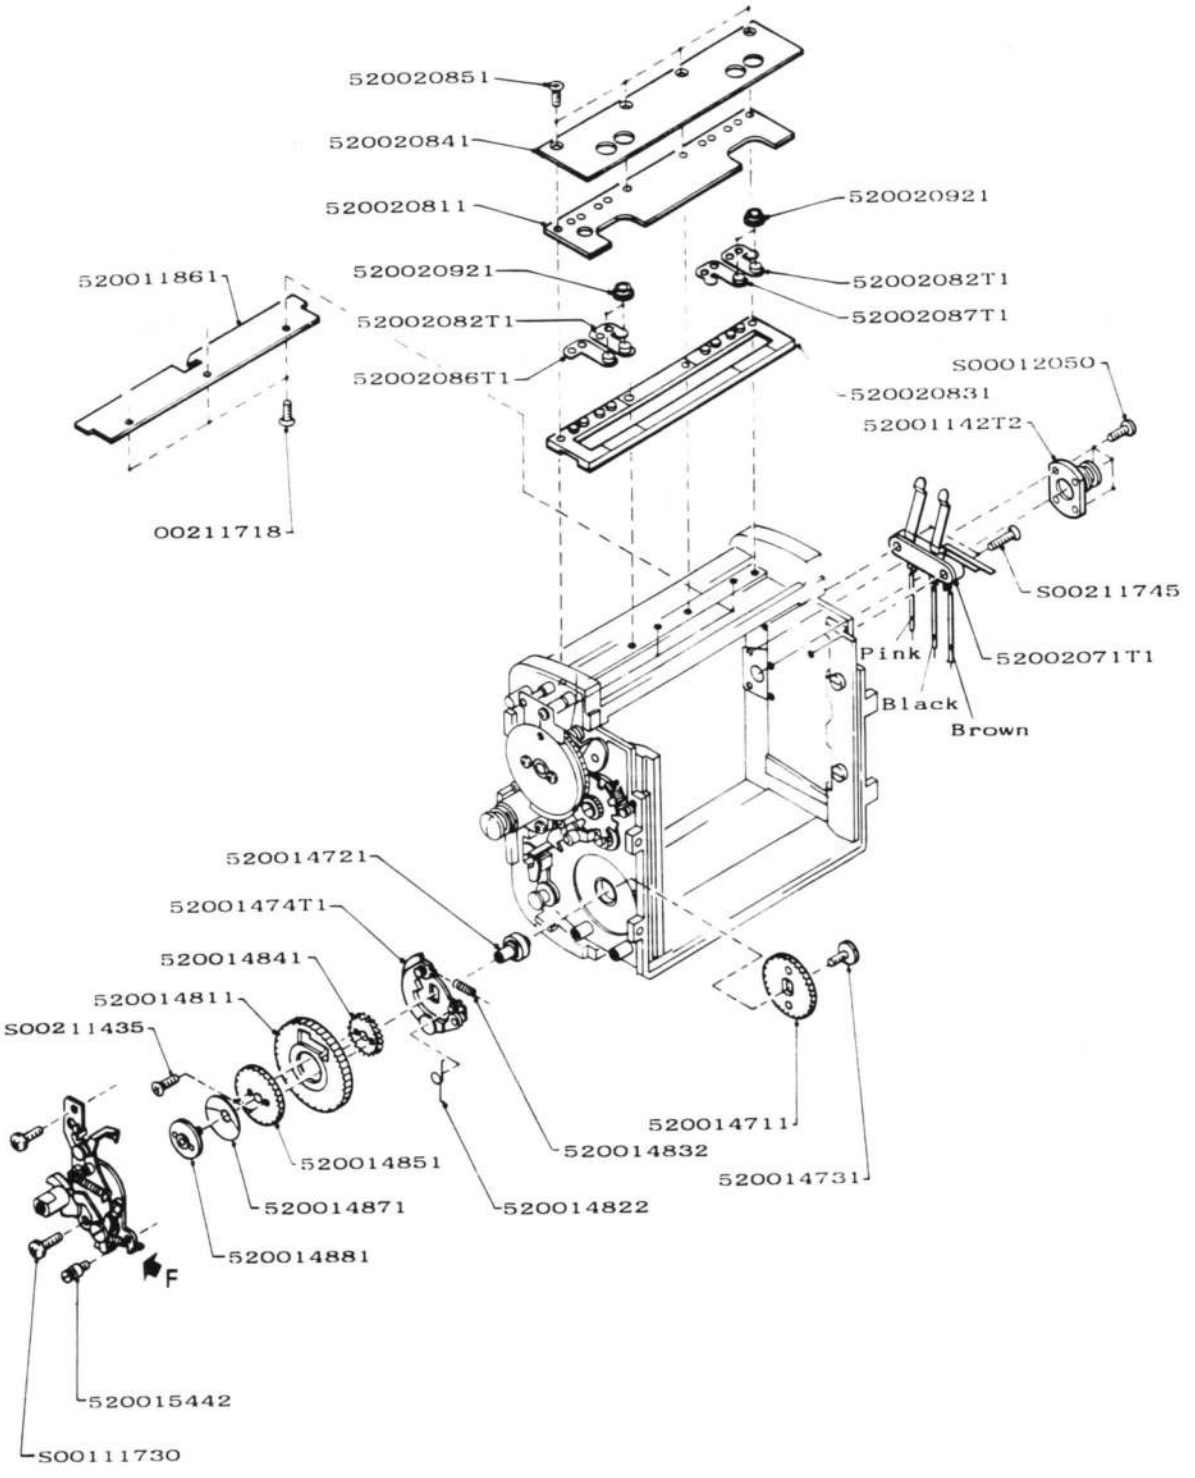
520020851
520020841
520020811
520020921
520020921
52002082T1
52002087T1
520011861
52002082T1
52002086T1
S00012050
520020831
52001142T2
00211718
S00211745
52002071T1
Pink
Black
Brown
520014721
52001474T1
520014841
520014811
S00211435
520014711
520014832
520014731
520014851
520014871
520014822
520014881
F
520015442
S00111730